

对于14760T-4 & 14761T-4
如何安装角阀

切断供水管路。将装饰罩套入进水牙管，在装饰罩背面边缘涂一圈密封油灰。在进水牙管上缠密封胶带或涂密封膏，将角阀装在供水管路上，用带状扳手拧紧，使出水口处于便于连接软管的方向。将装饰罩向后推，靠墙贴紧。去除多余油灰。

安装结果检查

检查并确保所有的衔接螺母都已拧紧，确保把手在关的位置。

打开排水器和主要供水源，检查并修理有漏水的接口。

用附带工具(23)将起泡器(22)拆下，打开水龙头的冷热水，让水流约一分钟以清除杂质，检查渗漏。冲洗起泡器，关闭水龙头后，重新装回起泡器。




更换止水垫及活塞组件

逆时针旋下止水塞(24)，然后取出止水垫(25)。更换新的止水垫。逆时针旋下活塞组件(26)，更换新的活塞组件。装回止水垫及止水塞。

清理去水弯管杂质

仅对于14760T-4 & 14761T-4

用一字螺丝刀，逆时针转动并取下去水弯管塞子(27)，将塞子连同O型圈(28)放到一边。清理积在去水弯管(18)内的杂质，重新装回O型圈及塞子。

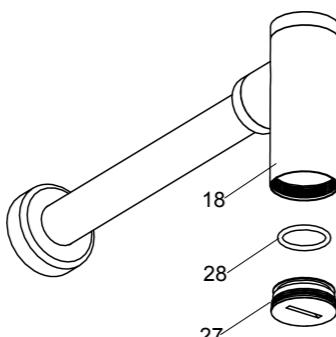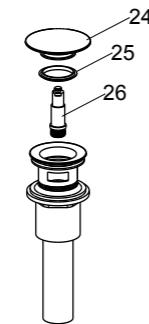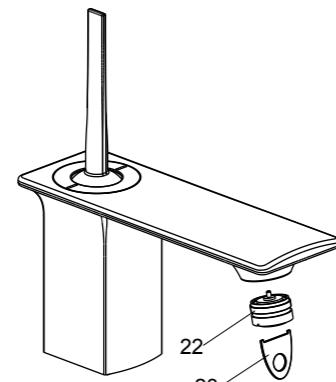

For 14760T-4 & 14761T-4
How to Install the Angle Valve

Shut off the water supply. Slide the escutcheon to the inlet shank. Apply a ring of plumbers putty around the underside of the escutcheon. Apply tape or sealant to the inlet shank and install the angle valve to the pipe. Tighten with a strap wrench. Ensure the outlet in the position to connect hose easily. Push the escutcheon against the wall. Remove any excess putty.

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight. Ensure that the handle is in the off position.

Turn on the drain and main water supply, and check for leaks. Repair as needed.

Remove the aerator(22) with the key(23) provided. Turn on faucet handle. Run hot and cold water through spout about one minute to remove any debris. Check for leaks at this time. Remove any debris from the aerator assembly. Shut off the faucet. Reinstall the aerator assembly.

Replacing the Washer and Piston Kit

Turn counterclockwise to remove the stopper(24). Take out washer(25). Replace with a new one. Turn counterclockwise to remove the piston kit(26). Replace with a new one. Reinstall stopper and washer.

Clean Debris in Bottle Trap
Only For 14760T-4 & 14761T-4

Using a flat-blade screwdriver, turn the trap plug(27) counterclockwise until fully removed from the bottle trap body. Set the trap plug with o-ring(28) aside. Clean out any debris that has collected in the bottle trap body(18). Reinstall the trap plug with the o-ring to the bottle trap body.

KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

单把/单控 Single Lever / Single Control

14760T-4 7111T-4

14761T-4 7112T-4

单孔面盆龙头

高把单孔面盆龙头

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项:

1. 一定要先彻底冲洗供水管以清除管道中的杂质。
2. 检查供水管有无损坏。如需要，进行替换。
3. 遵守当地管路安装条例。
4. 尽可能在安装面盆之前安装水龙头，落水，角阀和去水弯管。
5. 关闭主水源。
6. 角阀使用静水压力不超过1.0Mpa(10bars)，适用水温0°C~80°C。

7. 根据墙装式去水弯管安装尺寸，预置墙内排水管。排水管内径略大于Φ32mm(推荐控制在33~36mm之间)。允许略高出装修好的墙面，但不大于10mm。去水弯管的横管可伸入排水管长度不小于25mm。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage. Replace as necessary.
3. Observe local plumbing codes.
4. If possible, install this faucet, drain, angle valve and bottle trap before installing the lavatory.
5. Shut off the main water supply.
6. The static water pressure of angle valve should not exceed 1.0Mpa(10bars). The supply water temperature should be between 0°C and 80°C.
7. According to rough-in dimensions of bottle trap, drain stub-out should be prearranged in the wall. Inside diameter of the drain stub-out must be little bigger Φ32mm(recommended 33~36mm). It can extend beyond the wall, but no more than 10mm. The pipe of the bottle trap can reach into drain stub-out no less than 25mm.

使用说明

对于水龙头，开关龙头及冷热水操作如下图所示。

对于角阀，顺时针旋转手柄为关，逆时针为开。

对于弹跳式落水，可通过打压止水塞打开或关闭排水。

HANDLE OPERATION


For the faucet, operation for open and close, hot and cold water as shown below.

For the angle valve, the handle closes with one-quarter turn clockwise, opens with one-quarter turn counter-clockwise.

For the touch activated drain, press the stopper to open or close.

安装尺寸


ROUGH-IN DIMENSIONS

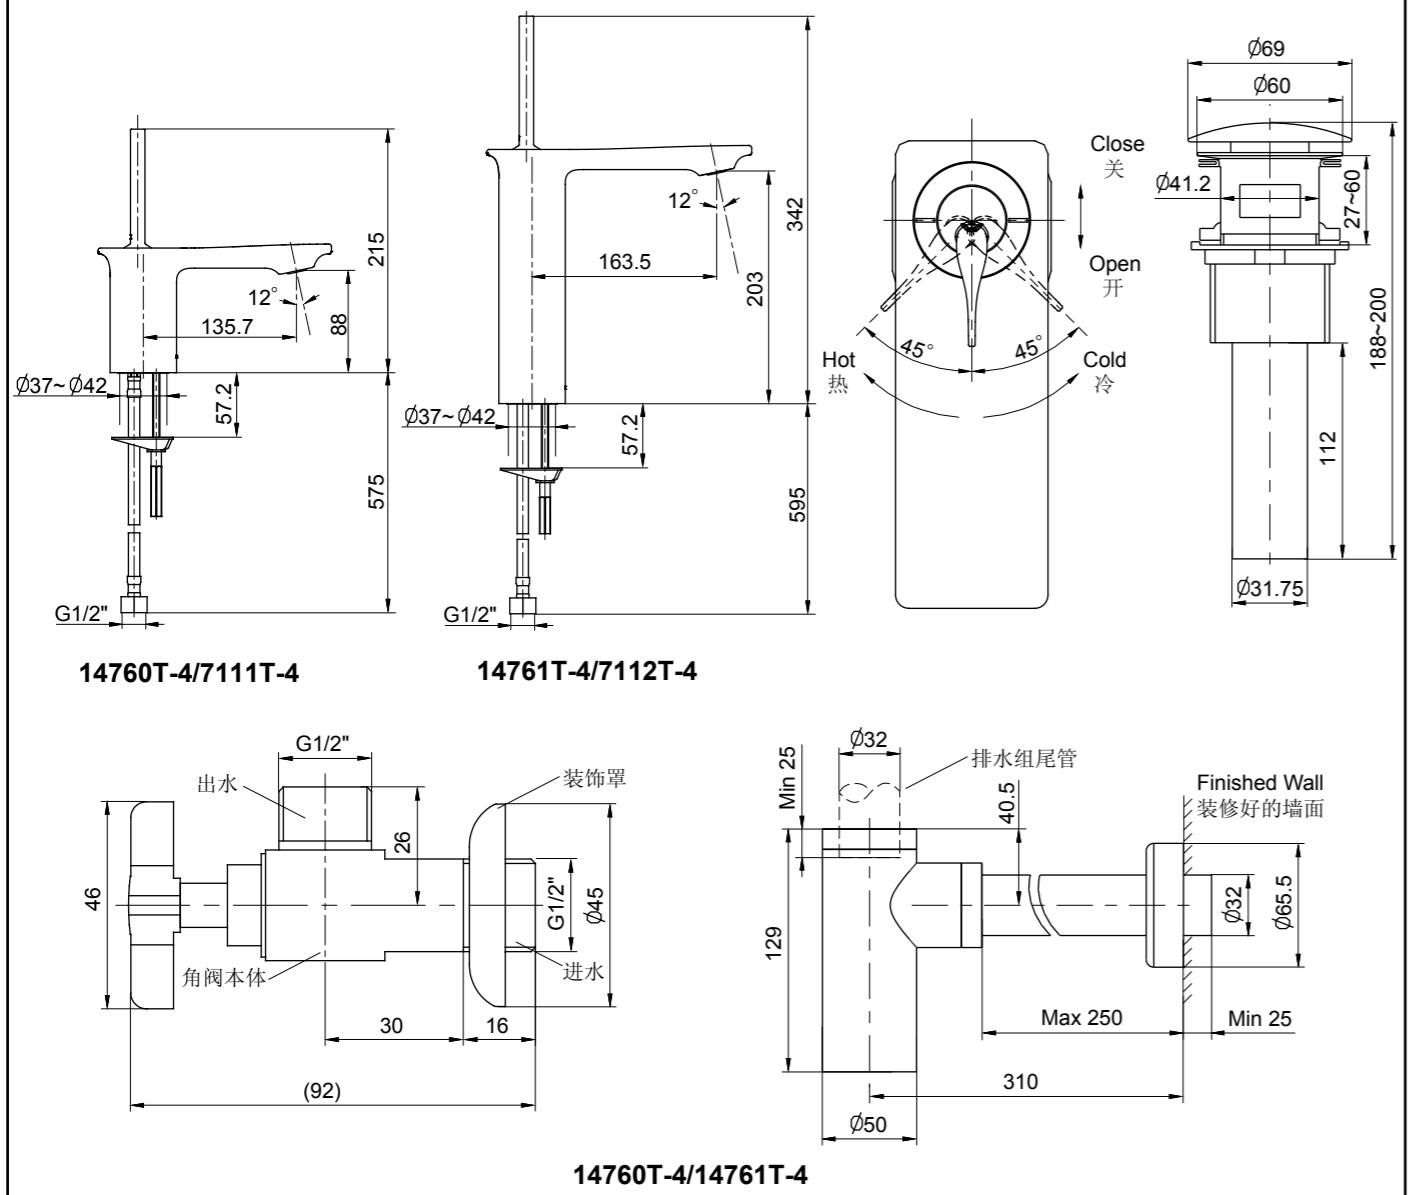

安装步骤

如何安装水龙头

将安装组件中的固定螺杆(1)装在龙头底部孔中，将垫片(2)通过软管(3)和固定螺杆放入本体(4)底部，将软管(3)和固定螺杆插入面盆的安装孔中。调整好水龙头的位置。从面盆下方依次将托架(5)、垫片(6)套在固定螺杆上，用螺母(7)锁紧，将水龙头固定。

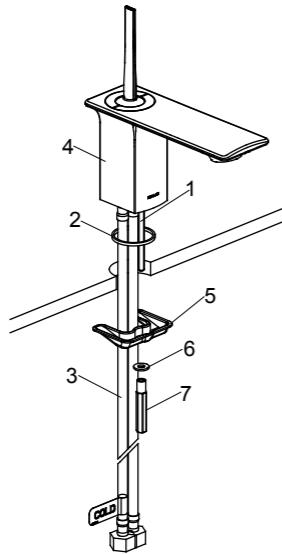

INSTALLATION


How to Install the Faucet

Screw the stud(1) to the thread hole on the bottom of faucet. Put the washer(2) into the bottom of body(4) through the flexible hoses(3) and the stud. Insert hoses(3) and stud into the hole of lavatory. Position the faucet. From underside of the lavatory, fit the bracket(5) and washer(6) on the stud. Secure the faucet by tightening nut(7).

Attach the hoses to water supplies. When facing the front of the faucet, the left hose is cold water, the right is hot water.

如何安装排水器

把锁紧螺母(8)、塑料垫片(9)和橡胶垫圈(10)从排水本体上依次取下。把排水本体从面盆上部孔插入。再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从面盆下方装回排水本体。锁紧螺母。

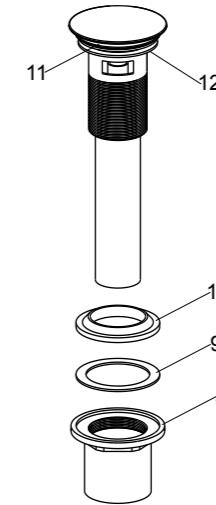

注意：如果需要，可在排水器盘片(11)底面沿周围涂一圈密封油灰或其它密封剂，而不使用橡胶垫片(12)。

在锁紧螺母拧紧后，不可调整排水本体的位置，否则会破坏油灰或密封剂密封。

How to Install the Drain


Remove the locknut(8), plastic washer(9) and the rubber gasket(10) from the drain body. Insert the drain body into the lavatory. Install the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the locknut.

NOTE: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(11), instead of using rubber washer(12).

Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal.


How to Install the Bottle Trap Only For 14760T-4 & 14761T-4

将去水弯管(18)上的进水连接螺帽(20)和O型圈(19)取下，依次将进水连接螺帽和O型圈套入排水组尾管(21)。将排水组尾管插入去水弯管进水口，保持去水弯管出水口正对排水口(13)，手动旋紧进水连接螺帽。

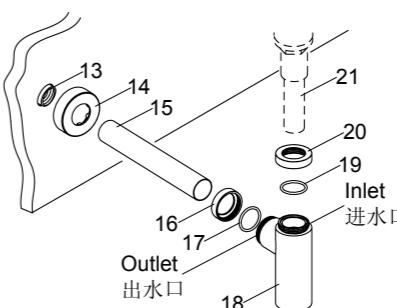

注意：确保尾管插入进水连接螺帽不少于25毫米。

将去水弯管上的出水连接螺帽(16)和O型圈(17)取下。测量去水弯管的出水口同预置排水口间的距离，根据需要在同时确保横管(15)伸入去水弯管出水口和预置排水口(13)的长度不小于25mm的基础上，可适当切除横管，但避免损坏电镀表面。依次将出水连接螺帽和O型圈套入横管一端。将装饰罩套入横管另一端。将横管同时插入去水弯管出水口和排水口。如果横管不能同时插入去水弯管出水口和排水口，则需要调节去水弯管高度。锁紧进出水连接螺母(20,16)以固定去水弯管。用油灰或合适的密封胶填充横管同排水口内径的间隙，去除多余油灰或密封胶。将装饰罩后推与墙面接触。

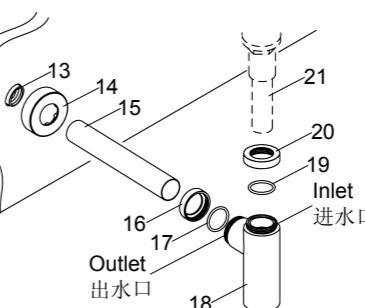

注意：确保横管插入出水口及排水口长度均不少于25毫米。

NOTE: Ensure the tailpiece must be inserted at least 25mm inside the inlet nut.

Remove the outlet nut(16) and o-ring(17) from the bottle trap. Ensure the pipe(15) insert into the drain stub-out(13) and the bottle trap outlet at least 25mm. If more, cut it off as needed. Be careful, not to damage the finish. Slide the outlet nut and o-ring to one end of pipe, and flange(14) to the other end. Insert the pipe to the bottle trap outlet and drain stub-out. If can not do so, adjust the position of bottle trap. Tighten the inlet nut(20) and outlet nut(16) to secure the bottle trap. Fill up the gap between drain stub-out and pipe with plumber putty or sealants. Remove any excess putty or sealant. Push flange against the finished wall.

NOTE: Ensure the pipe must be inserted at least 25mm inside both the outlet of bottle trap and drain stub-out.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

KOHLER®

SERVICE PARTS






零件图

恩丹
STANCE

单把/单控 Single Lever / Single Control

**14760T-4 7111T-4
14761T-4 7112T-4**

**单孔面盆龙头
高把单孔面盆龙头**

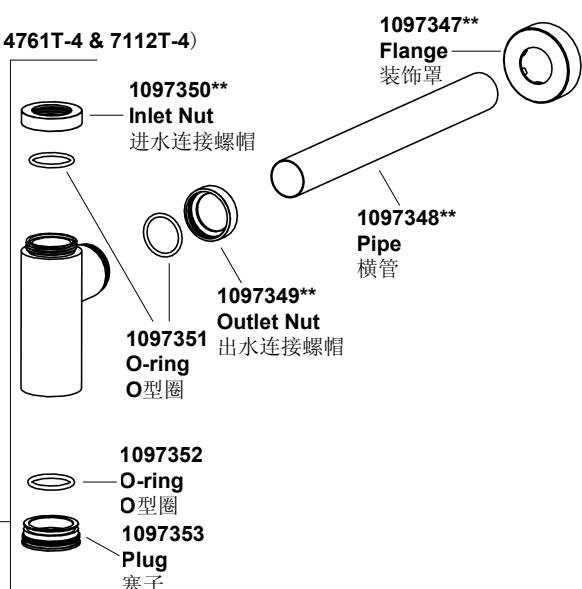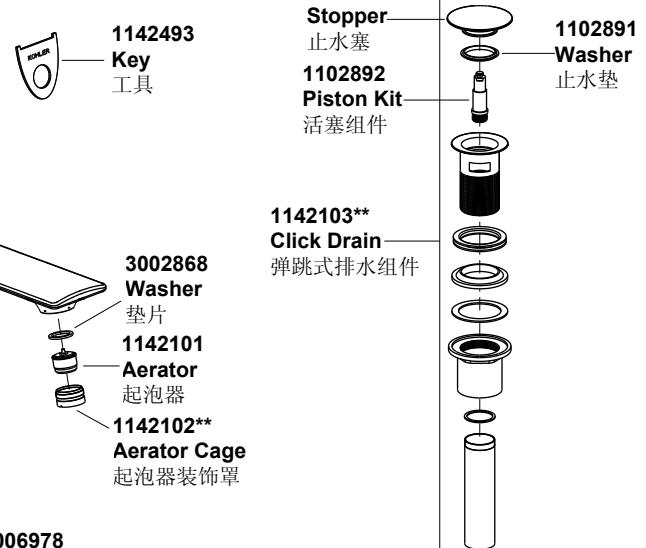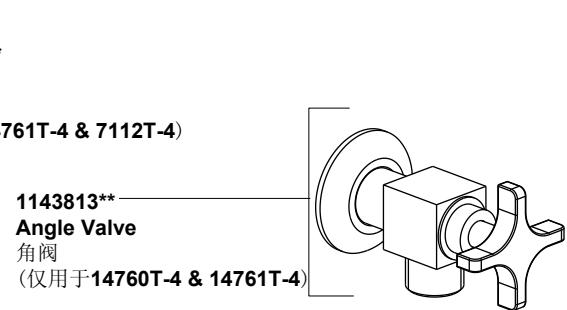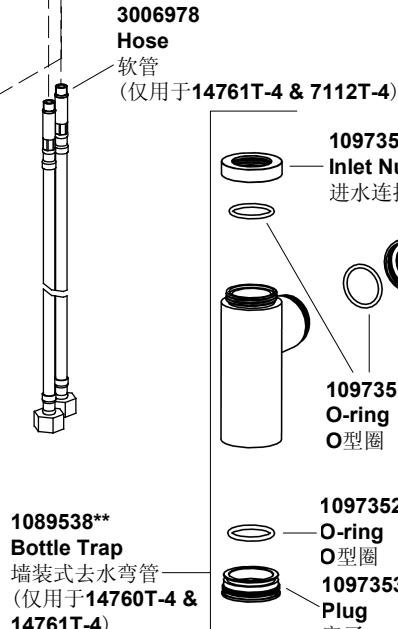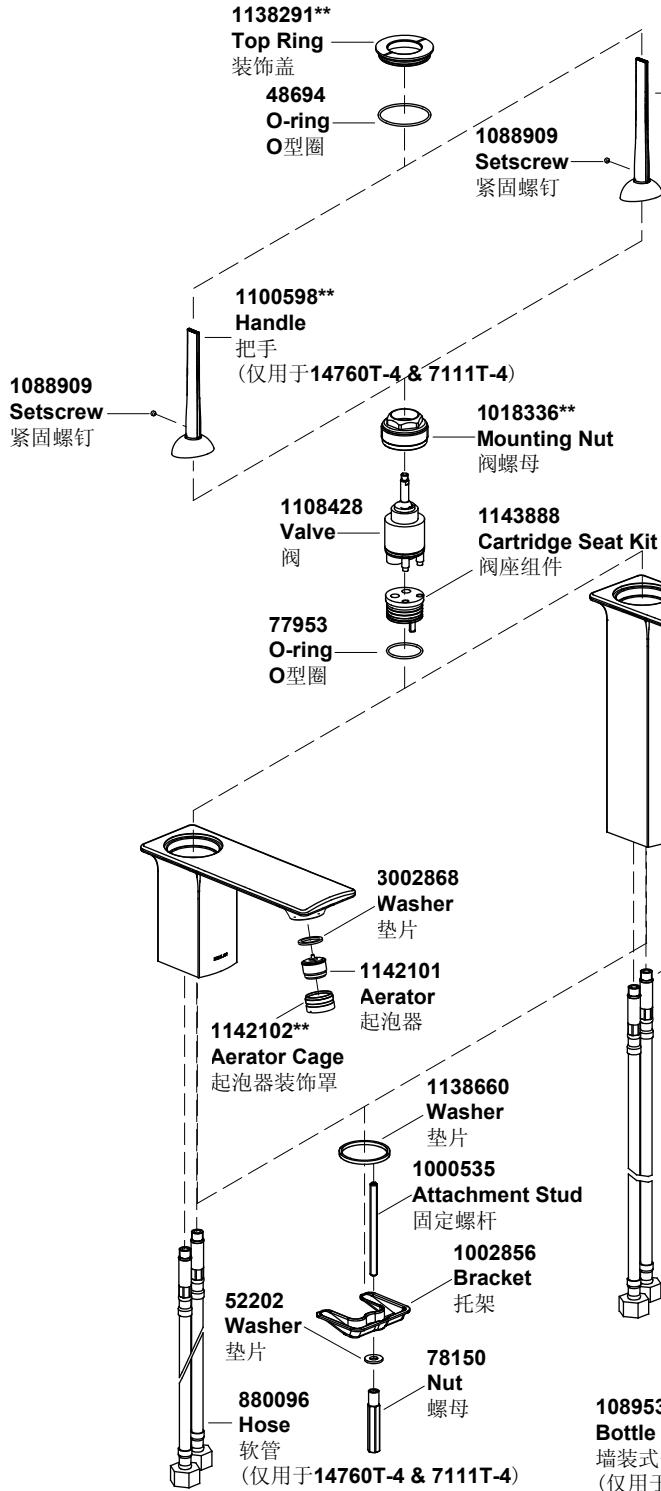

**订购时请说明颜色编号

**Color code must be specified when ordering