

## ABOUT PRODUCT

It can be used to washing the ingredients such as vegetables, fruit etc and disinfect a variety of kitchen tools. Put the sterilization water cartridge in the basket or in the sink and use conveniently, depending on the circumstance.

## 产品简介

 
本产品可用于清洗蔬菜和水果，也可用于多种厨具的消毒。可根据使用情况，将电解水发生器装于篮子或水槽中，方便使用。

## HOW TO INSTALL AND USE

1. Connect (①) the jack of sterilization water cartridge to the connector of main body.

## 安装与使用


1. 将 (①) 电解水发生器连接至主体连接口。

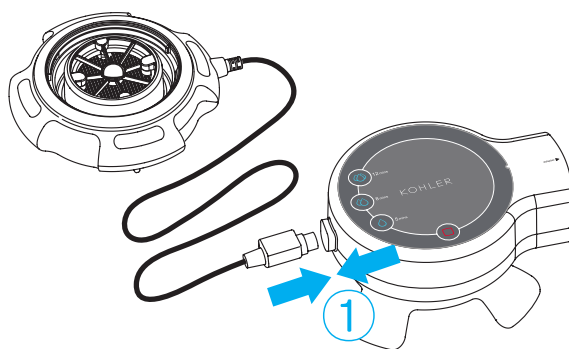

ZHUHAI KOHLER KITCHEN & BATHROOM PRODUCTS CO., LTD. NO.15, XIN QING  
LIU ROAD, JING AN TOWN, DOU MEN DISTRICT, ZHUHAI, PRC. POST CODE: 519180  
珠海科勒厨卫产品有限公司 珠海市斗门区井岸镇新青六路 15 号 邮编: 519180


2. Insert (2) the adapter to main body, and connect (3) the power cord then plug it in.

 2. 将 (2) 适配器插入到主体并连接 (3) 电源线，然后将插头插入电源。

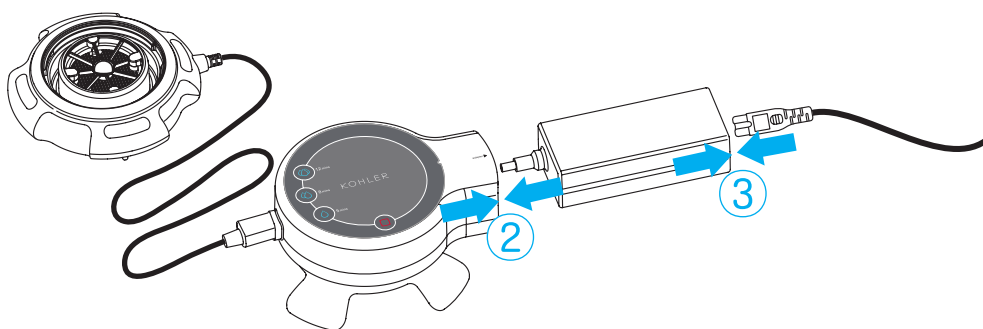

3. Combine basket with cartridge then turn on the tap.

 3. 将篮子和发生器组装到一起，然后打开水龙头。

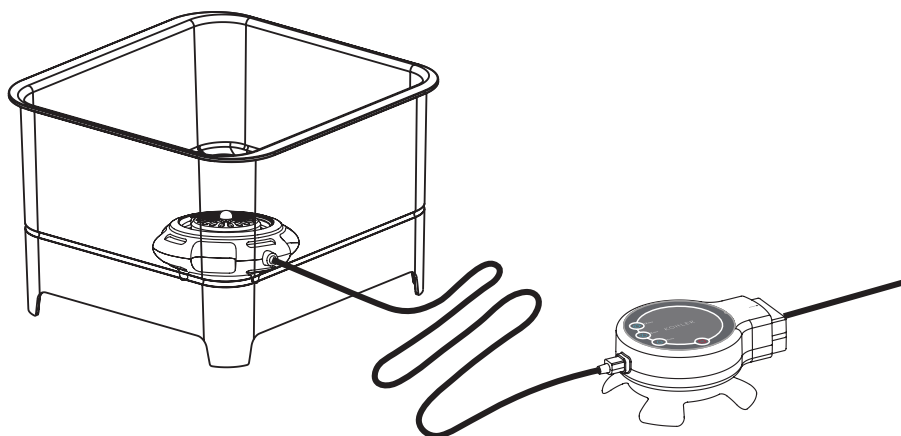





4. To use other household container or sink, fill with tap water then put the cartridge in the container or sink. (Put the cartridge on the bottom of container horizontally.)




4. 若要使用其它容器或水槽，请注入自来水并将发生器置于容器或水槽内。（保持发生器水平向上置于容器底部。）

 
5. Touch the power button lightly, then the '5 mins' lamp turned on and starts to generate sterilization water. If you touch the power button again, the operating mode moves to '8 mins' and '12 mins' whenever touched.

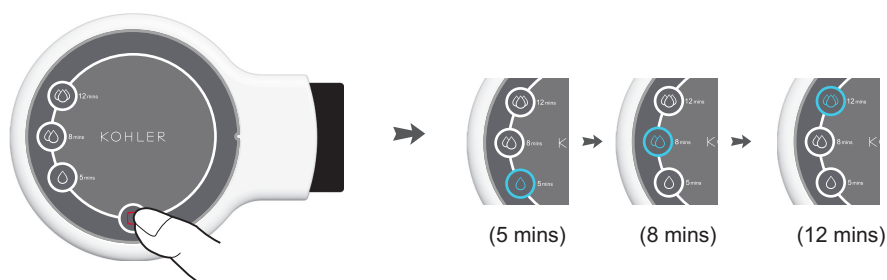5. 轻按电源开关开启“5 mins”指示灯，并开始产生电解水。无论何时如果再次按下电源开关，操作模式会变为“8 mins”和“12 mins”。



6. Select the corresponding work mode according to the water level in the basket.  
( '5 mins' mode indicates the basket contains about 2L water at waterline . '8 mins' mode indicates the basket contains about 4L water at waterline . '12 mins' mode indicates the basket contains about 6L water at waterline .)
7. Under '12 mins' mode, please use the cover to soak the items in water. Under '8 mins' mode or '5 mins' mode, please stir the items frequently to achieve better results.
8. Let the item stay in the basket for 3 minutes to make it function more completely. Then take the item out.
9. If you touch the power button in the '12 mins' mode operation, the power will be turned off.
10. If there is no water in the container, the machine may not work.
11. Do not connect or disconnect the cartridge from the main body during operation.
12. You can carry simply by combining the body and the cartridge and put it into the pouch.

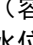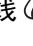 6. 根据篮子内水位所对应的刻度选择操作模式。  
(容器水位线  容量约 2L 对应 “5 mins” 模式，水位线  容量约 4L 对应 “8 mins” 模式，水位线  容量约 6L 对应 “12 mins” 模式)
7. 使用 “12 mins” 模式时，可以配套使用盖子使清洗物充分浸泡于水内，当使用 “8 mins” 或 “5 mins” 模式时，请在清洗期间不时搅拌清洗物，以达到更好的清洗效果。
8. 工作结束后静置 3 分钟，使其充分作用，再将清洗物拿出。
9. 如果在 “12 mins” 模式下按下电源开关，会关闭电源。
10. 容器内无水的情况下，机器无法工作。
11. 运行时请勿将发生器连接至主体或从主体上断开发生器。
12. 组合主体和发生器并放入袋内，方便携带。

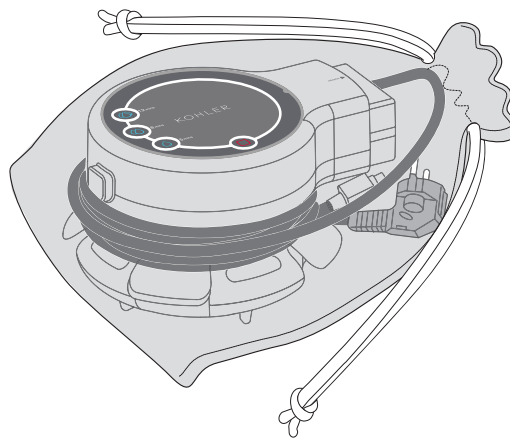

## SAFETY PRECAUTIONS

## 注意事项

If you dropped the main body in the water by mistake, immediately leave it to our service center for A/S service.

如果不慎将主体落入水中，请立即将其送至服务中心，本公司售后服务会进行处理。

- ▶ If the machine is connected to the power supply, or operated, failure or electric shock may result.

- ▶ 此时，如果机器已连接电源或处于运行状态，可能导致机器故障或人员触电。

 


Electrical outlets or wiring cannot be used over the rated current applied.

不可在超过额定电流的情况下使用插座或配线。

- ▶ If the machine is used in foreign countries with power standards different from home, it does not operate, or electric shocks or fires may occur.
- ▶ If one outlet is shared by other appliances at a time, fires may be caused by overheat.

- ▶ 如果在国外使用机器时功率标准与国内不同，机器可能无法启动，也可能导致触电和失火。
- ▶ 如果与其它设备同时使用相同插座，可能因过热导致失火。

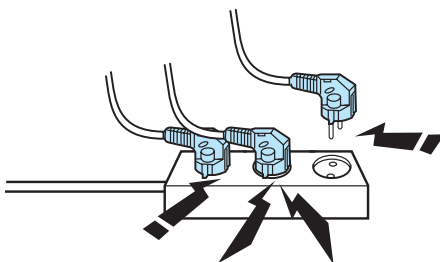

Do not pull the power cord to disconnect the machine, only holding the wire, or touch the power plug with wet hands.

断开机器连接时请勿拉扯电源线或者湿手接触电源插头，仅需轻握电源线来拉拔电源插头。

- ▶ Otherwise, it can cause loose power contacts or electric shocks.

- ▶ 否则可能导致电源接点松动或人员触电。

 


Push the power plug fully into the socket outlet.

- ▶ If the plug is loosely inserted, it can cause electric shocks or fires due to overheat.
- ▶ Do not use a defective plug, or a loose outlet.
- ▶ Do not connect the power cord arbitrarily, or fabricated. (Otherwise, it can cause fires or electric shocks.)
- ▶ Be careful that the power cord is not bent forcibly, or pressed by heavy objects that can cause damage or deformation.
- ▶ If pin and connectors in the power plug have dust or water, remove them completely. (Otherwise, it can cause fires or electric shocks.)

请将电源插头充分插入插座。

- ▶ 如果插头未充分插入，则可能因过热而导致触电或失火。
- ▶ 请勿使用不良插头或松动插座。
- ▶ 请勿随意连接电源线或改造产品。（否则可能导致失火或触电。）
- ▶ 请勿强力弯曲或以重物按压电源线，否则可能导致损坏或变形。
- ▶ 如果电源插头中的引脚和连接器有灰尘或水，请将其彻底清除。（否则可能导致失火或触电。）

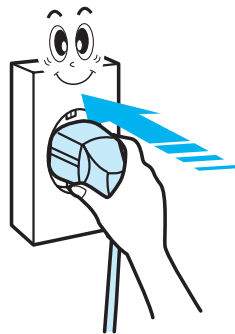


Do not use this machine at places where water tends to freeze, or it is directly exposed to heat.

- ▶ Otherwise, failures due to heat or freezing and bursting due to use in outdoor may occur.

请勿在可能结冰或高温的环境中使用本机器。

 - ▶ 否则室外使用时的过热、冰冻以及爆裂现象可能导致故障。

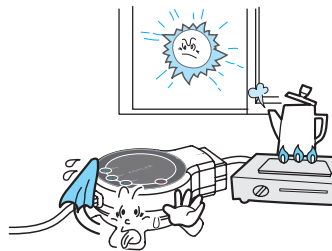


Avoid moisture, much dust, water splashes, and direct sunlight.

- ▶ Otherwise, fires and electric shocks may result.

请远离潮湿环境，避免灰尘过多、水溅和阳光直射。

 - ▶ 否则可能导致失火和触电。

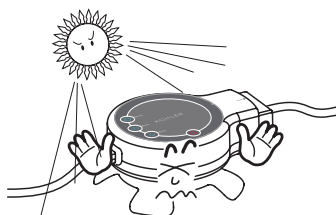


Do not install the machine on slopes nor put heavy objects on it.

- ▶ Otherwise, reduced performance and damage may occur.

请勿将机器安装于斜坡或者在机器上放置重物。

 - ▶ 否则会导致产品性能下降和损坏。

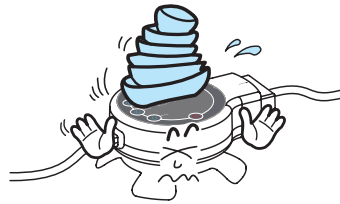


Never take it apart, or make any repair or alteration to it.

- ▶ Otherwise, fires, electric shocks and failures may result.

请勿拆分机器，或者私自维修和改装。

 - ▶ 否则可能导致失火、触电和故障。

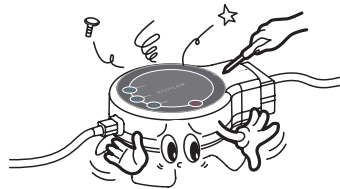

Use the tap water. Do not use the hot water. (50°C or higher)

- ▶ The purifier water decrease the ability to create sterilization water or even stop working.
- ▶ Hot water may cause the failure of product.

⚠ Remove visible dirt on the surface of items before using this product.

⚠ Clean the sterilization water cartridge periodically by soaking it with citric acid for two hours and then rinsing with clean water.

请使用自来水。请勿使用热水。（50°C 以上）

- ▶ 净化水会降低产生电解水的能力，甚至导致机器停止运转。
- ▶ 热水可能导致产品故障。

⚠ 使用本产品清洗物品前，请务必先将被清洗物表面可视脏污彻底清洗干净。

⚠ 请定期清洗电解水发生器，倒入柠檬酸浸泡约 2 小时后再用清水冲洗干净即可。