


# 依莱 ELATE

**Grooming Lavatory Faucet** 

# 38346T-8 梳洗脸盆龙头

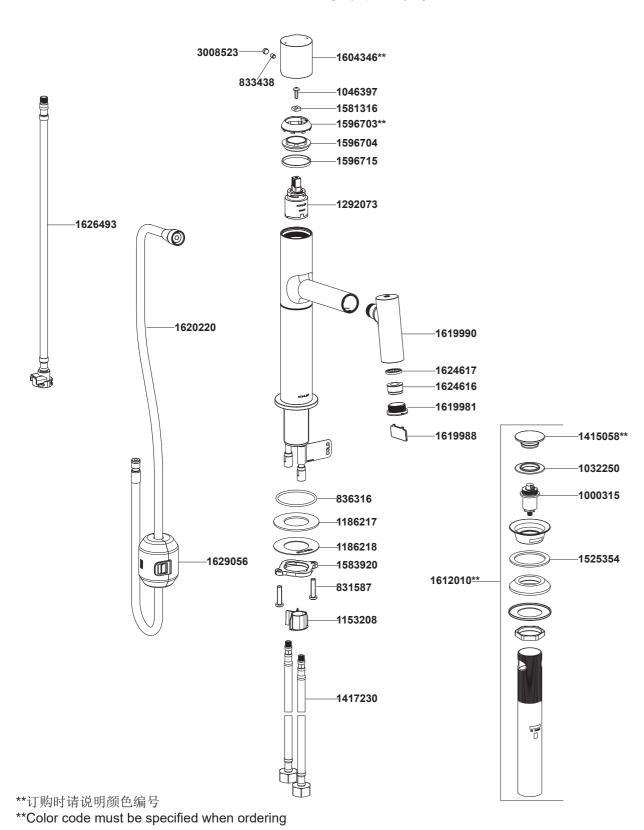

1622475-T2-A

# KOHLER® INSTALLATION INSTRUCTIONS

# 1次永 ELATE

安装说明书

**Grooming Lavatory Faucet** 

# 38346T-8 梳洗脸盆龙头

#### 安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容,请把 这些资料交给用户阅读。

#### 注意事项:

- 1.一定要先彻底冲洗供水管以清除管道中的杂质。 2.如果是安装新的脸盆,可将水龙头先装到脸盆上。
- 3.为方便安装和使用,推荐镜柜离台面的高度不低于 400mm。
- 4.推荐工作压力: 2~5bar.
- 5.喷头最高工作压力: 0.5MPa(5bar)。水压超过 0.5MPa(5bar)须安装减压阀。喷头最高工作温度及环境温度: 60°C。请特别注意喷头须远离加热器,否则可能损坏喷头及密封件,甚至对使用者造成伤害。
- 6.水嘴加施的水效标识表明本产品的水效等级等性能符合GB 25501-2019《水嘴水效限定值及水效等级》的要求,是产品符合性的一种标识。

#### **BEFORE YOU BEGIN**

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.


#### IOTES:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. For new installations, assemble the faucet to lavatory before installation.
- 3. For ease of installation and operation, it is recommended that the mirror cabinet height from the deck should be no less than 400mm.
- 4. Recommended working pressure: 2 to 5bar
- 5. The highest working pressure for sprayhead is 0.5MPa (5bar). If it exceeds 0.5MPa(5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep sprayhead away from heater, or it may become damaged and cause to injury to the user.
- 6. The water efficiency label applied to the faucet indicates that the water efficiency grade and other performance of the product meet the requirements of GB 25501-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Faucets" which is a marking of product conformity.

# 安装尺寸

1622475-T2-A

#### **ROUGH-IN DIMENSIONS**

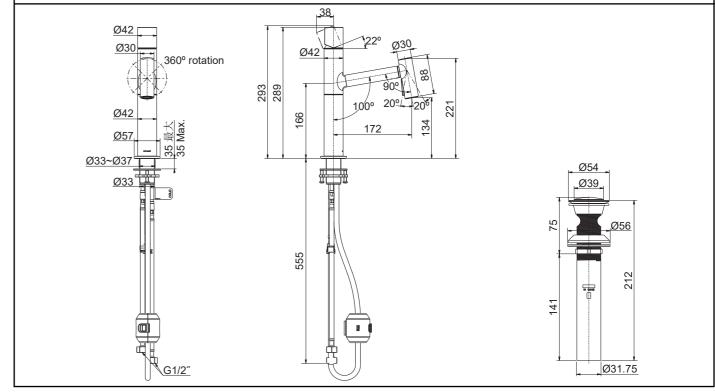

# 安装步骤

#### 如何安装水龙头

注意: 为使安装顺利,在指示需将软管(1a、1b、2、3)穿过垫片(4、5),安装环(6)和脸盆安装孔时,请按如下顺序: 进水软管(1a)、进水软管(1b)、出水软管(2)、抽拉软管(3)。

从脸盆上方将水龙头组件(7)连同软管(1a、1b、2、3)插入脸盆安装孔中,使本体底部接触台面。

确保螺钉(8)旋入安装环(6)螺钉孔。从脸盆下方分别将软管(1a、1b、2、3)依次穿过橡胶垫片(4)、垫片(5)和安装环(6),旋紧安装环到牙管(9)上直至垫片紧贴脸盆底部,确保水龙头位置正确,拧紧螺钉(8)以固定水龙头。

把进水软管(1a & 1b)接到水源上,与贴有"COLD"标签的铜管连接的软管(1a)需连接冷水,另一根没有标签的软管(1b)连接热水。

将抽拉软管(3)插入出水软管(2)。将重锤(10)装到抽拉软管上,并调整到位置 距龙头底面距离合适后扣紧。



#### How to Install the Faucet

 
**NOTE:** To easy installation, when it is indicated to put the hoses(1a, 1b, 2, 3) into the washers(4, 5), threaded ring(6), and the mounting hole of the basin. Please following below sequence: inlet hose(1a), inlet hose(1b), outlet hose(2), pull-out hose(3).

From upside, insert the faucet assembly (7) and hoses(1a, 1b, 2, 3) into the mounting hole. Ensure the body bottom is against the deck.

Pre-install the screws(8) into the screw holes of the threaded ring(6). Put the hoses(1a, 1b, 2, 3) into the rubber washer(4), washer(5) and threaded ring(6) from underside of the basin. Thread the threaded ring onto the shank(9) until the washers contact the underside of the basin. Ensure the faucet is positioned correctly. Tighten two screws(8) to secure the faucet.

Attach the hoses(1a & 1b) to water supplies. The hose(1a) with "COLD" label should be connected to cold water. The hose(1b) without label should be connected to hot water.


Insert the pull-out hose(3) into the outlet hose(2). Install the weight(10) onto the pull-out hose. Adjust the weight so that the distance is right from the faucet bottom to the weight. Tighten the weight.

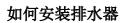

根据脸盆厚度调整锁紧螺母(10)、垫片(11)和橡胶垫圈(12)位置。把排水本体(13)从脸盆底部装入安装孔。

从脸盆上方将带有橡胶垫片(14)的排水 器盘片(15)旋紧到排水本体上,拧紧活 塞组件(16)。最后旋紧锁紧螺母(10)。

**注意:** 如果需要,可直接在排水器盘片(15)底面沿周围涂一圈密封油灰或其他密封剂,而不使用橡胶垫片(14)。

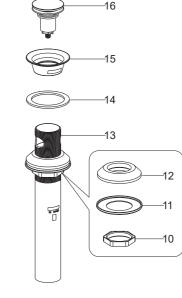

#### How to Install the Drain

Adjust the position of the locknut(10), washer(11) and rubber gasket(12) as per the thickness of the lavatory. From underside of the lavatory, insert the drain body(13) into the lavatory.

From upside of the lavatory, screw the flange(15) with the rubber washer(14) onto the drain body. Tighten the piston kit(16). Tighten the locknut(10).


**NOTE:** If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(15), instead of using rubber washer(14).

### 安装结果检查

检查并确保所有衔接螺母都已拧紧, 确保把手在关闭位置。

打开排水器和主要供水源,检查是否 有漏水。如有漏水,修理之。

将喷头(17)拆下,打开水龙头冷热水,让水流出约一分钟以清除杂质。用工具(18)拆下起泡器组件(19)并冲洗。关闭水龙头,重新装回起泡器组件和喷头。

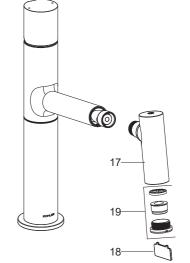

#### INSTALLATION CHECKOUT

Ensure that all connections are tighten. Ensure the handle is in the off position.

Turn on the drain and main water supply, and check for leaks. Repair as needed.

Remove the sprayhead(17). Run hot and cold water for about one minute to remove any debris. Remove the aerator kit(19) with tool(18) and flush it. Shut off the faucet. Reinstall the aerator kit and sprayhead.


#### 如何清理排水器

逆时针旋下活塞组件(16),取出并清理 止水垫(20)。

重新装回止水垫和活塞组件。

#### 如何更换止水垫

逆时针旋下活塞组件(16),取出止水垫 (20),更换新的止水垫。

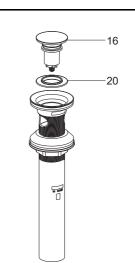

#### **How to Clear the Drain**

Turn counter-clockwise to remove the piston kit(16). Take out and clear the washer(20).

Reinstall the washer and piston kit.

#### **How to Replace the Washer**

Turn counter-clockwise to remove the piston kit(16). Take out the washer(20). Replace with a new washer.

# 使用说明

将把手轻轻提起,顺时针旋转为热水,逆时针旋转为冷水。

#### **OPERATION INSTRUCTION**

Lift the handle gently. Turn clockwise for hot water, turn counter-clockwise for cold water.

# 清洗说明

适用于所有加工处理过的表面:以中性肥皂水清洗镀层表面,再以干净的软布彻底擦干整个表面,许多清洁剂,比如氨水、去污粉及洁厕灵等,会对电镀表面造成伤害,切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的 水龙头及其配件上。

#### **CLEANING INSTRUCTIONS**

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

1622475-T2-A **2** 1622475-T2-A **3**