


36008T-9 入墙式恒温浴缸花洒阀芯及面板 - 灵控方形

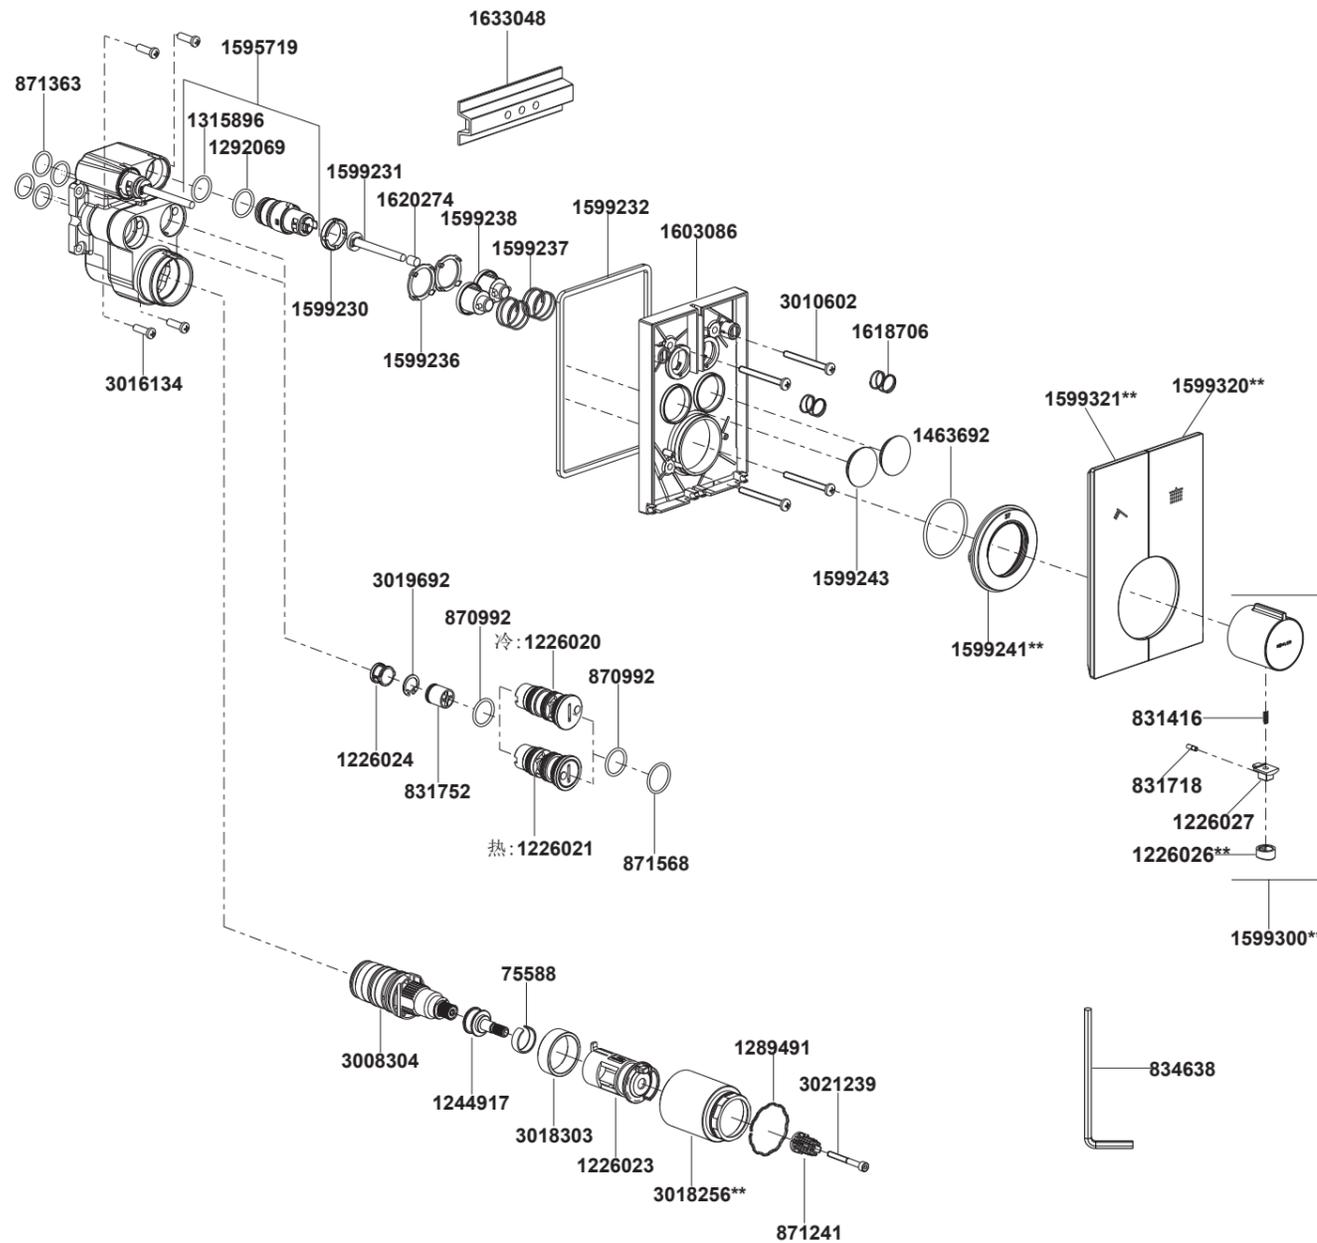

**订购时请说明颜色编号

**Color code must be specified when ordering

36007T-9 入墙式恒温浴缸花洒阀芯及面板 - 灵控圆形 36008T-9 入墙式恒温浴缸花洒阀芯及面板 - 灵控方形

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项：

1. 一定要先彻底冲洗供水管以清除管道中的杂质。
2. 检查供水管有无损坏和漏水。如需要，进行替换和维修。
3. 遵守当地管路安装条例。切断主供水源。
4. 埋墙前测试安装连接部位是否有渗漏，根据需要修理之。
5. 本产品只接受水压测试，且测试前需先排空管路龙头之间的空气。测试水压不超过0.8MPa，时间不超过30分钟。

使用环境

1. 最小供水压力：0.1MPa(1bar)。
2. 推荐冷热供水压力：0.3MPa(3bar)。
3. 如果供水压力大于0.5MPa(5bar)，安装减压阀。
4. 冷热供水的压力差不大于0.2MPa(2bar)。
5. 热供水温度最低：50°C；最高：70°C。
6. 推荐的热供水温度：60°C。
7. 温度调整的基本范围为：20°C到49°C。
8. 安全限位温度：37°C

使用说明

慢慢旋转温控把手即下把手来调整温度。安全限位温度为37°C。如果想得到更高的温度，按着把手上的按钮同时旋转把手调整。

按压左右面板可开启/关闭相关水路。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.

NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
3. Observe local plumbing codes. Shut off the main water supply.
4. Check for leaks before covering the pipes, repair as needed.
5. Please ensure only apply water pressure test on the product, and empty the air in pipe and faucet thoroughly before the test. Please ensure test pressure below 0.8MPa and test duration within 30 minutes.


OPERATION CONDITION

1. Minimum supply pressures: 1bar.
2. Recommended supply pressures: 3bar on hot and cold water.
3. If supply pressure higher than 5bar: install a pressure reducer.
4. Pressure difference between hot and cold supply: 2bar maximum.
5. Hot supply water temperatures, minimum: 50°C, maximum: 70°C.
6. Recommended hot supply water temperature: 60°C (energy-saving).
7. Setting range, approximately: 20°C to 49°C.
8. Safety stop at: 37°C.


OPERATION INSTRUCTION

The temperature is set by slowly turning the temperature handle(lower handle). For safety reasons, there is a stop limits temperature to 37°C. To get a higher temperature, push the button and continue turning the temperature handle.

Turn on/off the relevant water ways by pressing the left and right faceplate.

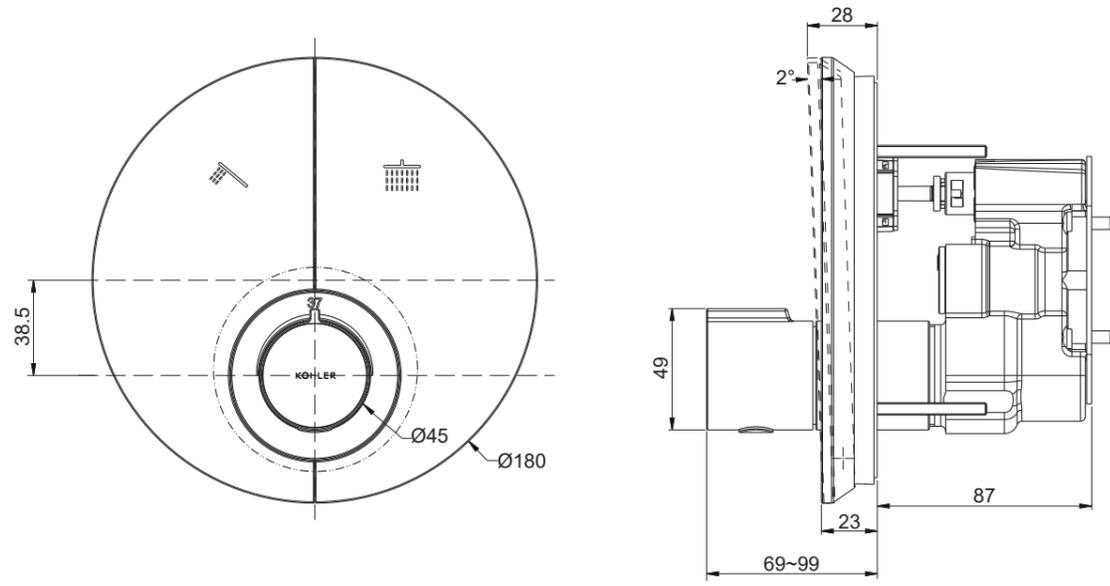


36007T-9

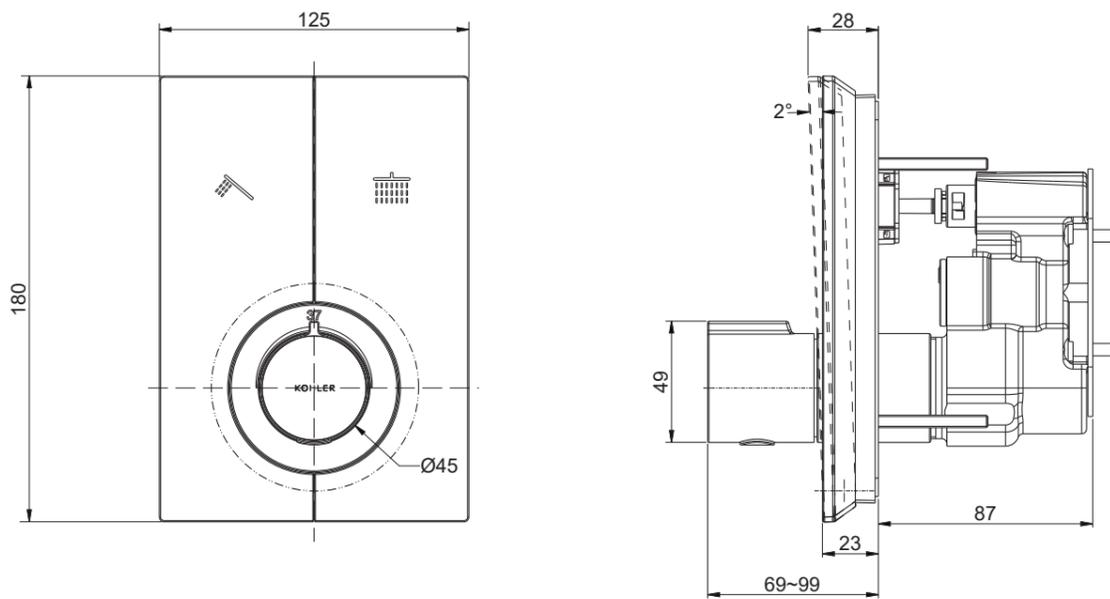


36008T-9

36007T-9 入墙式恒温浴缸花洒阀芯及面板 - 灵控圆形

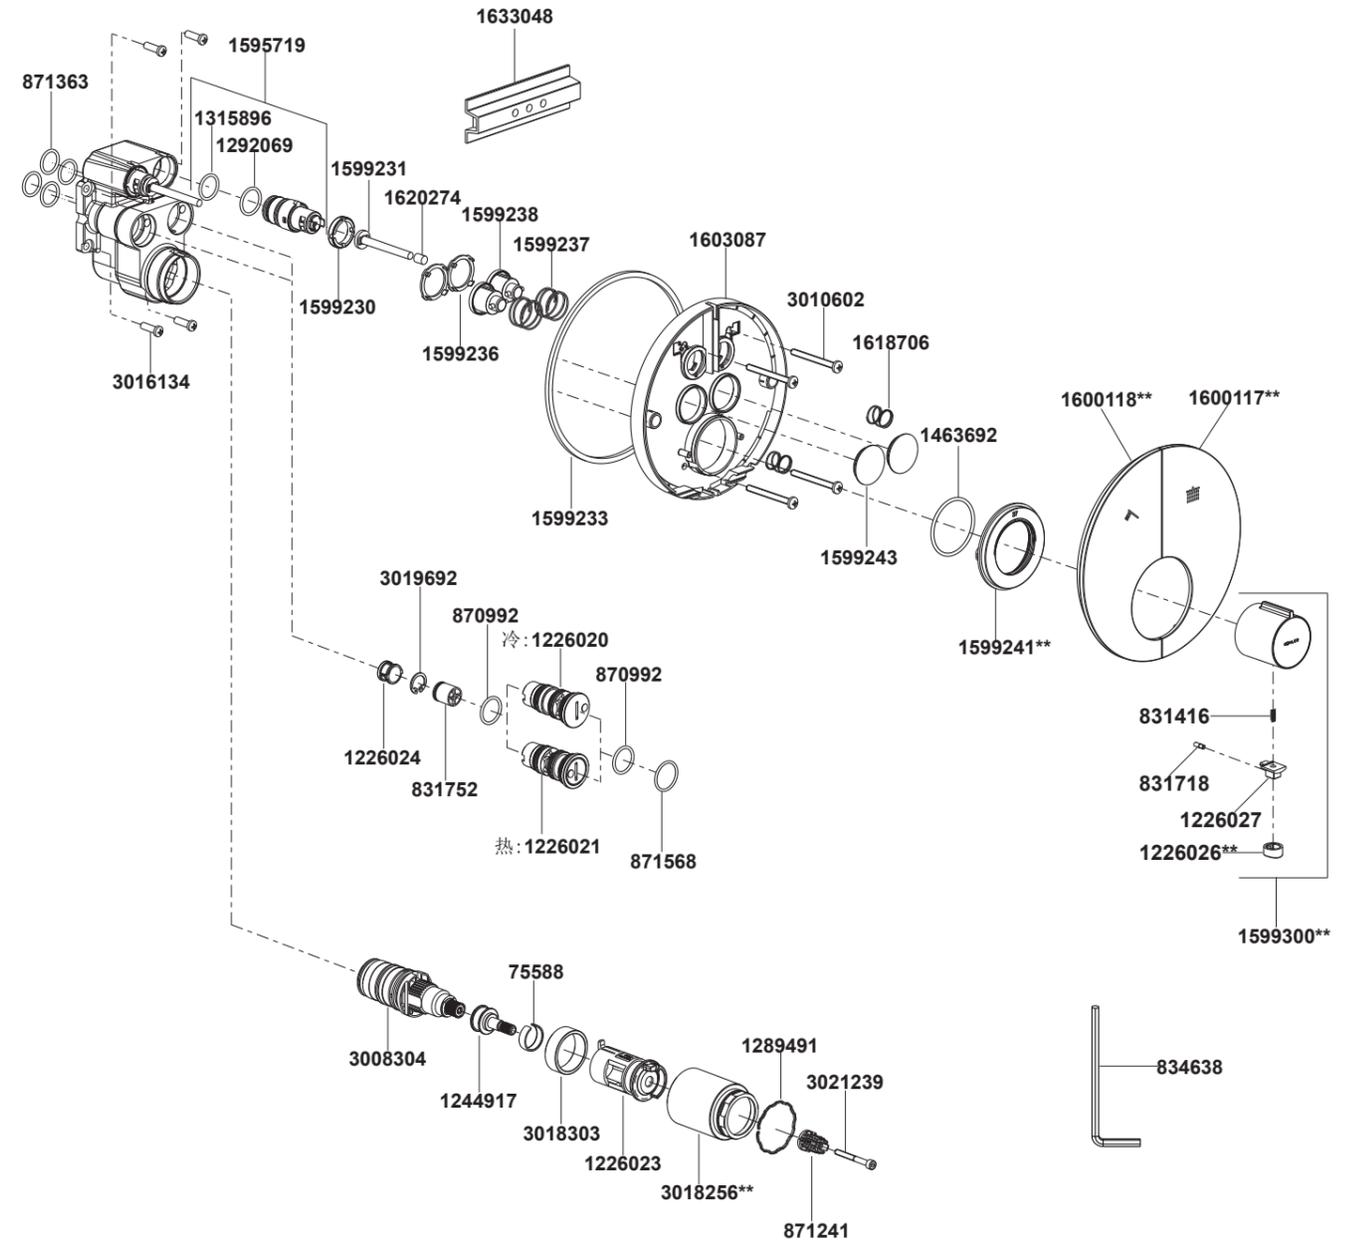

**订购时请说明颜色编号

**Color code must be specified when ordering

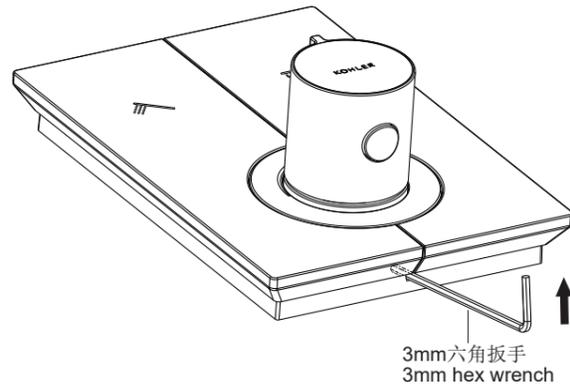

3mm六角扳手
3mm hex wrench

拆卸面板

如有需要拆面板，用3mm六角扳手撬开面板，如图所示。

Uninstall the faceplate

If it is necessary to unistall the faceplate, use 3mm hex wrench to pry the faceplate as shown.

安装结果检查

检查并确保所有的衔接处都已拧紧。确保把手在关闭位置。

打开排水系统和主要供水源，检查并修理有漏水的接口。

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight. Ensure that the handle is in the off position.

Turn on the main water supply, and check for leaks. Repair as needed.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可适用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

安装步骤

注意：参照98699T-B-NA安装尺寸安装安装盒(1)。

待墙面装修好后，切掉安装盒凸出墙面的部分，用螺丝刀旋松螺钉(2)，将保护组件(3)取下。

取下阀体组件(4)底部的保护板(5)，**注意：**不要弄丢底部O型圈(6)，安装过程中不要转动阀轴花键(7)。

阀体底部各孔对准安装盒底部各孔，将阀体装入安装盒，锁紧螺钉(8)。

在阀芯关闭状态下(杆未弹起状态)，将工具(9)套在延长杆(10)上并贴紧墙面，沿着工具上表面用水口钳将延长杆截断。

将橡胶套(11)套在延长杆(10)上，将延长杆装在阀芯上。






安装方式一：在安装盘组件(12)背面凹槽内涂玻璃胶，将其套入阀体并后推直至与墙面接触。用4个长螺钉(13，长50mm)固定安装盘组件(螺钉轻轻接触安装盘组件后，再拧紧两圈即可)。摁上两个橡胶塞子(14)。

安装方式二：将包装内附带的密封条粘在安装盘组件(12)背面凹槽里。将其套入阀体并后推直至与墙面接触。用4个长螺钉(13，长50mm)固定安装盘组件(螺钉轻轻接触安装盘组件后，再拧紧两圈即可)。摁上两个橡胶塞子(14)。


注意：

1.确保橡胶套(11)的上端面和杆外面零件上表面平齐(切勿凹入)，如图所示。


2.如果长螺钉(13)过紧，会导致产品工作异常，需要完全松开四个螺钉，按说明书要求重新锁紧螺钉。

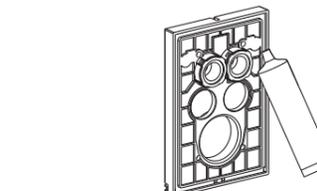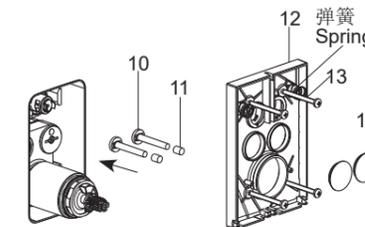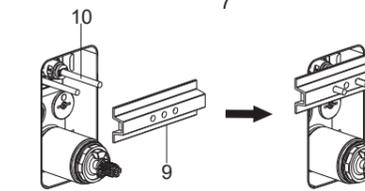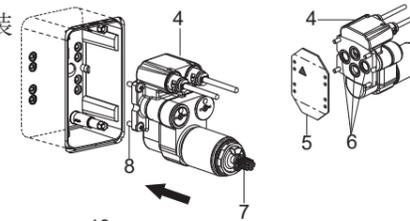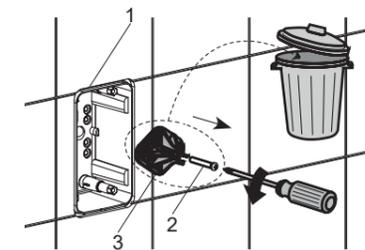

安装方式一
Installation method 1

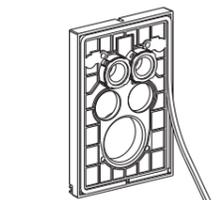

安装方式二
Installation method 2

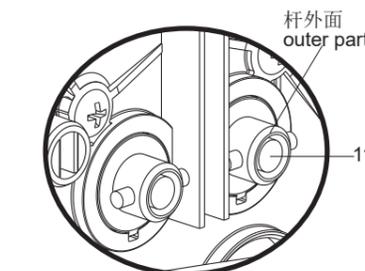

INSTALLATION

NOTE: Install the mounting box kit(1) according to the rough-in dimensions of 98699T-B-NA.

Cut the protrudent part of the mounting box kit out of the finished wall. Unscrew the screw(2), remove the protect cover kit(3).

Remove the protection(5) on the valve kit(4). **NOTE:** Don't drop the O-rings(6). Don't turn the cartridge spine (7) when installing it.

The holes on the bottom of the valve kit should be aligned with the holes in the mounting box. Install the valve kit into the mounting box kit, tighten the screws(8).

When the valves are closed(the rods are not popped up), slide the tool(9) onto the extension rods(10) and against with the wall. Cut off the extension rods along with the upper surface of the tool by a diagonal pliers.

Slide the rubber sleeves(11) onto the extension rods(10). Install the extension rods to the valves.

Installation method 1: Apply glass glue into the groove on the back of the cover kit(12). Slide the cover kit onto the valve. Push it until it is against the wall. Secure it with the four screws(13, length 50mm)(After gently touching the cover kit with the screws, tighten them two more turns). Press the rubber plugs(14).


Installation method 2: Stick the sealing strip attached on the packaging bag into the groove on the back of the cover kit(12). Slide the cover kit onto the valve. Push it until it is against the wall. Secure it with the four screws(13, length 50mm)(After gently touching the cover kit with the screws, tighten them two more turns). Press the rubber plugs(14).

NOTES:

1. Ensure the upper surface of the rubber sleeves(11) are aligned with the upper surface of the outer parts as shown.


2. If the screws(13) are too tight, it will cause abnormal product operation. It is necessary to completely loosen the four screws and re-tighten them as per the instructions.

依次扣上温度指示环(15)、面板(16)和把手(17)。温度指示环内侧的O型圈可以涂油辅助滑动。**注意：**温度指示环要安装到位且和面板上平面对齐。

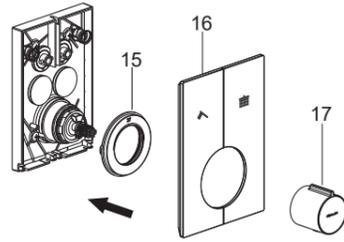

Install the temperature indicator(15), faceplate(16) and handle(17) in turn. The O-ring on the inside of the temperature indicator can be coated with oil to assist in sliding. **NOTE:** The temperature indicator should be installed in place and aligned with the upper plane of the faceplate.


注意：安装过程中，若发现冷热水管反接，可通过调换冷热止水塞组件位置，使面板正常工作。如图所示。

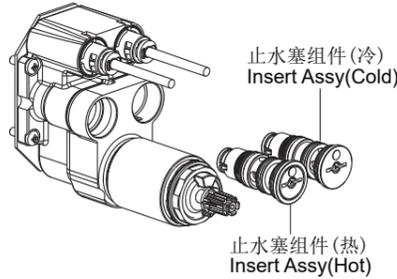


NOTE: If the hot and cold water supplies are connected inversely, installer must exchange the position of the hot and cold insert assy. Ensure the product works properly.

把手安装后的状态如图所示。

The illustrations shown is the correct position of the handles in the off position.

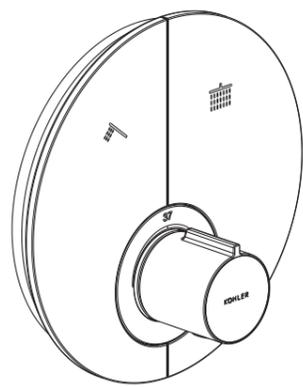

36007T-9

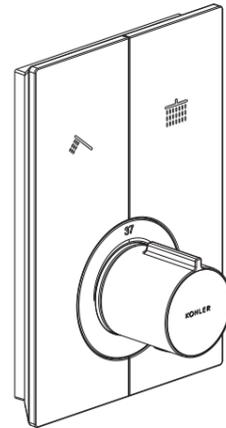

36008T-9

维护和保养

CARE AND MAINTENANCE


温度测试与调整

Temperature Verification and Setting

在安装调试时，必须严格遵循以下步骤，否则洗浴时温度将会高出预期。

The installer **MUST** carry out the below steps during commissioning of the valve. Failure to do so may lead to higher than expected temperatures during showering.

安装温控把手前必须检查并确保阀芯塑料套上的凹槽和阀轴花键上的黑线是对齐的。

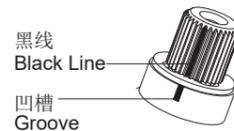

There is a black line and a groove on the spline and valve. **CHECK** these are both in alignment prior to installing the temperature handle.

温控把手安装后用温度计测量出水温度。在温度测试前，应确保供水系统充分，且热水具有推荐的温度范围内的较高的温度。温控把手朝向37°C位置(钟表指针12点方向)且处于安全限位时，出水端出水温度应在36~38°C范围内。


With the handle installed **MEASURE** the outlet temperature with a thermometer. Make sure that the water feeds of the faucet have reached the highest temperature but within the recommended range by running the water sufficiently. With the selector pointing towards the 37°C setting (12 O'clock on the clockface) and turning against temperature safety stop, the temperature of the water should be within the range of 36°C to 38°C.

如果温度超出了这个范围，要进行以下调整：

If this temperature is out of range, the setting should be adjusted as follows...

- 取下温控把手组件。
- 由冷水位置开始慢慢转动温控阀轴花键直至获得37°C水流。
 - 如果出水温度超过37°C，回到冷水位置重新调整
- 温度稳定后，测量并确保出水水温是37°C。
- 不要转动温控阀轴，安装温控把手组件使把手朝向37°C标志。

- Remove the temperature handle.
- Starting at the coldest setting, slowly turn the spline until 37°C is reached.
 - If you go beyond 37°C, return to coldest setting and start again.
- **MEASURE** temperature once stable, confirming 37°C.
- Without moving the spline, reinstall temperature handle with the selector pointing towards the 37°C setting.

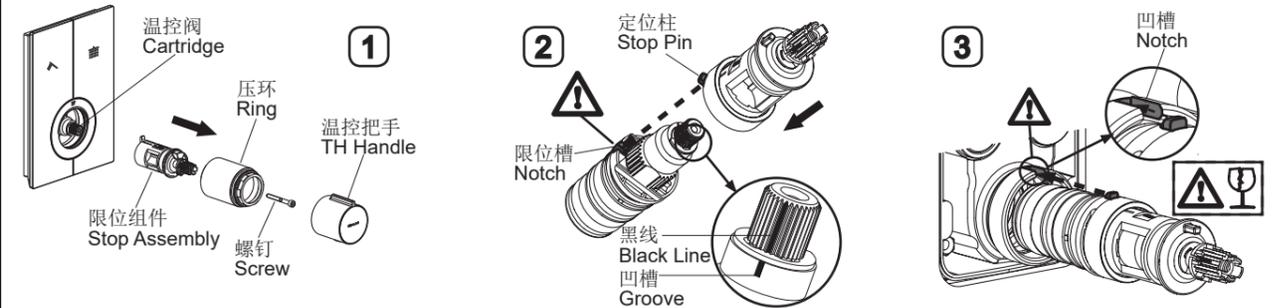

温控阀清洗

Clean Thermostatic Cartridge

如供水的水质较硬或长时间使用，水垢或杂质会阻塞温控阀上的滤网，流量降低。需要清理请按照下列步骤进行：

Very hard water can obstruct the filters on thermostatic cartridge and reduce the water flow. Please clean the cartridge as follows:

关闭供水系统，使流量阀处于打开位置后进行温控阀的拆卸作业。温控阀是较敏感的配件，所以要十分小心。

Shut off the water supplies of the faucet and open the flow valve, then proceed to remove the cartridge. The cartridge is sensitive part, please be careful.

拆卸前确保使把手凸起与面板上的数字37标识对齐。拔下温控把手组件，然后将压环、螺钉和限位组件卸下(图1)。小心地卸下温控阀用热醋进行清洗。

Make sure the bulge of the handle is aligned with the number 37 on the faceplate before your action. Remove the temperature handle kit. Remove the ring, screw and stop assembly(Fig.1). Remove the thermostatic cartridge cautiously. Clean the thermostatic cartridge by soaking it in warm vinegar.

清洗后，确保阀轴花键上的黑线标识与阀芯塑料套上的凹槽对齐。将限位组件装到温控阀上，使塑料套的定位柱嵌入温控阀的限位槽内(图2)。然后将塑料套的定位柱与本体孔内凹槽对齐(图3)，装入温控阀并锁紧压环和螺钉。装回温控把手组件，使把手凸起向上与面板上数字“37”对齐。

After cleaning, make sure that the black line is correctly in line with the groove. Install the "stop assembly" back on the cartridge, adjust the stop pin into the notch (Fig.2). Install the cartridge and stop assembly into the body, adjust the stop pin into the notch(Fig.3). Reinstall the ring and screw. Reinstall the temperature handle kit and align the bulge to the "37" on the faceplate.