


# Guide on usage of remote controller

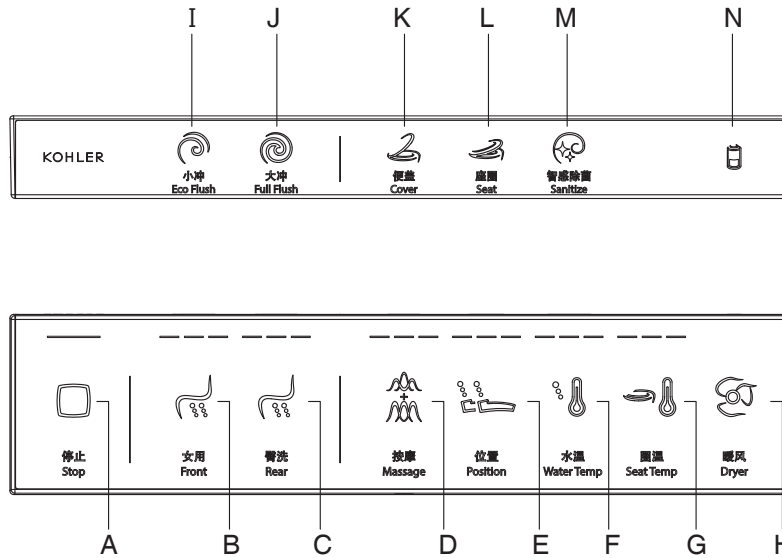

**Warning:** Take down the remote control from charger before pressing Start button to prevent risk of falling.

A – Stop

- Press this button to stop the Front Wash, Rear Wash, Dryer and Intelligent sterilization, Manual Nozzle Clean or UV function.

B – Front Wash

- When being seated, press this button to start Front Wash, then auto stop after 5min or press STOP button to turn off immediately.

C – Rear Wash

- When being seated, press this button to start Rear Wash, then auto stop after 5min or press STOP button to turn off immediately.

D – Massage

- Press this button to start pulsation when starts Rear Wash, press again to start oscillate; press this button the third time to start pulsation and oscillation; press this button the fourth time to exit massage function (when starts corresponding function, indicating LED will light up).

E – Position

- Press this button to adjust wand when starts Front or Rear Wash. There are 3 dials for wand position setting. When unseated, hold and press this button to activate wand clean position setup mode, position icon blinks slowly. Press and hold position icon to switch setting per extension and retraction circulation.

1. When position icon indicating LED lights up, indicates wand extended.

2. When position icon indicating LED light OFF, indicates wand retracted.

The function is used for nozzle manual clean. Press Stop button or hold and press Position button to stop this function.

F – Water temperature

- Press this button to adjust water temp when starts Front or Rear Wash (4 dials for water temperature, back to ambient temp when all indicating LED lights OFF).

G – Seat temperature

- Press this button to adjust seat temp dial, adjust seat heating temperature (4 dials for water temperature, back to ambient temp when all indicating LED lights OFF).

H – Dryer

- When being seated, press this button to start dryer function, auto stops after 4min or press STOP button to turn off immediately.

I – Flush ECO

- Press this button to perform small volume flush for liquid waste.

J – Flush full

- Press this button to perform large volume flush for solid waste.

K – Cover

- When unseated, press this button to perform Cover OPEN/CLOSE action.

L – Seat

- When unseated, press this button to perform Seat OPEN/CLOSE action.

M – Intelligent sterilization

- Press this button for overall cleaning (Note: when process this function, cover and seat OPEN/CLOSE shall be controlled by remote. When being seated, the function will be disabled).

# Guide on usage of remote controller

## Low voltage alarm

**Note:** please replace battery in time when the voltage alarm starts.

- When N battery alarm icon blinks indicate remote battery is almost used up. Replace battery is required.


## Pairing

- When cover and seat is powered on, long press dryer button, when all lights quick blinks twice, dryer light blinks slowly. Long press Front and Rear Wash buttons both on side panel simultaneously in 20s, release button until one short beep is generated. When light strip stops blinking indicates pairing is successful.

## Communication between remote control and toilet

- When remote moves away from sensing zone, press any button, all light strip will blinks slowly, starts searching connection. After successful connection, it will stop blinking.

## Remote setup instruction

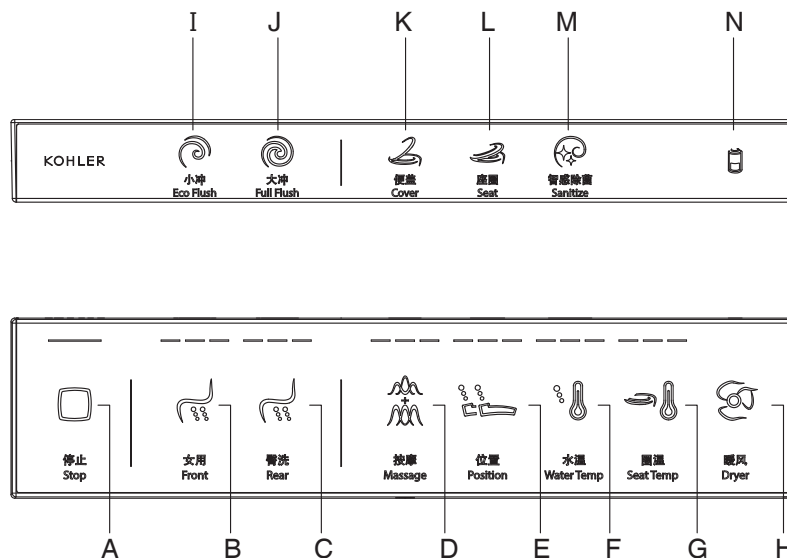

**Note:** Normal function will not be used when initiate any long press setting.

### B – Front Wash...night light setting

- Long press this button to start night light setting mode, Front Wash icon blinks slowly; press Front Wash icon to change setting per activation or deactivation circulation.
  1. When Front Wash indicating LED lights up, indicates night light starts. Toilet generates one short beep.
  2. When Front Wash indicating LED lights OFF, indicates night light stops. Toilet generates one long beep.

### J – Flush full...auto flush setting

- Long press this button to start auto flush setting mode, Flush FULL icon blinks slowly. Press flush FULL icon to change setting per activation or deactivation circulation.
  1. When Rear Wash indicating LED lights up, indicates auto flush function starts. Toilet generates one short beep.
  2. When Rear Wash indicating LED lights OFF, indicates auto flush function stops. Toilet generates one long beep.

### K – Cover...auto cover OPEN and sensing distance setting

- Long press this button to start auto cover OPEN and sensing distance setting mode; cover icon blinks slowly. Press cover icon again to change setting per OFF, near, mid, far, OFF, near .....circulation.
  1. When massage indicating LED lights OFF, indicates auto cover OPEN function stops. Toilet generates one long beep.
  2. When massage indicating LED 1 lights up, indicates auto cover near distance function starts. Toilet generates one short beep.
  3. When massage indicating LED 2 lights up, indicates auto cover mid distance function starts. Toilet generates one short beep.
  4. When massage indicating LED 3 lights up, indicates auto cover far distance function starts. Toilet generates one short beep.

# Guide on usage of remote controller

## L – Seat ...auto deodorizer setting

- Long press this button to start auto deodorizer setting mode, seat icon blinks slowly. Press seat icon again to change setting per activation or deactivation circulation.
  1. When position indicating LED lights up, indicates auto deodorizer function starts. Toilet generates one short beep.
  2. When position indicating LED lights OFF, indicates auto deodorizer function stops. Toilet generates one long beep.

## M – Intelligent sterilization...Auto UV sterilization setting

- Long press this button to start auto UV sterilization function setting mode, intelligent sterilization icon blinks slowly. Press intelligent sterilization icon to change setting per activation or deactivation circulation.
  1. When water temp indicating LED lights up, indicates auto UV sterilization function starts. Toilet generates one short beep.
  2. When water temp indicating LED lights OFF, indicates auto UV sterilization function stops. Toilet generates one long beep.

## D – Massage...prolonged seating indication setting

- Press and hold this button to enter prolonged seating indication setting, massage icon starts blinking slowly. Press massage icon for different setting per activate or deactivate circulation.
  1. When massage indicating LED lights up, indicates prolonged seating indication function starts. Toilet generates one short beep.
  2. When massage indicating LED lights OFF, indicates prolonged seating indication function stops. Toilet generates one long beep.


## G – Ring temp ... energy saving setting

- Long press this button to start energy saving setting, seat temp icon blinks slowly. Press seat temp icon again to change per starts and stops circulation.
  1. When Seat Temp indicating LED lights up, indicates energy saving function starts. Toilet generates one short beep.
  2. When seat temp indicating LED lights OFF, indicates energy saving function stops. Toilet generates one long beep.

Note: long press function button to setup functions, the toilet will exit function setting when customer does not have any action or press any key within 10s.

## Remote controller battery usage and replacement


- Remote docking station uses four AA alkaline batteries.
- When battery is low, remote red LED blinks and lights up, indicates the replacement of battery.
- Note:
  1. The +/- polarities of battery must be consistent with the mark of remote controller.
  2. Do not mix new and old batteries.
  3. Please use alkaline battery.

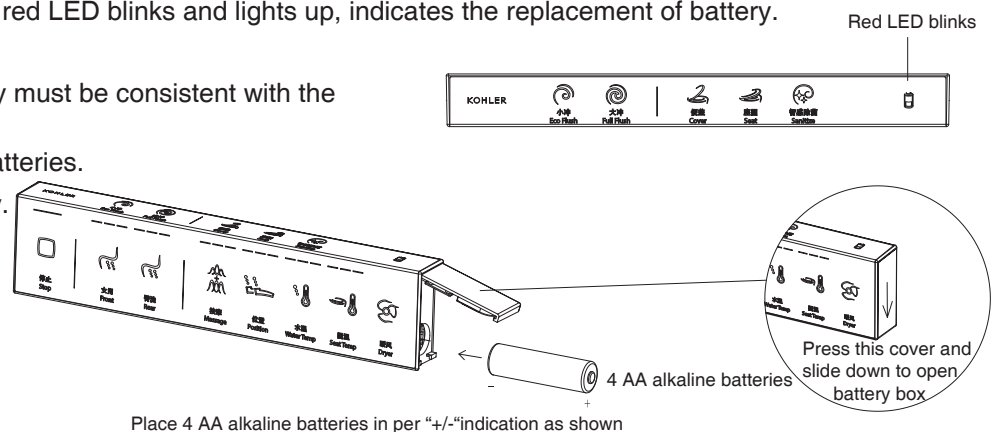

## Others

- Prevent liquid from spraying the remote or do not soak remote into the liquid.
- Do not place remote around the small household appliances, such as hand dryer or hair dryer etc. to prevent remote from interference.
- Do not apply frequent and violent external force on remote buttons.
- Place remote back to docking station on the wall after usage.
- Prevent remote from dropping in the process of use.
- Anti-loss function: secure remote with base by screws, specific method refers to installation guide.

# 遥控器使用指南

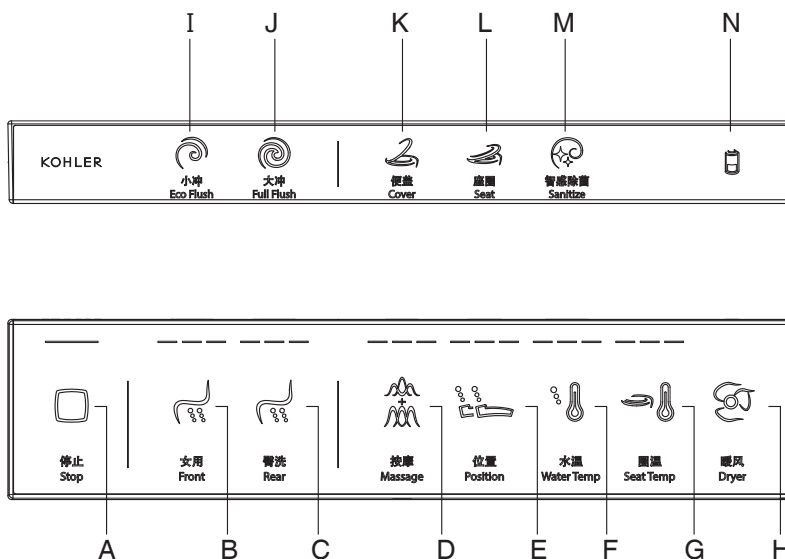

**警告：** 为避免掉落的风险，请从充电座上取下遥控器再按开机键。

## A - 停止

- 按此键可停止女用、臀洗、暖风、智感除菌、手动清洗喷管功能。

## B - 女用

- 落座后，按此键进入女性冲洗，约5分钟后自动停止或按停止键立即关闭。

## C - 臀洗

- 落座后，按此键进入臀部冲洗，约5分钟后自动停止或按停止键立即关闭。

## D - 按摩

- 在开启臀洗后，按此键进入脉冲冲洗，再次按进入移动冲洗，第三次按脉冲/移动同时进行，第四次按退出按摩模式。（相应功能启动时，图标上面的线条灯会亮）

## E - 位置

- 在开启女用或臀洗后，按此键进行喷管的位置调节，喷管位置有三档。
- 离座状态下，长按此键进入喷管清洁设置模式，位置图标缓闪。再长按位置图标进行换挡，按照延伸或收回循环改变设置。
  1. 位置图标上面线条灯亮起，表示喷管延伸，伸出。
  2. 位置图标上面线条灯关闭，表示喷管收回。
 此功能用于对喷头进行手动清洗。停止键或长按位置键停止该功能。

## F - 水温

- 在开启女用或臀洗后，再按此键，调节水温。（水温有四档，图标上面的线条灯全灭为常温）

## G - 圈温

- 按此键调整圈温档位，调节座圈加热温度。（圈温有四档，图标上面的线条灯全灭为常温）

## H - 暖风

- 落座后，按此键开启暖风功能，约4分钟后，自动停止或按停止键立即关闭。

## I - 小冲

- 按此键对座便器缸体进行冲洗，常用于小便冲洗。

## J - 大冲

- 按此键对座便器缸体进行冲洗，常用于大便冲洗。

## K - 便盖

- 离座状态下，可按此键进行开/关盖动作。

## L - 座圈

- 离座状态下，可按此键进行开/关圈动作。

## M - 智感除菌

- 按此键进行全面清洁。（注：此功能运行时，圈/盖的开和关通过遥控器控制。用户落座时，无法使用该功能）

# 遥控器使用指南

## 低电压报警

注意：电压报警后请及时更换电池。

- 当 N 电池报警图标闪烁时，表示遥控器电池电量将耗尽，需要重新更换电池。


## 配对

- 坐便盖正常上电，长按暖风键，当全部线条灯快闪两下后，暖风灯缓慢闪烁，20秒内同时长按本体侧键盘女用和臀洗两按键，直到听到一声短鸣后放开按键。灯条灯如跑马灯一样闪烁走动。当停止闪烁跑动时，表示配对成功。

## 遥控器与本机的通讯

- 遥控器被移动离开感应区域掉线时候，按任意键，全部灯条灯缓慢闪烁，启动搜寻马桶连线。连接成功后，停止闪烁。

## 遥控器设置指南

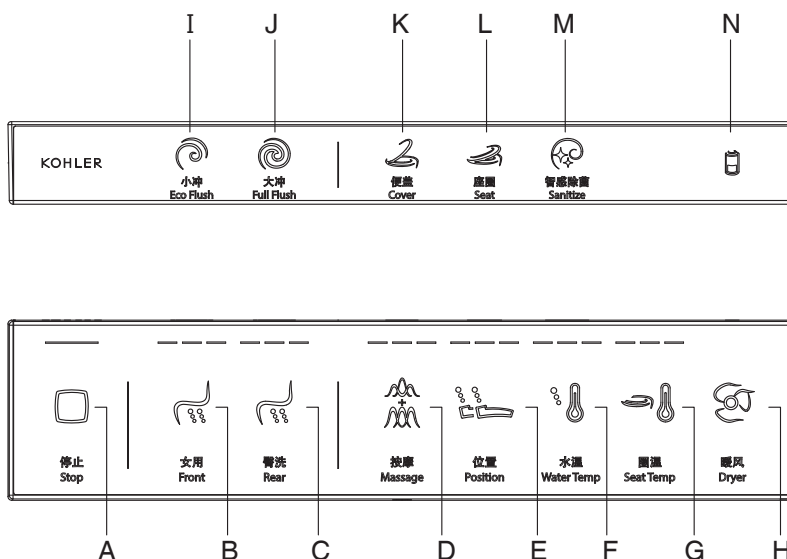

注：启动任何长按功能设置时，正常功能暂时不能用。

### B — 女用…夜灯设置

- 长按此键进入夜灯设置模式，女用图标缓闪。再按女用图标进行换挡，按照启动或关闭循环改变设置。
  1. 女用图标上面线条灯亮起，表示启用夜灯，本体短鸣一声。
  2. 女用图标上面线条灯关闭，表示关闭夜灯，本体长鸣一声。

### J — 大冲…自动冲水设置

- 长按此键进入自动冲水设置模式，大冲图标缓闪。再按大冲图标进行换挡，按照启动或关闭循环改变设置。
  1. 臀洗图标上面线条灯亮起，表示启用自动冲水设置，本体短鸣一声。
  2. 臀洗图标上面线条灯关闭，表示关闭自动冲水设置，本体长鸣一声。

### K — 便盖…自动翻盖和感应距离设置

- 长按此键进入自动翻盖和感应距离设置模式，便盖图标缓闪。再按便盖图标进行换挡，按照距离，关，近，中，远，关，近，…循环改变设置。
  1. 按摩图标上面线条灯全灭，表示关闭自动翻盖功能，本体长鸣一声。
  2. 按摩图标上面线条灯顺序1亮起，表示自动翻盖近距离功能，本体短鸣一声。
  3. 按摩图标上面线条灯顺序2亮起，表示自动翻盖中距离功能，本体短鸣一声。
  4. 按摩图标上面线条灯顺序3亮起，表示自动翻盖远距离功能，本体短鸣一声。

# 遥控器使用指南

## L - 座圈…自动除臭设置

- 长按此键进入自动除臭设置模式，座圈图标缓闪。再按座圈图标进行换挡，按照启动或关闭循环改变设置。
  1. 位置图标上面线条灯亮起，表示启用自动除臭设置，本体短鸣一声。
  2. 位置图标上面线条灯关闭，表示关闭自动除臭设置，本体长鸣一声。

## M - 智感除菌…UV自动杀菌设置

- 长按此键进入UV自动杀菌设置模式，智感除菌图标缓闪。再按智感除菌图标进行换挡，按照启动或关闭循环改变设置。
  1. 水温图标上面线条灯亮起，表示启用紫外线自动杀菌设置，本体短鸣一声。
  2. 水温图标上面线条灯关闭，表示关闭紫外线自动杀菌设置，本体长鸣一声。

## D - 按摩…长时如厕提醒设置

- 长按此键进入长时如厕提醒设置，按摩图标缓闪。再按按摩图标进行换挡，按照启动或关闭循环改变设置。
  1. 按摩图标上面线条灯亮起，表示启用长时如厕提醒功能，本体短鸣一声。
  2. 按摩图标上面线条灯关闭，表示关闭长时如厕提醒功能，本体长鸣一声。

## G - 圈温…节能设置


- 长按此键进入节能设置模式，圈温图标缓闪。再按圈温图标进行换挡，按照启动或关闭循环改变设置。
  1. 圈温图标上面线条灯亮起，表示启用节能功能，本体短鸣一声。
  2. 圈温图标上面线条灯关闭，表示关闭节能功能，本体长鸣一声。

注：长按功能键设置功能时，如用户10秒无任何动作或按其他键，设置功能将退出。

## 遥控器电池的使用及更换

- 遥控器使用4节5号碱性电池。
- 当电量不够时，遥控器上红灯闪烁或亮，提示用户需要更换电池。
- 注意：

1. 电池的正负极必须与遥控器上的标记一致。
2. 新旧电池不能混用。
3. 请使用碱性电池。

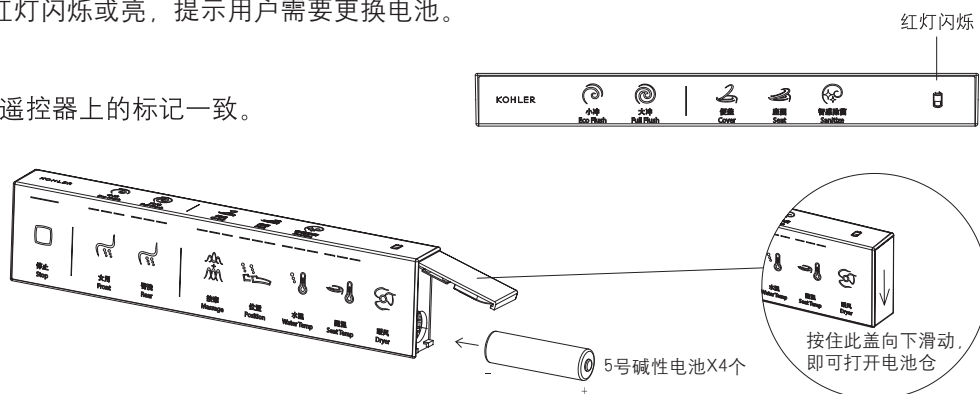

如图所示“正负极”方向装入5号碱性电池四个

## 其他

- 请勿将遥控器放在液体可能直接喷淋到的地方，或浸泡在液体中。
- 请勿放置在烘手机、电吹风等小型家电的周围，以免干扰遥控器的正常使用。
- 请勿对遥控器的按键区域频繁、剧烈地施加外力。
- 遥控器使用完毕后，应放回墙上的遥控器支架。
- 在使用过程中，避免遥控器跌落。
- 防遗失功能：遥控器可通过螺丝与底座锁定，具体方法参见安装说明书。