

INSTALLATION INSTRUCTIONS

随心雨 RAINDUET

安装说明书

Multifunction Handshower with Water Mind - RO

33407T R33407T 多功能手持花洒 - 圆形(含Water Mind仿生驭水技术)

安装之前

所有的资料是按最新出版的产品资料编写而成。科 勒公司保留任何时候不经通知即可改变产品特性、 包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容,请把这些资料交给用户阅读。

注意事项:

- 1.一定要先彻底冲洗供水管以清除管道中的杂质。
- 2.花洒最高工作压力: 0.5MPa(5bar)。水压超过 0.5MPa(5bar)须安装减压阀。花洒最高工作温度及环境温度: 60°C。请特别注意花洒同花洒连接的臂管必须远离浴霸,否则可能损坏花洒及其密封件,甚至对使用者造成伤害。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.


Please leave these instructions for the consumer. They contain important information.

NOTES:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. The highest working pressure for spray is 0.5MPa (5bar). If it exceeds 0.5MPa(5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handspray, showerhead and the shower arm away from heater, or it may become damaged and cause injury to the user.

安装尺寸

ROUGH-IN DIMENSIONS

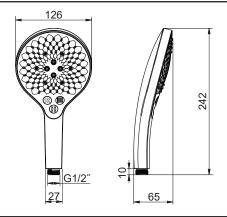


安装步骤

装手持花洒(1)之前,先打开水源约一分钟,冲洗掉杂质。

将滤网垫片(3)放入花洒软管(4,客户自备)接头内,可根据需要将单向阀(2)放入到花洒进水端。连接手持花洒与软管。**注意:**不要过份拧紧。

 
软管另一端连接水源。





Put the screen washer(3) into the shower hose(4, not provided) connector. Install check valve(2) into the handshower if needed. Connect the handshower to shower hose. **NOTE:** Don't over tighten.

 
Connect the other end of shower hose to water supply.



1577099-T2-A **1**

使用说明

OPERATING INSTRUCTIONS

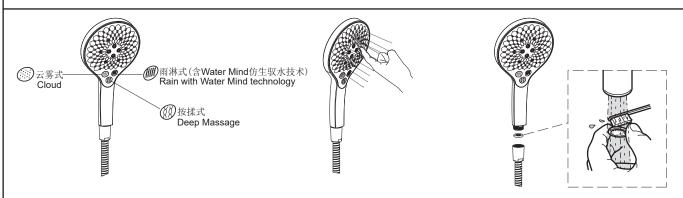

如何操作手持花洒

按动花洒面板上的按键即可切换花洒的各种功能。

如何维护保养花洒

喷孔杂质或结垢会导致水流变形,流量变小。打开水源,用力按压或摩擦橡胶喷孔,去除杂质或水垢。

取下软管接头内的滤网垫片, 去除杂质。

How to Operate the Handshower

Press the buttons of the handshower to change the water flow.

How to Maintain the Handshower

Any debris or mineral build-up may cause the flow stream to become distorted or reduce the flow rate. To remove the debris or mineral build-up, run water through the handshower, firmly press or rub your finger back and forth across the rubber nozzles.

Remove and clean the screen washer.

清洗说明

适用于所有加工处理过的表面:以中性肥皂水清洗 镀层表面,再以干净的软布彻底擦干整个表面,许 多清洁剂,比如氨水、去污粉及洁厕灵等,会对电 镀表面造成伤害,切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌 的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc., which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

零件图

SERVICE PARTS



1577099-T2-A **2**

^{**}订购时请说明颜色编号

^{**}Color code must be specified when ordering