

# 安装说明

## 冰箱版镜柜

记录您的型号:

Record your model number: \_\_\_\_\_

English, page

**KOHLER®**

## Thank You for Choosing KOHLER

---

**需要帮助？** 请联系我们的客户服务中心。

- 中国大陆: +(86) 800-820-2628, +(86) 400-820-2628

## 质保





---

本产品支持**科勒®厨卫产品三年有限质保**，详见包装所附的《合格证》。

## 重要安全说明

---

在安装或使用本产品之前阅读所有说明。

-  **警告：** 使用带电产品时，务必始终遵守基本注意事项，包括：
-  **警告：** 存在触电风险。产品线路连接均须由资质合格的电工操作。安装不当会造成电气危险，可能违背地方建筑和电气规范。
-  **警告：** 存在触电风险。维修前先断开电源。
-  **小心：** 存在触电风险。可能需要重新布线。


请遵守当地管道安装、建筑及电气条例。

本产品符合 GB 24977-2010 标准。

保存说明书


工具和材料


---

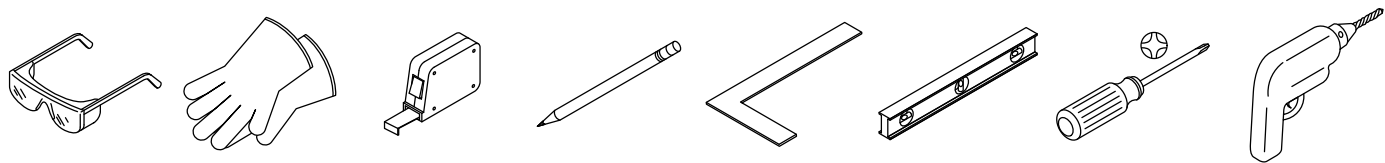



6 毫米钻头

# 开始之前

- 

小心：存在人身伤害的风险。本产品较重。在抬起和移动产品时应有人帮助。
- 

小心：请提防产品或财产受损风险。镜柜安装的位置至关重要。确认在镜柜柜门安装位置前没有任何障碍物遮挡（例如水龙头或灯具）。确认在切割或钻孔过程中不会损坏墙体背后的任何障碍物。
- 

小心：请提防财产损坏的风险。玻璃层板的最大负载：12.1 磅（5.5 公斤）。
- 

小心：存在财产受损风险。小件置物架最大负载：每个层架 3.3 磅（1.5 公斤）。

**重要信息!** 重新铺设电线或水管。如果遇到排水管、通风管，或承重墙，请先咨询专业人士再继续操作。

**注意：** 存在产品损坏的风险。在拆卸或重新安装过程中，请勿仅用一个铰链来连接柜体和柜门 拆卸时应先拆下底部铰链，安装时应先安装顶部铰链。

本产品不支持 TRIAC（交流三极管）调光器。

您的产品可能与所示图片效果有所不同。安装步骤相同。


应由两个人执行此安装。

在确定产品的高度时，应先确保柜门在开合时不会被任何障碍物（例如水龙头或灯具）挡住。间隔距离至少为 3 英寸（76 毫米）。


## 电气规格

电器功能	类型描述	位置
防雾膜	输入：DC 24 V，最大 15 W	外镜
电源	输入：AC 220 V/50 Hz 输出：DC 24 V/90 W	主柜接线盒
主 LED	输入：DC 24 V，最大 30 W	外镜
内部 LED	输入：DC 24 V，最大 10 W	内镜
冰箱电源	输入：AC 220 V/50 Hz，最大 50 W	主柜接线盒

附件清单

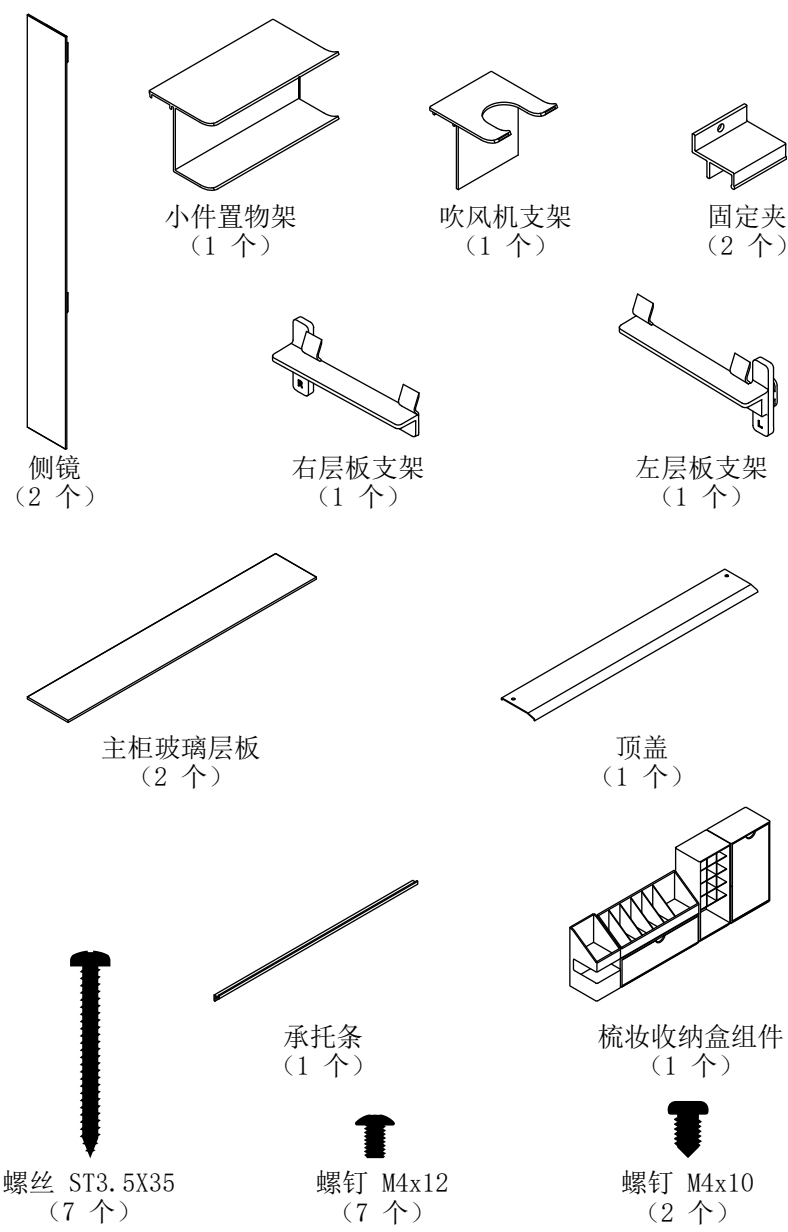


储物功能

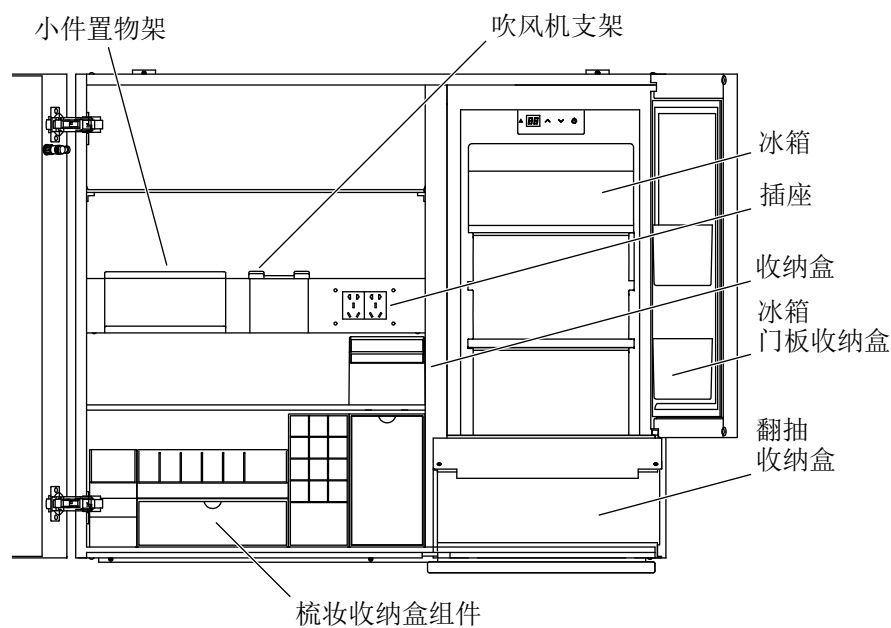


尺寸图


安装孔位置

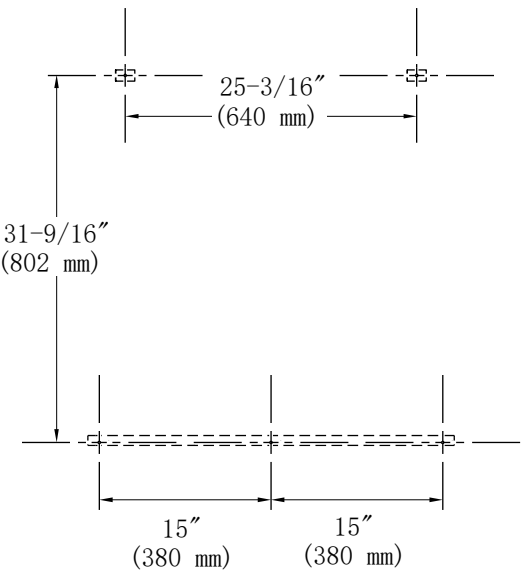

尺寸

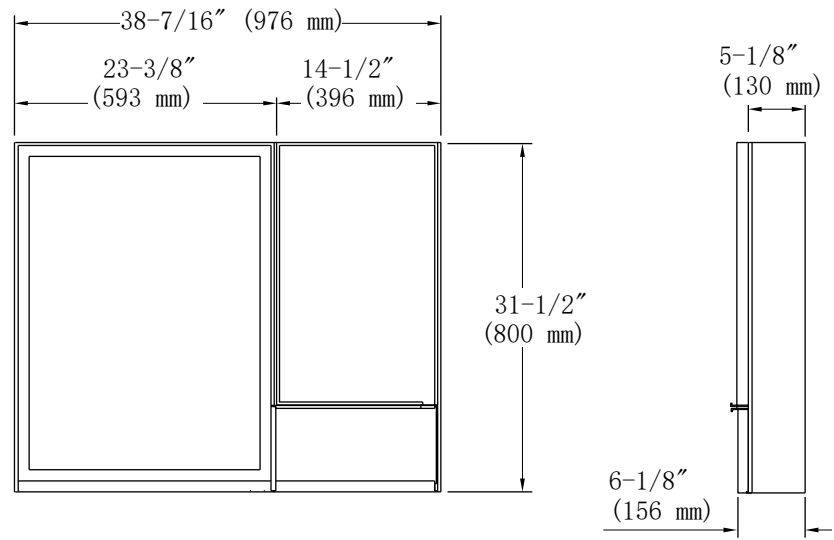

## 1. 安装场地准备

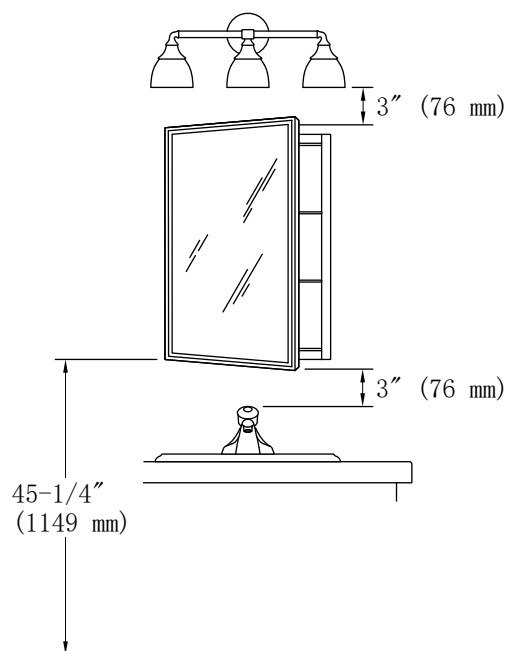

**⚠ 警告：存在触电风险。执行以下程序前，请先断开电源。**


**⚠ 警告：存在触电风险。电子线路连接应当由资质合格的电工操作。**

- ☐ 在确定产品的高度时，应镜柜门在开合时不会被任何障碍物（例如水龙头或灯具）所挡住。预留至少 3 英寸（76 毫米）的距离。
- ☐ 柜子底部与地面的距离约为 45-1/4 英寸（1149 毫米）。
- ☐ 根据“尺寸图”部分，测量并标记底部托条和顶部顶扣的安装孔位置。



## 2. 安装底部托条


---

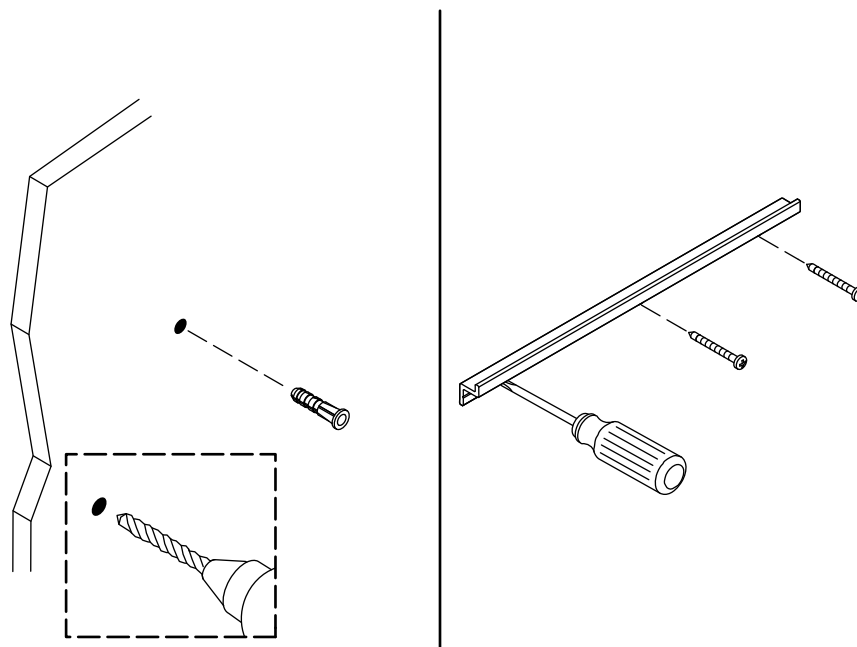

**⚠ 小心：存在人身伤害的风险。本产品较重。在抬起和移动产品时应有人帮助。**

- ☐ 通过协助，将柜体抬起并固定在墙上。
- ☐ 将底部托条固定在柜子下方的墙上，以柜子中心线为中心。
- ☐ 确认柜子和托条处于水平状态。
- ☐ 通过协助，将柜子放在有衬垫的表面上。
- ☐ 如果还未标记安装孔，请先测量并标记底部托条的安装孔位。
- ☐ 在标记的安装孔位处钻 6 毫米深的定位孔。
- ☐ 安装随附的入墙胶粒。
- ☐ 使用随附的 ST3.5X35 螺丝固定托条。


### 3. 安装柜子

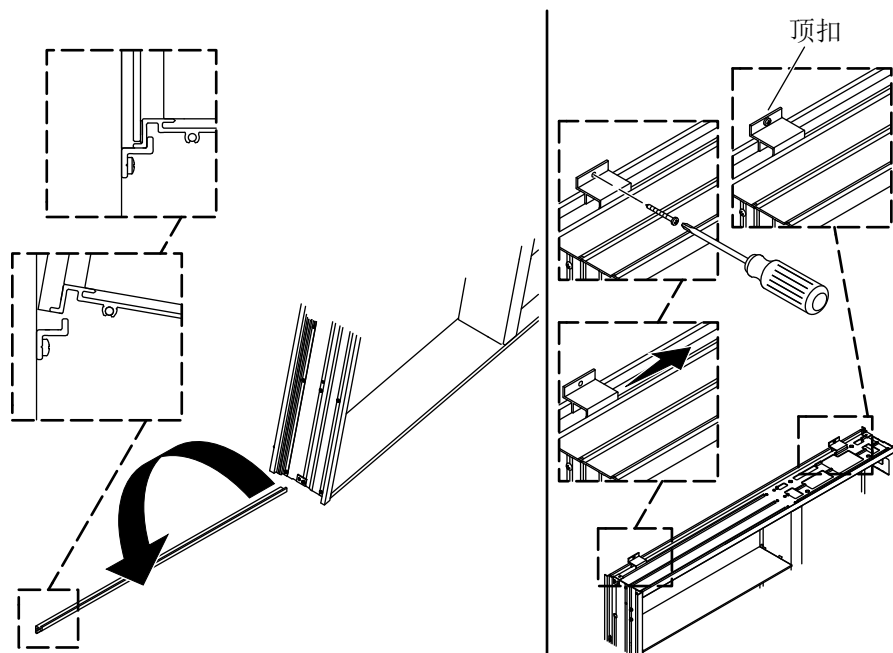

**⚠ 小心：存在人身伤害的风险。本产品较重。在抬起和移动产品时应有人帮助。**

- ☐ 通过协助，抬起柜子并将柜子底部放置在托条上。确认柜体底部凸边卡入托条槽内。
- ☐ 将三个顶扣分别嵌入至柜体顶部中间的缺口处和两侧
- ☐ 将柜子顶部紧贴墙壁，标记顶扣的安装孔。
- ☐ 在标记的安装孔位置钻 6 毫米深的定位孔。
- ☐ 安装随附的入墙胶粒。
- ☐ 将柜子顶部向后靠墙倾斜，并将顶扣孔对准安装孔。
- ☐ 使用随附的 ST3.5X35 螺丝固定顶扣。

## 4. 连接电源线

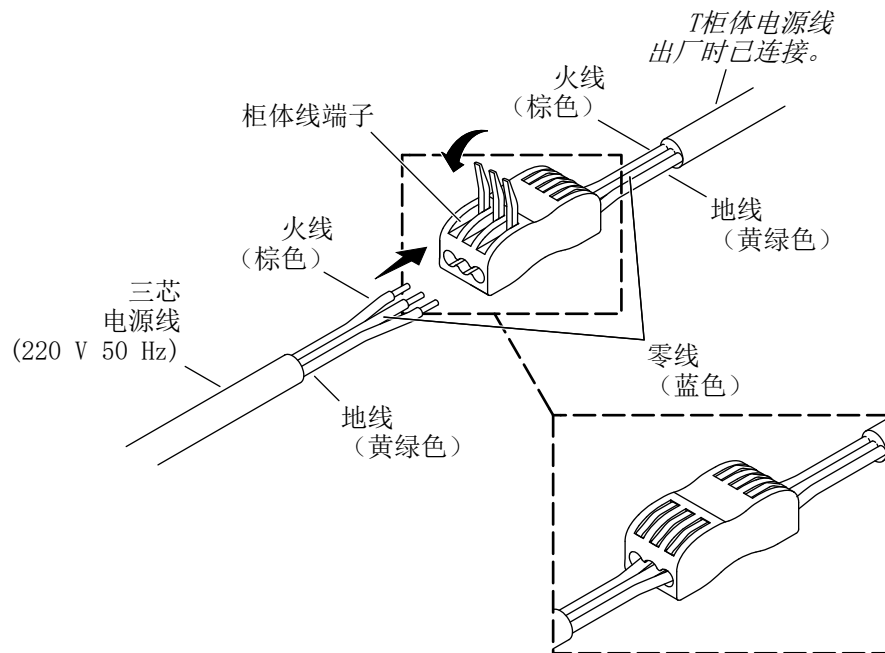

**警告：** 存在触电风险。所有线路连接均应由有资质的电工进行。


**警告：** 存在触电风险。执行以下程序前，请先断开电源。

**注意：** 必须由有资质的电工安装 220-240 V、50-60 Hz、15 A RCD 保护电路。

**注：** 连接到电源插座的电器不应超过 2000 W。

□ 将墙上的三芯电源线与柜体的接线端子连接起来，如图所示。


## 5. 安装侧镜和顶盖

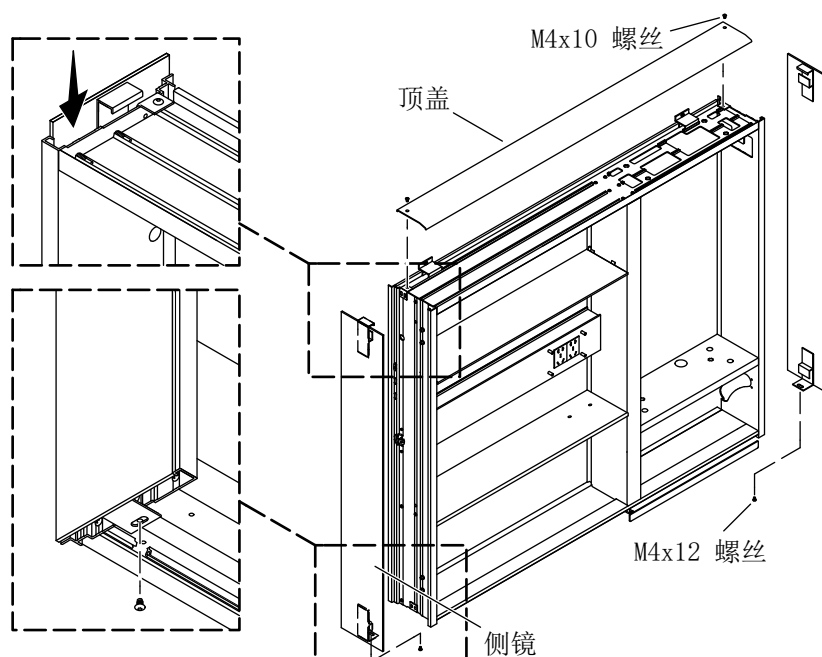

**注：** 您的产品可能与所示图片效果有所不同。安装步骤相同。

- ☐ 用随附的 M4x12 螺丝安装侧镜。
- ☐ 用随附的 M4x10 螺丝安装顶盖。

## 6. 门体调节

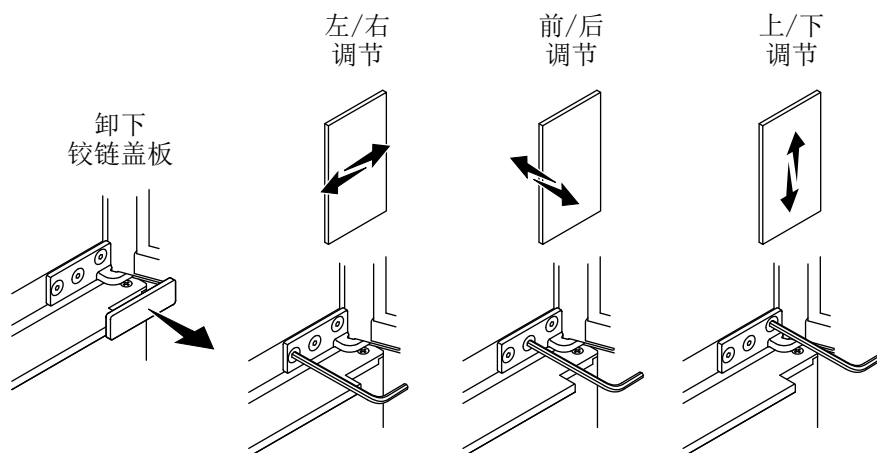

**注：** 可以通过铰链的调节来实现门体的左右、前后和上下方向上的调节。

### 卸下铰链盖

□ 拆下铰链盖后可以看到调节螺钉。

### 左/右调节

□ 拧紧或松开左边第一枚螺丝，可以实现门体水平方向上的调节。


### 前/后调节

□ 拧紧或松开左边第二枚螺丝，可以实现门体前后方向上的调节。

### 上/下调节

□ 将固定在柜子铰链上的两颗螺丝松开。调节门的高度并拧紧螺丝，从而将门体固定在所需位置。


## 7. 安装玻璃层板

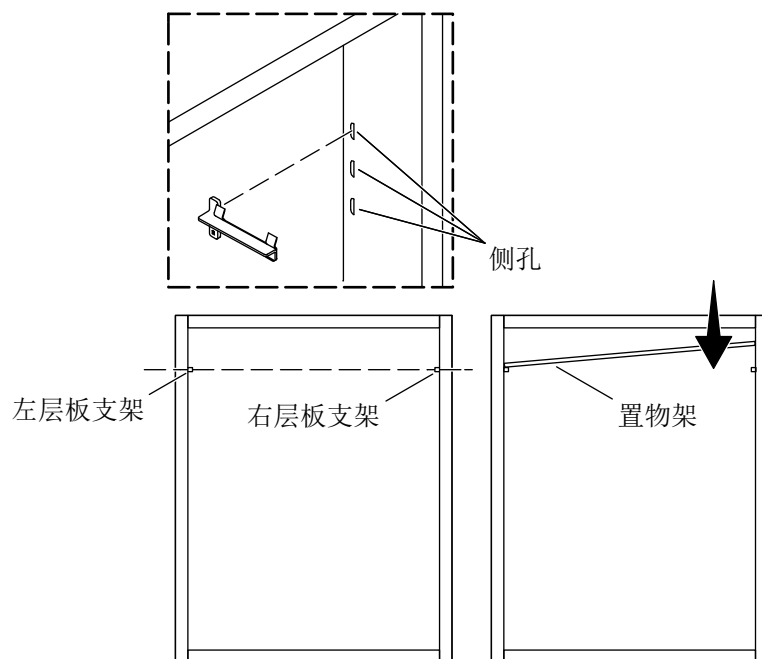

**⚠ 小心：** 请提防财产损失的风险。玻璃层板的最大负载：**12.1 磅（5.5 公斤）**。

- ☐ 将左右层板架插入侧孔中。
- ☐ 确认柜子两侧的层板架是否对齐。
- ☐ 将玻璃层板的一端放在一个层板架上，然后将玻璃层板的另一端向下压在另一个层板架上。

## 8. 安装配件

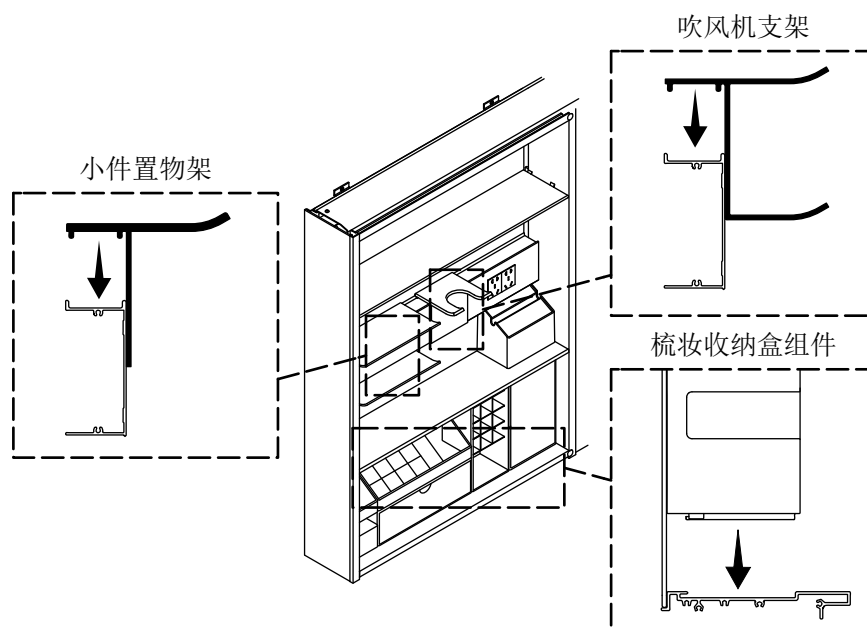


**⚠ 小心：存在财产受损风险。小件置物架最大负载：每个层架 3.3 磅（1.5 公斤）。**

- ☐ 将小件置物架挂在多功能组件上。
- ☐ 将吹风机支架挂在多功能组件上。
- ☐ 安装梳妆收纳盒组件。

## 调节灯光

---

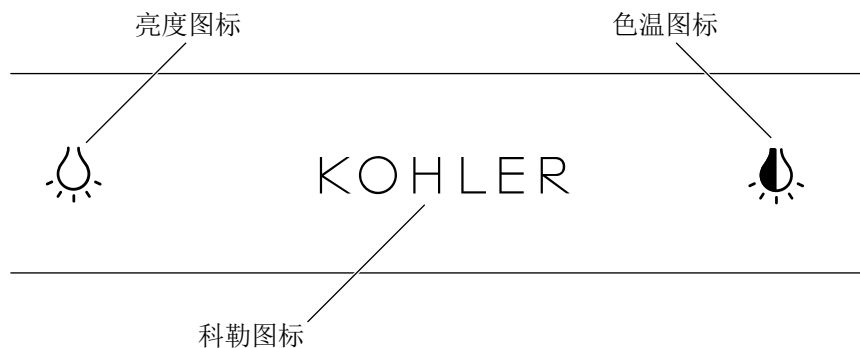

### 手动模式：

- 当灯光熄灭时，按下科勒图标即可打开灯光和防雾功能 三个图标的颜色都将变为白色。当按下亮度或色温图标时，被按下的图标颜色会变为蓝色，松开后，图标颜色变回白色。
- 当灯光打开时，按下科勒图标即可关闭灯光 防雾功能将在 30 分钟后自动关闭。亮度和色温图标会熄灭，科勒图标会变为白色并保持 50% 的亮度
- 长按科勒图标 2 秒，进入自动模式。

### 自动模式：

- 灯光熄灭后，当人靠近镜柜时会自动打开灯光和防雾功能 亮度和色温图标将变为蓝色，科勒图标将变为白色。当按下亮度或色温图标时，被按下的图标的颜色变为白色，松开后，图标的颜色变回蓝色。
- 人离开约 3 分钟后，镜柜灯光缓慢熄灭，图标指示灯也会熄灭。防雾功能将在 30 分钟后自动关闭。
- 灯光打开时，按下科勒图标即可关闭灯光，并进入手动模式。
- 灯光关闭时，按下科勒图标即可打开灯光，并进入手动模式。
- 长按科勒图标 2 秒，进入手动模式。


### 背灯

- 打开镜门，灯光自动亮起。
- 关闭镜门，灯光自动熄灭。



## 9. 调节冰箱温度

---

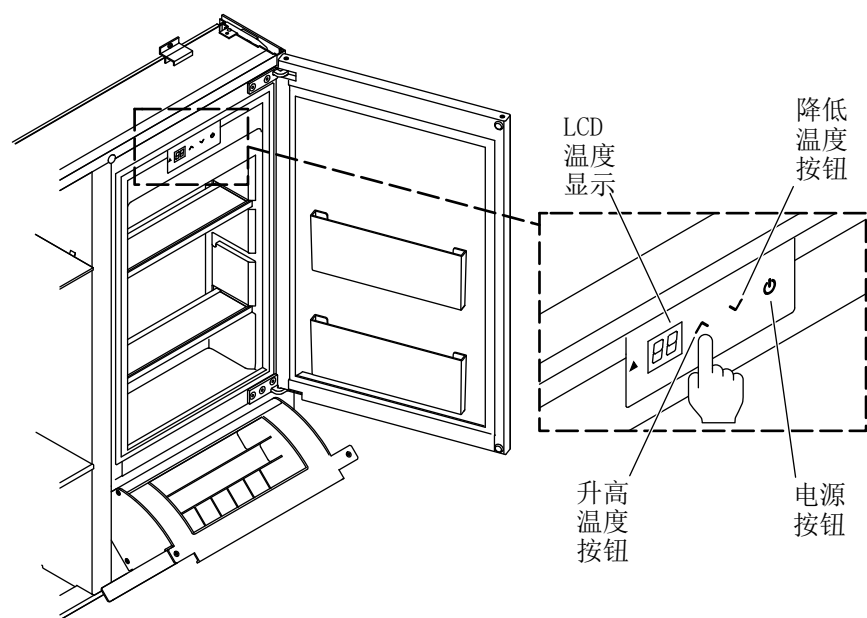

### 打开/关闭冰箱

- ☐ 请按下电源按钮以启动冰箱。
- ☐ 请按下电源按钮以关闭冰箱。

### 更改冰箱温度

- ☐ 按下温度升高按钮可升高冰箱的温度。
- ☐ 按下温度降低按钮可降低冰箱的温度。

# Installation Instructions

## Mirror Cabinet with Refrigerator Side Cabinet

### Thank You for Choosing KOHLER

---

Need help? Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628

### Warranty





---

This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

### IMPORTANT SAFETY INSTRUCTIONS

---

Read all instructions before installing or using this product.

-  **WARNING:** When using electrical products, basic precautions should always be followed, including the following:
-  **WARNING: Risk of electric shock.** A qualified electrician must route all electrical wiring for the product. Improper installation will create an electrical hazard and may not comply with local building and electrical codes.
-  **WARNING: Risk of electric shock.** Disconnect the power before servicing.
-  **CAUTION: Risk of electric shock.** Electrical wiring may need to be relocated.


Follow all local plumbing, building, and electrical codes.

This product complies with GB 24977-2010.

**SAVE THESE INSTRUCTIONS**


# Tools and Materials


E  
N

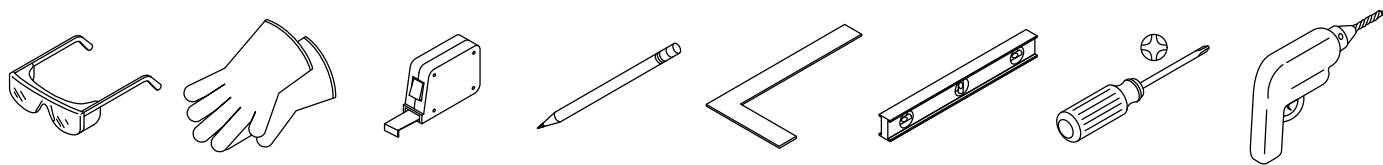


6 mm Drill Bit

## Before You Begin

 **CAUTION: Risk of personal injury.** This product is heavy. Get assistance lifting and moving the product.

 **CAUTION: Risk of product or property damage.** The location of the cabinet is critical. Verify that the door will clear all obstacles (such as a faucet or light fixture). Verify that any obstacles behind the finished wall will not be damaged during the cutting and/or drilling process.

 **CAUTION: Risk of property damage.** Maximum shelf load: 12.1 lbs (5.5 kg).

 **CAUTION: Risk of property damage.** Maximum small item shelf load: 3.3 lbs (1.5 kg) per shelf.

**IMPORTANT!** Reroute any electrical wires or water supply piping. If you encounter drain or vent piping or if your wall is load-bearing, consult a professional before proceeding.

**NOTICE:** Risk of product damage. Do not leave the door supported with only one hinge during removal or reinstallation. Disengage the bottom hinge first during removal, and reattach the top hinge first during installation.

This product does not support TRIAC (Triode for Alternating Current) dimmers.


Your product may appear different from the one illustrated. The installation procedure is the same.

Two people should perform this installation.


When determining the height of the product, verify the door(s) will clear all obstacles (such as a faucet or light fixture). A minimum distance of 3" (76 mm) is required.

### Electrical Specifications


Electrical Function	Type Description	Location
Defogger	Input: DC 24 V, Max 15 W	Outer Mirror
Power Supply	Input: AC 220 V/50 Hz Output: DC 24 V/90 W	Main Cabinet Junction Box
Main LED	Input: DC 24 V, Max 30 W	Outer Mirror
Inner LED	Input: DC 24 V, Max 10 W	Inner Mirror
Power Supply Refrigerator	Input: AC 220 V/50 Hz, Max 50 W	Main Cabinet Junction Box

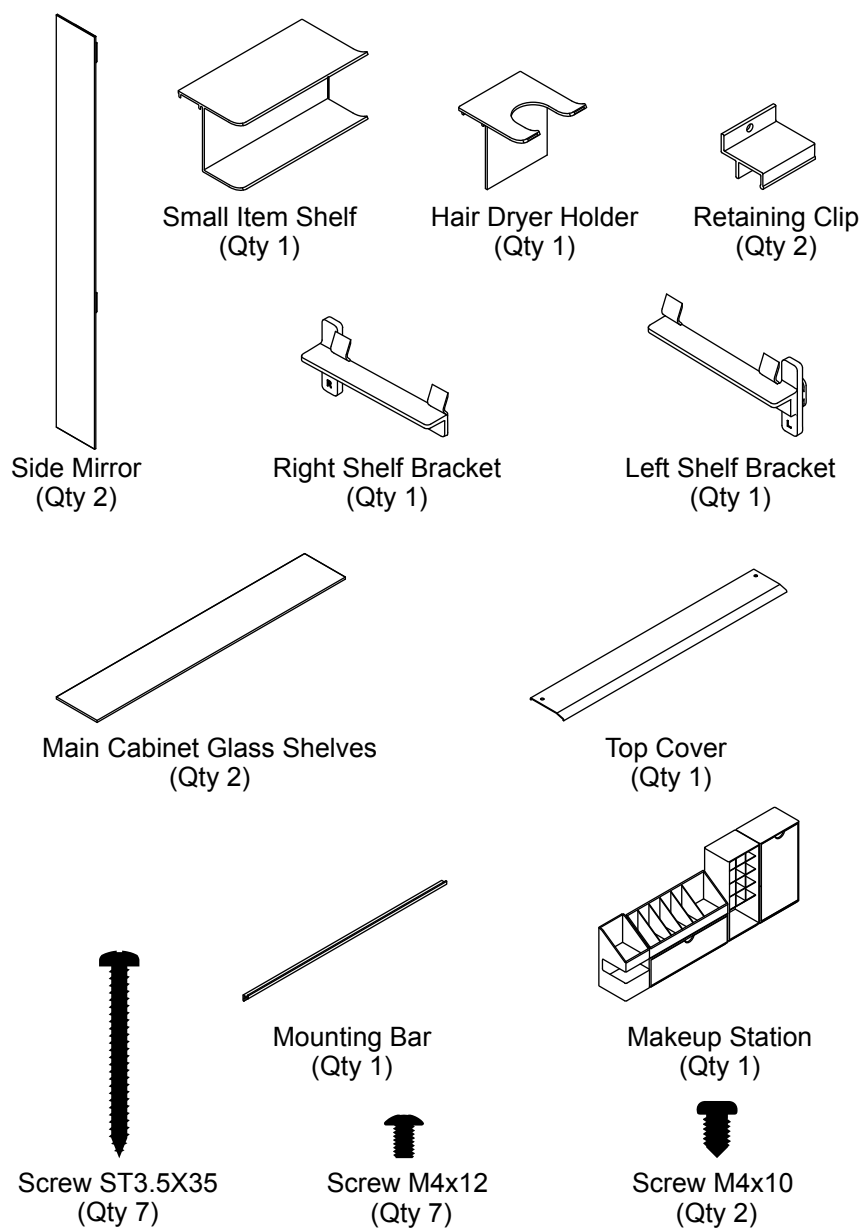


# Storage Features

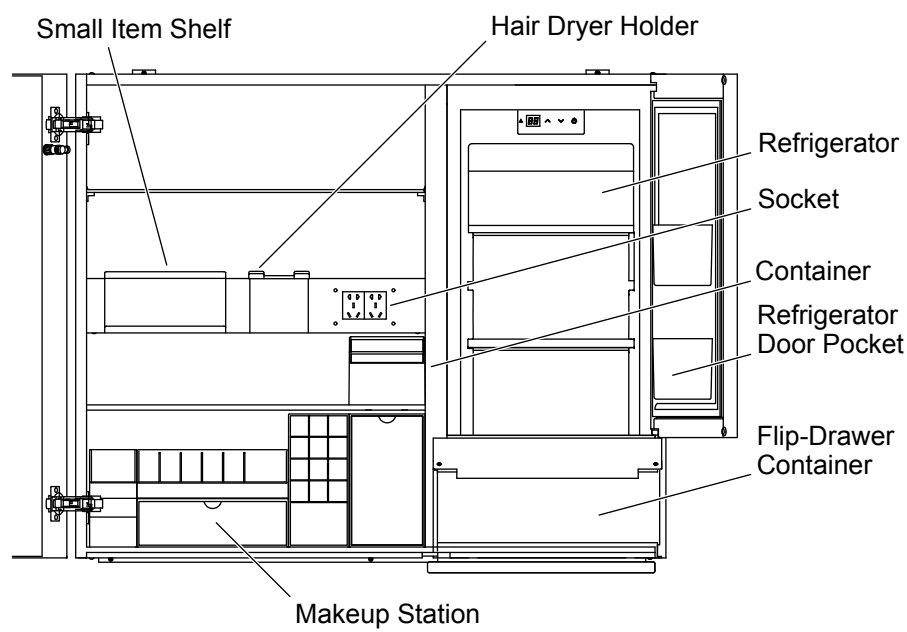


Mounting-Hole Locations

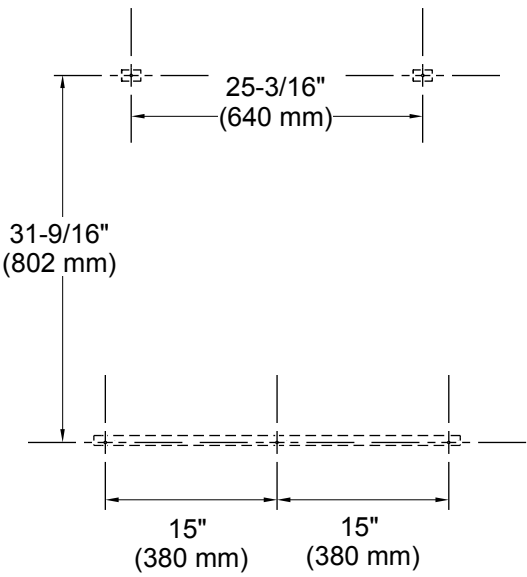

Dimensions

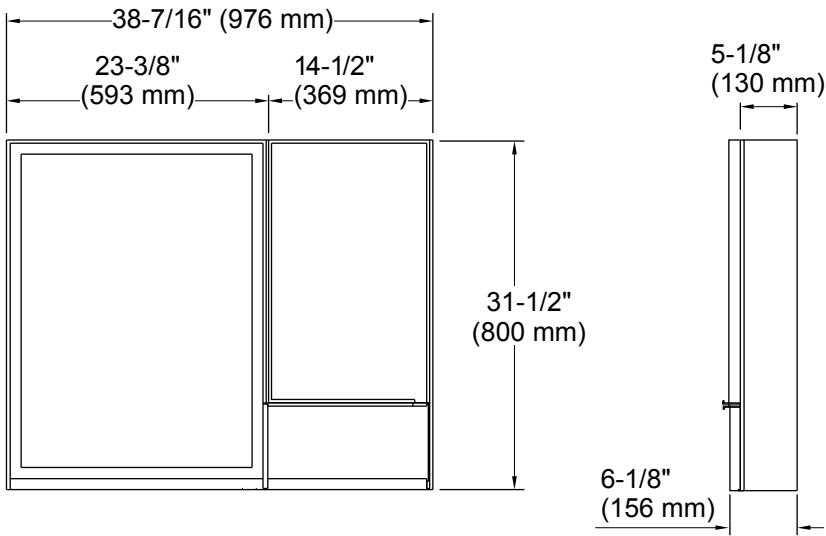

## 1. Prepare the Site

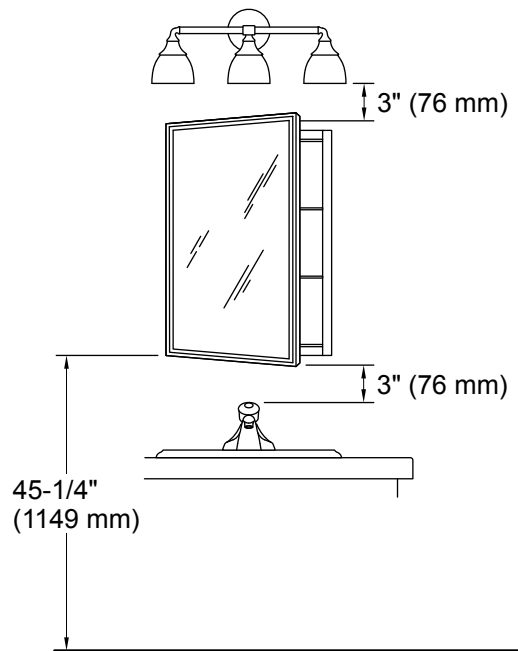

**WARNING: Risk of electric shock.** Disconnect the power before performing the following procedures.




**WARNING: Risk of electric shock.** A qualified electrician should route all electrical wiring.

- ☐ When determining the height of the product, verify that the door will clear all obstacles (such as a faucet or light fixture). Provide a minimum distance of 3" (76 mm).
- ☐ The distance from the floor to the bottom of the cabinet is about 45-1/4" (1149 mm).
- ☐ Measure and mark the mounting-hole locations for the bottom hanger(s) and top retaining clips according to the "Roughing-In" section.




## 2. Install the Bottom Hanger

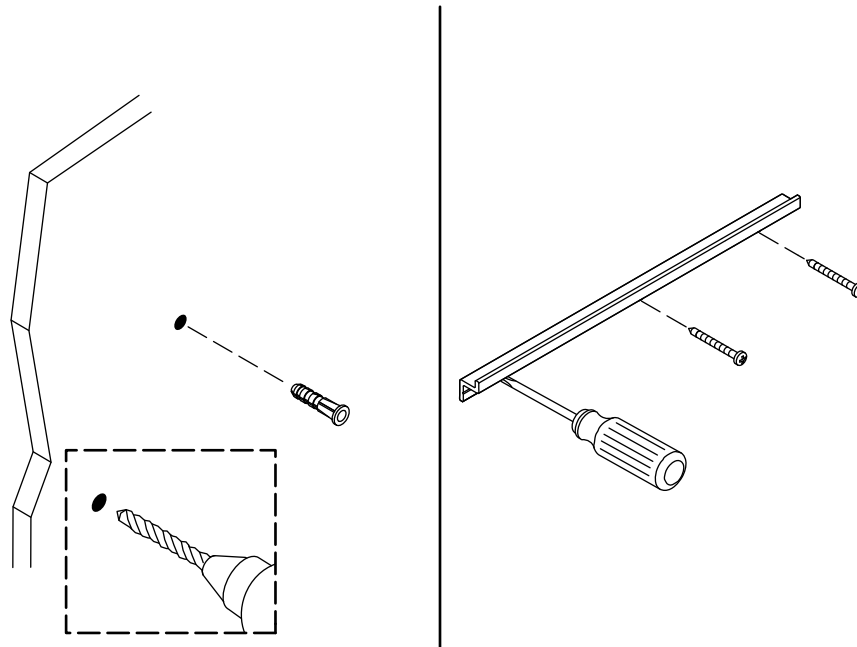

**CAUTION: Risk of personal injury.** This product is heavy. Get assistance lifting and moving the product.

- ☐ With help, lift and hold the cabinet in position on the wall.
- ☐ Position the bottom hanger in place under the cabinet on the wall, centered with the centerline of the cabinet.
- ☐ Verify that the cabinet and hanger are level.
- ☐ With help, set the cabinet down onto a padded surface.
- ☐ If the mounting-holes have not been marked, measure and mark the mounting-hole locations for the bottom hanger(s).
- ☐ Drill 6 mm pilot holes at the marked mounting-hole locations.
- ☐ Install the provided wall anchors.
- ☐ Secure the hanger with the provided ST3.5X35 screws.


### 3. Install the Cabinet

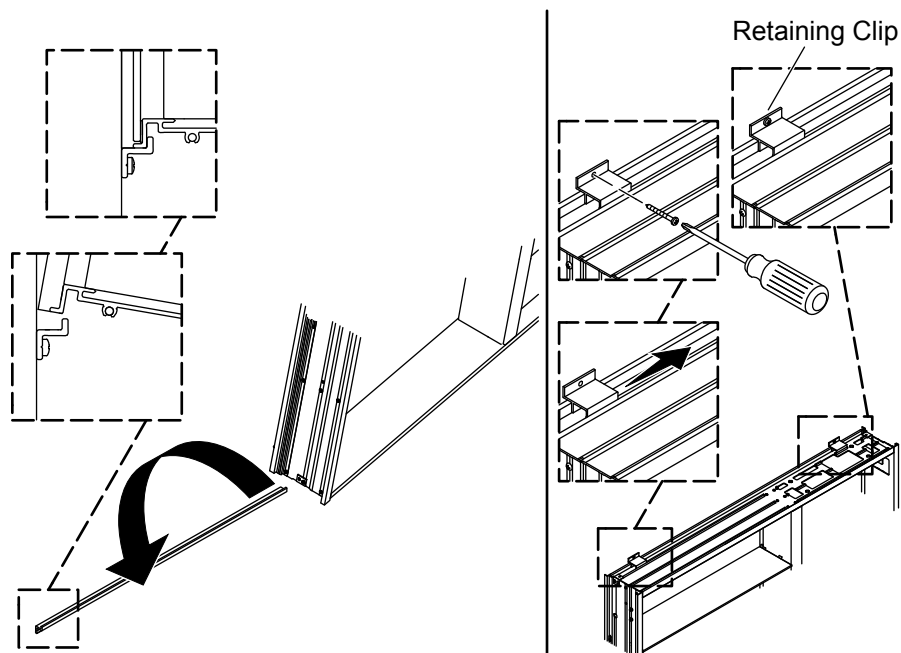

**CAUTION: Risk of personal injury.** This product is heavy. Get assistance lifting and moving the product.

- ☐ With help, lift the cabinet and set the bottom of the cabinet onto the hanger. Verify that the bottom of the cabinet hooks and engages the hanger.
- ☐ From the center of the cabinet, insert the top retaining clips into the channel and position a retaining clip to each side of the cabinet.
- ☐ Tilt the top of the cabinet and hold against the wall to mark the mounting-holes for the retaining clips.
- ☐ Drill 6 mm pilot holes at the marked mounting-hole locations.
- ☐ Install the provided wall anchors.
- ☐ Tilt the top of the cabinet back against the wall and align the holes in the retaining clips with the mounting-holes.
- ☐ Secure the retaining clips with the provided ST3.5X35 screws.

## 4. Connect the Electrical Supply Wires

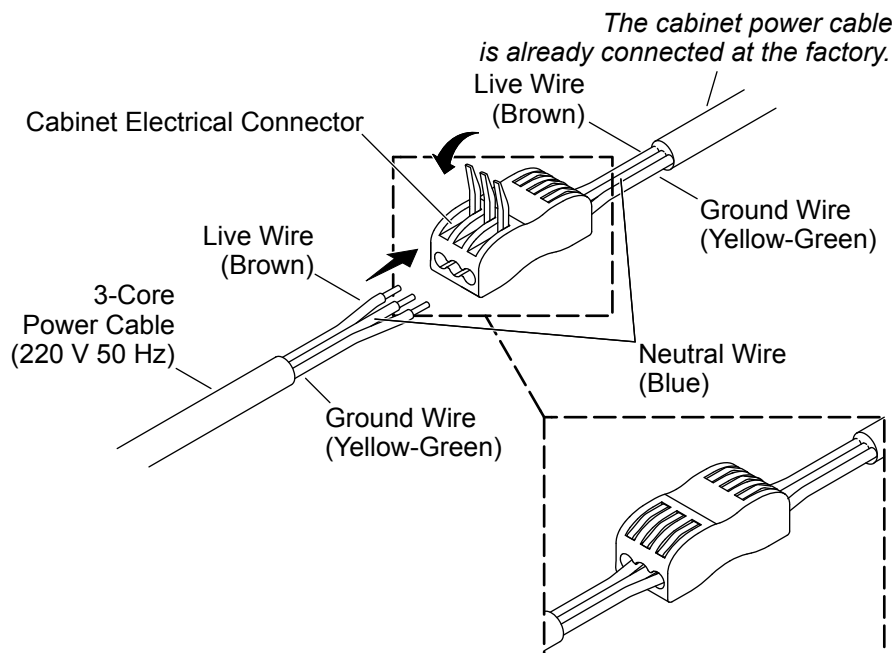

**⚠ WARNING: Risk of electric shock.** A qualified electrician should make all electrical connections.


**⚠ WARNING: Risk of electric shock.** Disconnect the power before performing the following procedures.

**NOTICE:** A qualified electrician must install the 220-240 V, 50-60 Hz 15 A RCD protected circuit.

**NOTE:** Electrical appliances connected to the electrical outlet should not exceed 2000 W.

□ Connect the 3-core power cable from the wall to the cabinet electrical connector as shown.


## 5. Install the Side Mirrors and Top Cover

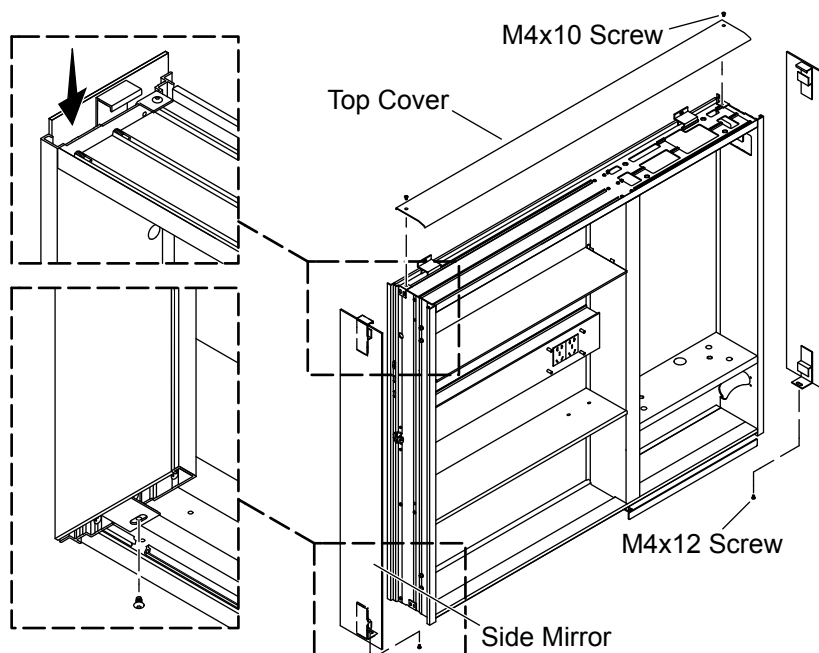

**NOTE:** Your product may appear different from the one illustrated. The installation procedure is the same.

- ☐ Install the side mirrors with the provided M4x12 screws.
- ☐ Install the top cover with the provided M4x10 screws.

## 6. Adjust the Door

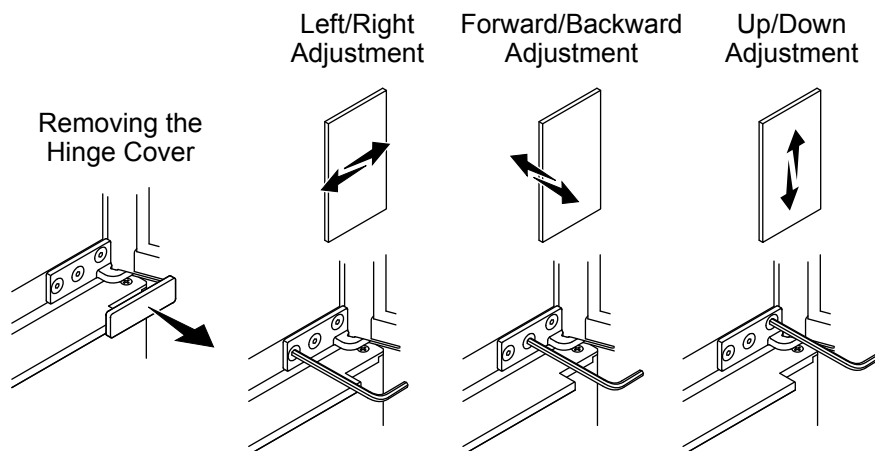

**NOTE:** The hinges can be adjusted for proper door functionality and alignment.

### Removing the Hinge Cover

- ☐ Remove the hinge cover to access the adjustment screws.

### Left/Right Adjustment

- ☐ Tighten or loosen the front screw to adjust the door horizontally.


### Forward/Backward Adjustment

- ☐ Tighten or loosen the rear screw to adjust the door depth.

### Up/Down Adjustment

- ☐ Loosen the two screws holding the hinge to the cabinet. Adjust the height of the door and tighten the screws to secure the door in the desired position.


## 7. Install the Shelves

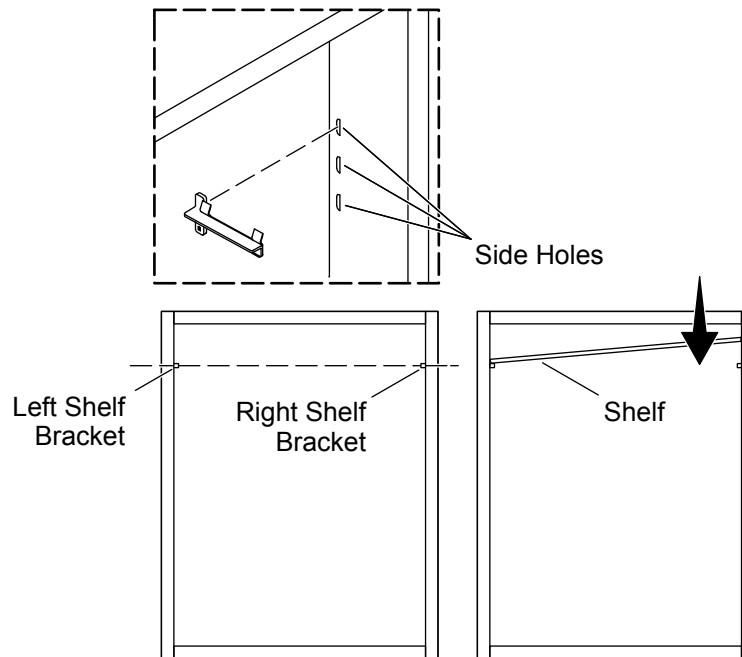

**CAUTION: Risk of property damage.** Maximum shelf load: 12.1 lbs (5.5 kg).

- ☐ Insert the left and right shelf brackets into the side holes.
- ☐ Verify that the shelf brackets on both sides of the cabinet are aligned.
- ☐ Position one end of the shelf onto one shelf bracket and then press the other end of the shelf down onto the opposite shelf bracket.


## 8. Install the Accessories

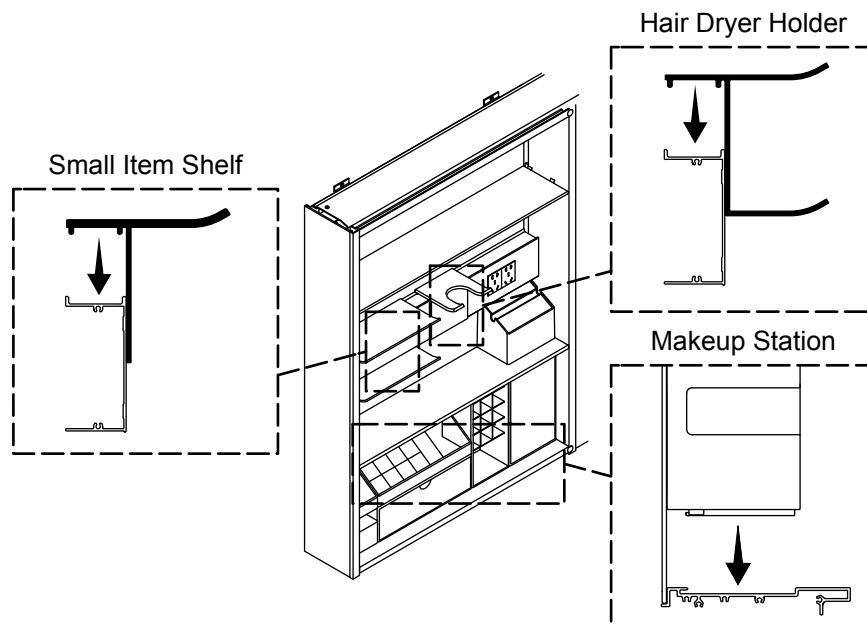

**⚠ CAUTION: Risk of property damage.** Maximum small item shelf load: 3.3 lbs (1.5 kg) per shelf.

- ☐ Hang the small item shelf onto the utility bar.
- ☐ Hang the hair dryer holder onto the utility bar.
- ☐ Install the makeup station components.

## Operating the Light

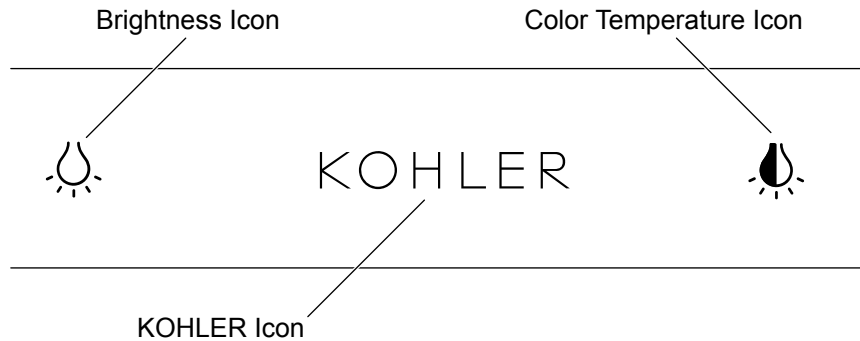

### Manual Mode:

- When the light is OFF, press the KOHLER icon to turn ON the light and anti-fog film. The color of all three icons will change to white. When the brightness and color temperature icons are pressed, the color of the icon being pressed will change to blue, and when released, the color of the icon will change back to white.
- When the light is ON, press the KOHLER icon to turn OFF the light. The anti-fog film will automatically turn OFF 30 minutes later. The brightness and color temperature icons will turn OFF and the KOHLER icon will turn white at 50% brightness.
- Press and hold the KOHLER icon for 2 seconds to enter automatic mode.

### Automatic Mode:


- When the light is OFF, approaching the mirror cabinet will turn ON the light and anti-fog film. The brightness and color temperature icons will change to blue, and the KOHLER icon will change to white. When the brightness and color temperature icons are pressed, the color of the icon being pressed will change to white, and when released, the icon color will change back to blue.
- When leaving, after approximately 3 minutes, the light slowly turns off and the icons will turn OFF. The anti-fog film will automatically turn OFF 30 minutes later.
- When the light is ON, press the KOHLER icon to turn OFF the light and enter manual mode.
- When the light is OFF, press the KOHLER icon to turn ON the light and enter manual mode.
- Press and hold the KOHLER icon for 2 seconds to enter manual mode.

### Backlight

- Open the mirror door and the light turns ON.
- Close the mirror door and the light turns OFF.



## 9. Adjust the Refrigerator Temperature

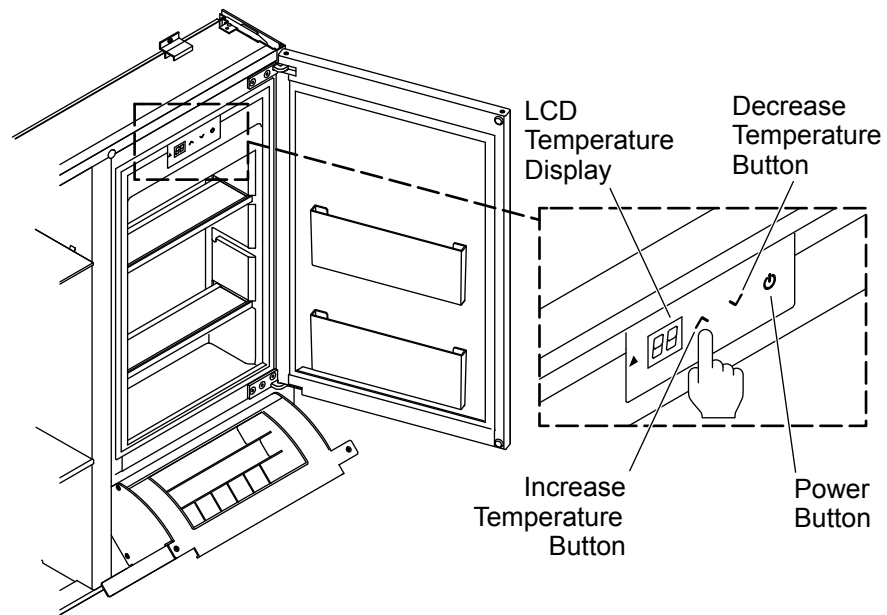

### Turn the Refrigerator ON/OFF

- ☐ Press the power button to turn the refrigerator ON.
- ☐ Press the power button to turn the refrigerator OFF.

### Change the Refrigerator Temperature

- ☐ Press the increase temperature button to increase the refrigerator temperature.
- ☐ Press the decrease temperature button to decrease the refrigerator temperature.





[kohler.com](https://www.kohler.com)

THE BOLD LOOK  
OF **KOHLER**®

©2024 Kohler Co.



1585233-T2

**1585233-T2-A**