

# 快速参考指南

新悦3.0遥控器

THE BOLD LOOK  
OF **KOHLER**®

## 重要信息

---

使用前请阅读所有说明

 警告：存在产品损坏风险。请勿将遥控器放置在可能被水溅到的位置。请勿将遥控器浸入水中或其他液体中。

 警告：存在产品损坏风险。使用遥控器时，避免剧烈用力按压或频繁按压图标区域。

**重要信息！为了避免受到其他设备的干扰，应将遥控器放置在距离干手机或吹风机等电器足够远的位置。**

**重要信息！使用遥控器时请小心轻放，避免摔落或损坏。使用后将遥控器放回至遥控器基座上。**

请勿对非充电电池进行充电。长时间不使用遥控器时，应将遥控器电池取出。对于电量已耗尽的电池，应从遥控器中取出并妥善处理。

## 遥控器设置

---

**注：** 遥控器必须电量充足才能正常工作。当遥控器需要更换电池时，遥控器上的电量 LED 灯将闪烁红色。


**注：** 遥控器必须先与坐便器配对，方可使用。

**注：** 当遥控器未配对或超出坐便器遥控范围时，若按遥控器上的“前”、“后”、“左”或“右”图标中的任何一个，遥控器上的所有 LED 灯将会缓慢闪烁。

**注：** 坐便器仅能与一个遥控器配对。

- 确认四节 5 号电池已正确安装在遥控器中。请参阅“更换遥控器电池”章节。
- 确认遥控器靠近坐便器。
- 确认所有其他遥控器已从坐便器区域移出。
- 确认坐便器电源线已插入插座。
- 长按遥控器上的“停止”图标，直至所有 LED 灯都亮起。遥控器上的 LED 灯将从左到右依次开始闪烁一次，然后如此循环闪烁。
- 在大约 30 秒内，同时长按坐便器侧按键上的“女用”和“臀洗”图标，直至听到一声蜂鸣声。
- 遥控器上的所有 LED 灯均停止闪烁后，表示遥控器已配对。
- 若遥控器休眠时（遥控器上的触摸按键不可用），可按遥控器上的“前”、“后”、“左”或“右”图标中的任何一个来唤醒遥控器。

# 使用说明 - 遥控器 (适用于 K-37981T-\*\*/K-37982T-\*\*)

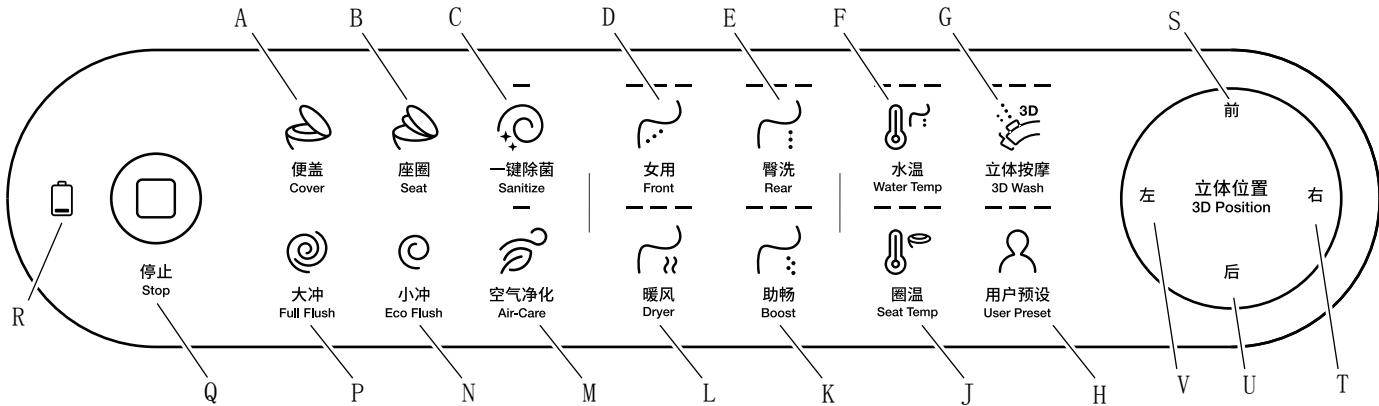

遥控器 (适用于 K-37981T-\*\*/K-37982T-\*\*)

**⚠ 警告:** 存在产品损坏风险。使用遥控器时, 避免剧烈用力按压或频繁按压图标区域。

**重要信息!** 使用遥控器时请小心轻放, 避免摔落或损坏。使用后将遥控器放回至遥控器基座上。

**重要信息!** 若使用遥控器启用坐便器功能, 遥控器必须电量充足并且已与坐便器配对。请参阅“遥控器设置”章节。

**注:** 使用遥控器可启用所述功能。大冲、女用、臀洗和停止功能也可以通过坐便器侧按键启动。

**注:** 对于具有多个档位的功能, 按图标可使当前档位调整为更高一个档位。若功能已设为最高一个档位, 按图标将会停用此功能或者将功能调整为更低一个档位。上次使用的设置将被保存, 以供下次使用。

**(A) - 便盖:** 座圈未有用户落座时, 按此图标可打开或合上盖板。

**(B) - 座圈:** 座圈未有用户落座时, 按此图标可抬起或降下座圈。

**(C) - 一键除菌:** 座圈未有用户落座时, 按此图标可启动冲水, 用紫外线和除菌水对喷管进行清洁, 并激活坐便器缸体内侧喷洒除菌水雾的功能。当用户落座或按“停止”图标时, 除菌过程将结束。

**(D) - 女用:** 按此图标可启用女性冲洗功能和调节女性冲洗水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“停止”图标停止此功能。

**(E) - 臀洗:** 按此图标可启用臀洗功能和调节臀洗水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“停止”图标停止此功能。

**(F) - 水温:** 按此图标可调节喷水温度。有五个档位。当所有“水温” LED 灯均熄灭时, 水温约77°F (25°C)。

**(G) - 立体按摩:** 臀洗功能有五种模式: 普通模式、移动冲洗、固定脉冲、移动脉冲和3D冲洗。在臀洗功能激活时, 按此图标可依次切换模式。女性冲洗功能有两种模式: 普通模式和脉冲冲洗。在女性冲洗功能激活时, 按此图标可切换模式。助畅功能有四种模式: 普通模式、移动模式、固定脉冲、移动脉冲。在助畅功能激活时, 按此图标可以依次切换模式。

**(H) - 用户预设:** 预设功能允许三位用户保存其功能设置偏好, 按此图标可启用已保存的用户偏好设置。再次按此图标, 直至另一个“用户预设”LED灯亮起, 可切换至第二个或第三个用户预设。

**(J) - 圈温:** 按此图标可调节加热座圈温度。有五个档位。当所有“**圈温**” LED 灯均熄灭时，座圈加热将关闭。

**(K) - 助畅:** 用户落座时，按此键可启用助畅功能或调整助畅水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“**停止**”图标停止此功能。

**(L) - 暖风:** 用户落座时，按此图标可启用暖风功能或调节暖风温度。有五个档位。此功能将在大约 4 分钟后停止。用户可按“**停止**”图标停止此功能。

**(M) - 空气净化:** 按此图标可启用空气净化功能。按“**停止**”图标停止此功能。

**(N) - 小冲:** 按此图标可启用小冲冲水，即用 0.8 加仑（3 升）的水量冲洗坐便器。

**(P) - 大冲:** 按此图标可启用大冲冲水，即用 1.0 加仑（3.8 升）的水量冲洗坐便器。

**(Q) - 停止:** 按此图标可停止任何已激活的清洗功能、暖风、手动喷管清洁或空气净化功能。

**(R) - 电量 LED 灯:** 指示遥控器电池电量状态。若电量 LED 灯闪烁，则表示遥控器需要更换电池。请参阅“**更换遥控器电池**”章节。


**(S) - 前:** 在臀洗或助畅功能激活时，按此图标可使后喷管向前移动。为了便于手动清洁后喷管，用户可以长按此图标以使后喷管伸出。按“**停止**”图标可使后喷管缩回。

**(T) - 右:** 在臀洗或助畅功能激活时，按此图标可使后喷管向右侧转动。

**(U) - 后:** 在臀洗或助畅功能激活时，按此图标可使后喷管向后移动。为了便于手动清洁后喷管，用户可以长按此图标以使后喷管缩回。

**(V) - 左:** 在臀洗或助畅功能激活时，按此图标可使后喷管向左侧转动。

# 使用说明 - 遥控器 (适用于 K-37983T-\*\*/K-37984T-\*\*)

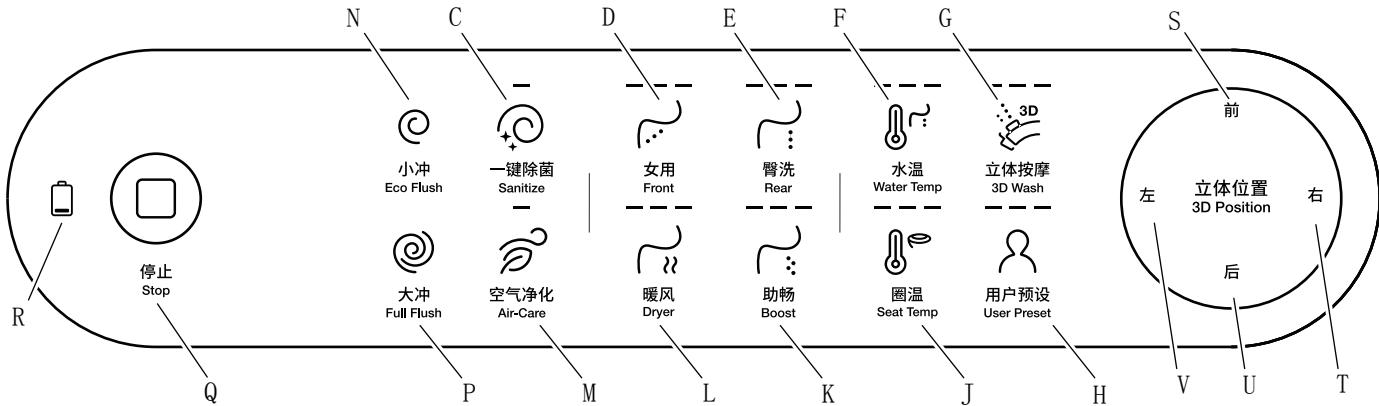

遥控器 (适用于 K-37983T-\*\*/K-37984T-\*\*)

**⚠ 警告:** 存在产品损坏风险。使用遥控器时, 避免剧烈用力按压或频繁按压图标区域。

**重要信息!** 使用遥控器时请小心轻放, 避免摔落或损坏。使用后将遥控器放回至遥控器基座上。

**重要信息!** 若使用遥控器启用坐便器功能, 遥控器必须电池电量充足并且已与坐便器配对。请参阅“遥控器设置”章节。

**注:** 使用遥控器可启用所述功能。大冲、女用、臀洗和停止功能也可以通过坐便器侧按键启动。

**注:** 对于具有多个档位的功能, 按图标可使当前档位调整为更高一个档位。若功能已设为最高一个档位, 按图标将会停用此功能或者将功能调整为更低一个档位。上次使用的设置将被保存, 以供下次使用。

**注:** 对于 K-37983T-\*\*/K-37984T-\*\*: 无自动座圈/盖板功能。

**(C) - 一键除菌:** 座圈未有用户落座时, 按此图标可启动冲水, 用紫外线和除菌水对喷管进行清洁, 并激活坐便器缸体内侧喷洒除菌水雾的功能。当用户落座或按“停止”图标时, 除菌过程将结束。

**(D) - 女用:** 按此图标可启用女性冲洗功能和调节女性冲洗水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“停止”图标停止此功能。

**(E) - 臀洗:** 按此图标可启用臀洗功能和调节臀洗水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“停止”图标停止此功能。

**(F) - 水温:** 按此图标可调节喷水温度。有五个档位。当所有“水温” LED 灯均熄灭时, 水温约 77°F (25°C)。

**(G) - 立体按摩:** 臀洗功能有五种模式: 普通模式、移动冲洗、固定脉冲、移动脉冲和 3D 冲洗。在臀洗功能激活时, 按此图标可依次切换模式。女性冲洗功能有两种模式: 普通模式和脉冲冲洗。在女性冲洗功能激活时, 按此图标可切换模式。助畅功能有四种模式: 普通模式、移动模式、固定脉冲、移动脉冲。在助畅功能激活时, 按此图标可以依次切换模式。

**(H) - 用户预设:** 预设功能允许三位用户保存其功能设置偏好, 包括冲洗模式、水压、水温和坐圈温度。按此图标可启用已保存的用户偏好设置。再次按此图标, 直至另一个“用户预设” LED 灯亮起, 可切换至第二个或第三个用户预设。

**(I) - 圈温:** 按此图标可调节加热座圈温度。有五个档位。当所有“圈温” LED 灯均熄灭时, 座圈加热将关闭。

**(K) - 助畅:** 用户落座时，按此键可启用助畅功能或调整助畅水压。有五个档位。此功能将在大约 5 分钟后停止。用户可按“停止”图标停止此功能。

**(L) - 暖风:** 用户落座时，按此图标可启用暖风功能或调节暖风温度。有五个档位。此功能将在大约 4 分钟后停止。用户可按“停止”图标停止此功能。

**(M) - 空气净化:** 按此图标可启用空气净化功能。按“停止”图标停止此功能。

**(N) - 小冲:** 按此图标可启用小冲冲水，即用 0.8 加仑（3 升）的水量冲洗坐便器。

**(P) - 大冲:** 按此图标可启用大冲冲水，即用 1.0 加仑（3.8 升）的水量冲洗坐便器。

**(Q) - 停止:** 按此图标可停止任何已激活的清洗功能、暖风、手动喷管清洁或空气净化功能。

**(R) - 电量 LED 灯:** 指示遥控器电池电量状态。若电量 LED 灯闪烁，则表示遥控器需要更换电池。请参阅“更换遥控器电池”章节。

**(S) - 前:** 在臀洗或助畅功能激活时，按此图标可使后喷管向前移动。为了便于手动清洁后喷管，用户可以长按此图标以使后喷管伸出。按“停止”图标可使后喷管缩回。

**(T) - 右:** 在臀洗或助畅功能激活时，按此图标可使后喷管向右侧转动。

**(U) - 后:** 在臀洗或助畅功能激活时，按此图标可使后喷管向后移动。为了便于手动清洁后喷管，用户可以长按此图标以使后喷管缩回。

**(V) - 左:** 在臀洗或助畅功能激活时，按此图标可使后喷管向左侧转动。

## 用户预设

---

**注：**按“**用户预设**”图标可切换三位用户的预设偏好。“**用户预设**” LED 灯将会指示所选的用户预设。

### 设置用户预设

- 按“**用户预设**”图标可循环选择用户 1、用户 2 或用户 3。
- 根据偏好调整各项功能设置。
- 长按“**用户预设**”图标约 2 秒以确认保存预设。所有“**用户预设**” LED 灯均会闪烁一次，表示已为所选用户保存当前设置。

### 使用用户预设

- 按“**用户预设**”图标时，已保存的偏好设置将会启用。
- 按“**用户预设**”图标可切换用户预设。

## 启用/禁用自动功能

---

**注:** 关于出厂时启用或禁用的功能信息,请参阅《用户指南》中的“默认设置”章节。

### 盖板打开/合上 (适用于 K-37981T-\*\*/K-37982T-\*\*)

- 启用后,当用户接近坐便器时,坐便器盖板将会自动打开。盖板将会在坐便器使用完毕约3分钟后自动合上。
- 长按坐便器侧按键上的“大冲”图标,直至夜灯闪烁三次并发出一声短鸣。
- 长按遥控器上的“便盖”图标,直至所有“立体按摩”LED灯均亮起。松开然后再短按此图标,以更改设置。
- 若盖板感应设置为短距离,从左至右的第一个“立体按摩”LED灯将会亮起;若盖板感应设置为中等距离,第二个“立体按摩”LED灯将会亮起;若盖板感应设置为长距离,第三个“立体按摩”LED灯将会亮起。
- 短鸣一声和一个“立体按摩”LED灯亮起表示此功能已启用。长鸣一声且所有“立体按摩”LED灯均熄灭表示此功能已禁用。

### 自动冲水

- 启用后,坐便器将会在用户站起、座圈降下或者坐便器正面最后一次检测到动作之后约60秒时自动冲水。
- 长按坐便器侧按键上的“大冲”图标,直至夜灯闪烁三次并发出一声短鸣。
- 长按遥控器上的“大冲”图标,直至所有“用户预设”LED灯均亮起。松开然后再短按此图标,以更改设置。
- 若设置为关盖自动冲水,中间的“用户预设”LED灯将会亮起。若设置为自动冲水(不关盖),三个“用户预设”LED灯均会亮起。
- 短鸣一声和中间的“用户预设”LED灯亮起表示关盖自动冲水功能已启用。长鸣一声且所有“用户预设”LED灯均亮起表示自动冲水(不关盖)功能已启用。长鸣一声且所有“用户预设”LED灯均熄灭表示自动冲水功能已禁用。

### 关盖自动冲水的关盖延时设置

- 若关盖延时设置为短、中或长,且关盖自动冲水功能启用时,坐便器将会在检测到用户离座时延迟短时间、中等时间或长时间后进行自动关盖,然后冲水。
- 长按坐便器侧按键上的“大冲”图标,直至夜灯闪烁三次并发出一声短鸣。
- 长按遥控器上的“座圈”图标,直至所有“女用”LED灯均亮起。松开然后再短按此图标,以更改设置。
- 若关盖延时设置为“短”,从左至右的第一个“女用”LED灯将会亮起;若关盖延时设置为“中”,第二个“女用”LED灯将会亮起;若关盖延时设置为“长”,第三个“女用”LED灯将会亮起。

### 空气净化

- 启用后,坐便器将会在检测到用户落座时自动激活此功能。
- 长按坐便器侧按键上的“大冲”图标,直至夜灯闪烁三次并发出一声短鸣。
- 长按遥控器上的“空气净化”图标,直至所有“圈温”LED灯均亮起。松开再短按此图标,以更改设置。
- 短鸣一声且所有“圈温”LED灯均亮起表示此功能已启用。长鸣一声且所有“圈温”LED灯均熄灭表示此功能已禁用。

### 自动座圈温度/水温

- 启用后,座圈温度和水温将自动根据室温进行调节。
- 长按坐便器侧按键上的“大冲”图标,直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“水温”图标,直至所有“水温”和“圈温”LED灯均亮起。松开再短按此图标,以更改设置。
- 短鸣一声且所有“水温”和“圈温”LED灯均亮起表示此功能已启用。长鸣一声且所有“水温”和“圈温”LED灯均熄灭表示此功能已禁用。

## 夜灯

- 启用后，夜灯将在低光线亮度条件下自动亮起。
- 长按坐便器侧按键上的“**大冲**”图标，直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“**女用**”图标，直至所有“**女用**” LED 灯均亮起。松开再短按此图标，以更改设置。
- 短鸣一声且所有“**女用**” LED 灯均亮起表示此功能已启用。长鸣一声且所有“**女用**” LED 灯均熄灭表示此功能已禁用。

## 自动紫外线除菌

- 此功能启用且坐便器已长时间无人使用时，坐便器将自动开启对喷管进行紫外线除菌。紫外线除菌功能在 24 小时内仅会激活一次。
- 长按坐便器侧按键上的“**大冲**”图标，直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“**一键除菌**”图标，直至所有“**水温**” LED 灯均亮起。松开再短按此图标，以更改设置。
- 短鸣一声且所有“**水温**” LED 灯均亮起表示此功能已启用。长鸣一声且所有“**水温**” LED 灯均熄灭表示此功能已禁用。

## 节能

- 启用后，当坐便器无人使用时，坐便器将会降低座圈温度以节能。禁用后，座圈将会保持在设置的温度档位，即使无人使用时也是如此。
- 长按坐便器侧按键上的“**大冲**”图标，直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“**圈温**”图标，直至所有“**圈温**” LED 灯均亮起。松开再短按此图标，以更改设置。
- 短鸣一声且所有“**圈温**” LED 灯均亮起表示此功能已启用。长鸣一声且所有“**圈温**” LED 灯均熄灭表示此功能已禁用。


## 长时间如厕提醒

- 启用后，若用户已长时间如厕，坐便器将会发出几声蜂鸣声以作提醒。
- 长按坐便器侧按键上的“**大冲**”图标，直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“**立体按摩**”图标，直至所有“**立体按摩**” LED 灯均亮起。松开再短按此图标，以更改设置。
- 短鸣一声且所有“**立体按摩**” LED 灯均亮起表示此功能已启用。长鸣一声且所有“**立体按摩**” LED 灯均熄灭表示此功能已禁用。

## 脚踏感应

- **适用于 K-37981T-\*\*/K-37982T-\*\*：** 启用此功能后，若盖板处于打开状态且检测到用户脚部踏入脚感区域，坐便器将会自动抬起座圈、降下座圈、冲水或合上盖板。
- **适用于 K-37983T-\*\*/K-37984T-\*\*：** 启用此功能后，当检测到用户脚部踏入脚感区域时，坐便器将会自动冲水。
- 长按坐便器侧按键上的“**大冲**”图标，直至夜灯闪烁三次并发出短鸣一声。
- 长按遥控器上的“**臀洗**”图标，直至所有“**臀洗**” LED 灯均亮起。松开再短按此图标，以更改设置。
- 短鸣一声且所有“**臀洗**” LED 灯均亮起表示此功能已启用。长鸣一声且所有“**臀洗**” LED 灯均熄灭表示此功能已禁用。

## 更换遥控器电池

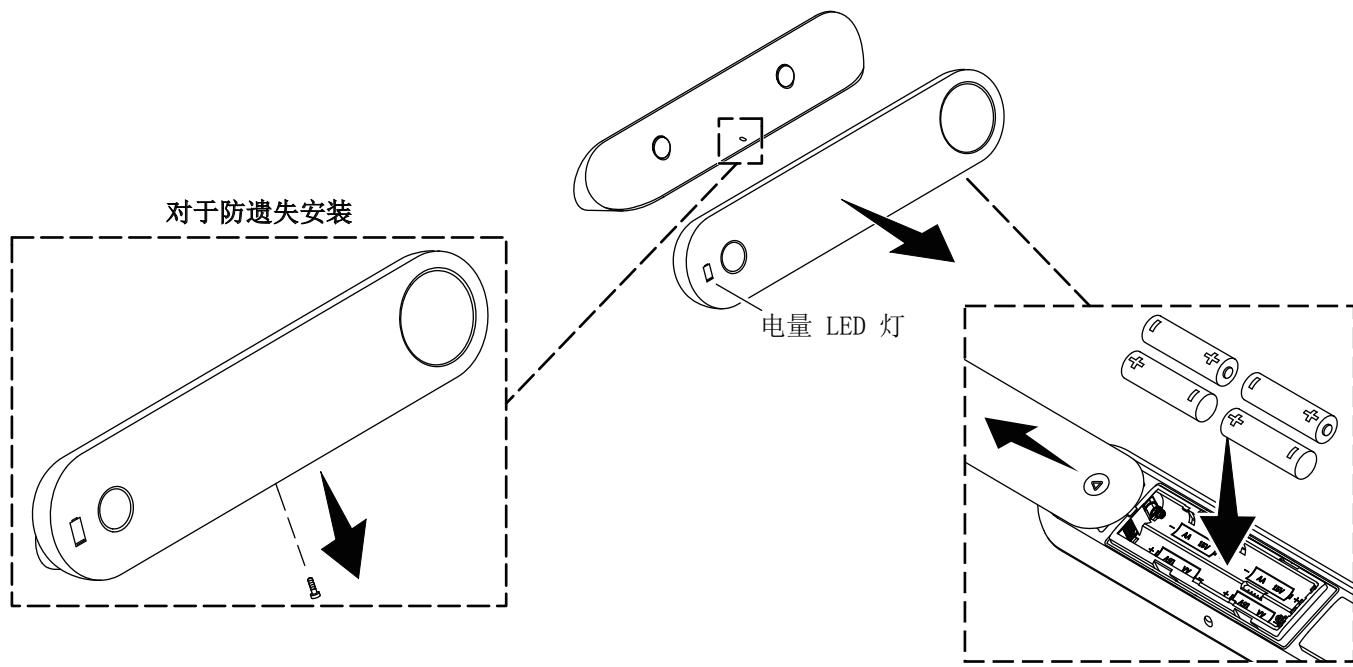

**注:** 当遥控器中的电池即将耗尽需要更换时，电量 LED 灯将闪烁红色。

- **对于防遗失安装:** 如图所示卸下螺丝。
- 从遥控器基座上取下遥控器。
- 轻轻按压箭头区域周围，并如图所示滑动，以取下遥控器电池盖。
- 取出遥控器电池。
- 按图示朝向安装替换电池。
- 将遥控器电池盖重新安装到位。
- 将遥控器放置在遥控器基座上。
- **对于防遗失安装:** 重新安装螺丝，将遥控器固定到遥控器基座上。



英文版请扫二维码

Please scan the QR code for English manuals.

# Quick Reference Guide

## Karing 3.0 Remote Control

### Important Information

---

#### READ ALL INSTRUCTIONS BEFORE USING

-  **WARNING: Risk of product damage.** Do not place the remote control in a location that could be splashed with water. Do not immerse the remote control into water or other liquids.
-  **WARNING: Risk of product damage.** Avoid pressing the icons too hard or repeatedly when using the remote control.

**IMPORTANT!** To avoid interference from other devices, keep the remote control in a location far enough away from the electrical appliances such as hand dryer or hair dryer.

**IMPORTANT!** Handle the remote control carefully to avoid dropping or damaging the remote control. Place the remote control back to the docking station after use.

Do not charge non-rechargeable batteries. Remove batteries from the remote control that is not in use for a long time. Remove depleted batteries from the remote control and dispose of the depleted batteries properly.

## Remote Control Setup

**NOTE:** The remote control must be adequately powered to operate. The battery LED on the remote control will blink red when the remote control batteries need to be replaced.


**NOTE:** A remote control must be paired with the toilet before use.

**NOTE:** All the light LEDs on the remote control will blink slowly when the remote control is not paired or is out of range of the toilet and any of the “**Forth**”, “**Back**”, “**Left**”, or “**Right**” icons on the remote control is pressed.

**NOTE:** Only one remote control can be paired with the toilet at a time.

- Verify that four AA batteries are installed correctly in the remote control. Refer to the “Replacing the Remote Control Batteries” section.
- Verify that the remote control is near the toilet.
- Verify that all other remote controls have been removed from the toilet area.
- Verify that the toilet power cord has been plugged into the electrical outlet.
- Press and hold the “**Stop**” icon on the remote control until all the light LEDs are on. From left to right, the light LEDs on the remote control will start blinking once consecutively and then repeat the cycle.
- Within approximately 30 seconds, simultaneously press and hold the “**Front**” and “**Rear**” icons on the toilet side button until a beep is heard.
- When all the light LEDs on the remote control stop blinking, the remote control has been paired.
- If the remote control is in sleep mode (when the touch buttons on the remote are not available), you can wake it up by pressing any of the icons for “**Forth**”, “**Back**”, “**Left**”, or “**Right**” on the remote control.

## Directions for Use - Remote Control (For K-37981T-\*\* / K-37982T-\*\*)

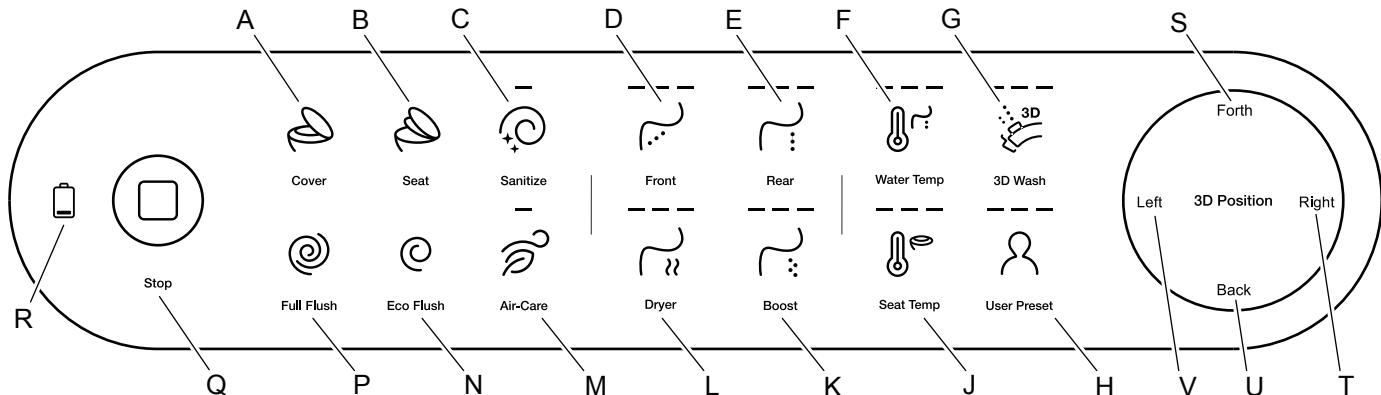

**Remote Control (For K-37981T-\*\* / K-37982T-\*\*)**

**⚠ WARNING: Risk of product damage.** Avoid pressing the icons too hard or repeatedly when using the remote control.

**IMPORTANT!** Handle the remote control carefully to avoid dropping or damaging the remote control. Place the remote control back to the docking station after use.

**IMPORTANT!** To activate features using the remote control, the remote control must be adequately powered, and paired with the toilet. Refer to the "Remote Control Setup" section.

**NOTE:** Features can be activated using the remote control. The full flush, front wash, rear wash and stop features can be activated using the toilet side button.

**NOTE:** For features with multiple settings, press the icon to move the setting one level higher. If the feature is set at the highest level, pressing the icon will deactivate the feature or adjust the feature to a lower setting. The last setting used will be saved for the next use.

**(A) - Cover:** With the seat unoccupied, press to open or close the seat cover.

**(B) - Seat:** With the seat unoccupied, press to raise or lower the seat.

**(C) - Sanitize:** With the seat unoccupied, press to activate flush and run the cleaning cycle on the wand with UV light and sterilized water, and activate sterilized water mist spray inside the bowl. When the user is seated or presses the "Stop" icon, the cleaning cycle will end.

**(D) - Front:** Press to activate the front wash feature and adjust the front wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(E) - Rear:** Press to activate the rear wash feature and adjust the rear wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(F) - Water Temp:** Press to adjust the water spray temperature. There are five settings. When all the "Water Temp" LEDs are OFF, the water temperature is about 77°F(25°C).

**(G) - 3D Wash:** There are five settings for the rear wash feature: general wash, moving wash, pulsating wash, pulsating and oscillating wash, or the 3D wash. When the rear wash feature is active, press the icon to cycle through the settings. There are two settings for the front wash feature: general wash, and pulsating wash. When the front wash feature is active, press the icon to cycle through the settings. There are four settings for the boost wash feature: general wash, moving wash, pulsating wash, pulsating and oscillating. When the boost wash feature is active, press the icon to cycle through the settings.

**(H) - User Preset:** The presets allow three users to save their feature settings. Press the icon to activate the saved user preferences. Press again until a different "User Preset" LED turns ON to change to a second or third user preset.

**(J) - Seat Temp:** Press to adjust the heated seat temperature. There are five settings. When all the "Seat Temp" LEDs are OFF, the seat heating will turn off.

**(K) - Boost:** While seated, press to activate the boost wash feature and adjust the boost wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(L) - Dryer:** While seated, press to activate the dryer or adjust the air temperature. There are five settings. The feature will stop after approximately 4 minutes. The user may press the "Stop" icon to stop the feature.

**(M) - Air-Care:** Press to activate the air-care feature. Press the "Stop" icon to deactivate.

**(N) - Eco Flush:** Press to flush the toilet with 0.8 gal (3 L).

**(P) - Full Flush:** Press to flush the toilet with 1.0 gal (3.8 L).

**(Q) - Stop:** Press to stop any activated wash features, the dryer, manual wand cleaning, or air-care feature.

**(R) - Battery LED:** Shows the status of the remote control battery power. When the battery LED flashes, the batteries need to be replaced. Refer to the "Replacing the Remote Control Batteries" section.


**(S) - Forth:** When the rear wash or boost feature is active, press the icon to move the wand position forward. To allow manual cleaning of the rear spray wand, the user may press and hold the icon to extend the rear spray wand. Press the "Stop" icon to retract the rear spray wand.

**(T) - Right:** When the rear wash or boost feature is active, press the icon to rotate the wand position to the right side.

**(U) - Back:** When the rear wash or boost feature is active, press the icon to move the wand position backward. To allow manual cleaning of the rear spray wand, the user may press and hold the icon to retract the rear spray wand.

**(V) - Left:** When the rear wash or boost feature is active, press the icon to rotate the wand position to the left side.

## Directions for Use - Remote Control (For K-37983T-\*\* / K-37984T-\*\*)

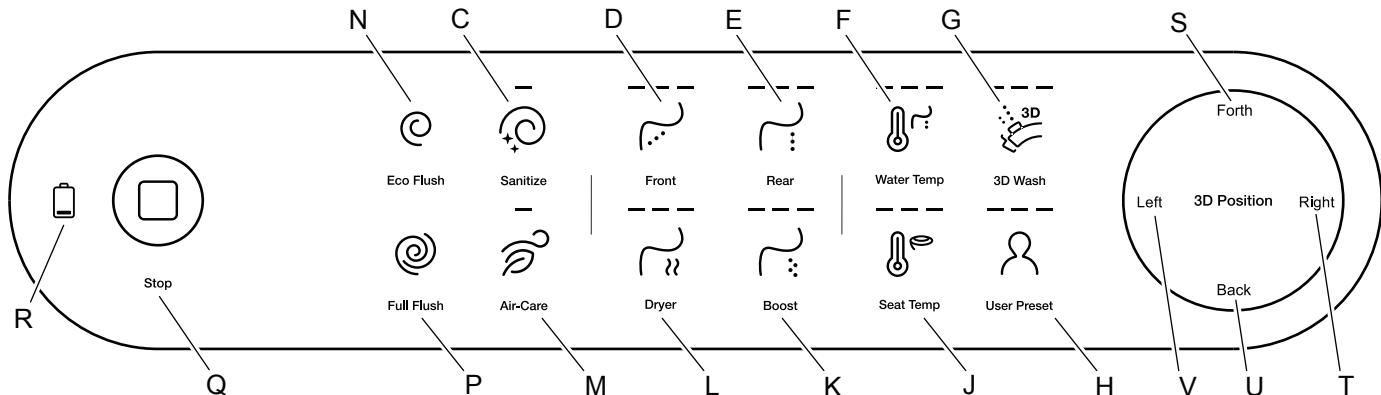

**Remote Control (For K-37983T-\*\* / K-37984T-\*\*)**

**⚠ WARNING: Risk of product damage.** Avoid pressing the icons too hard or repeatedly when using the remote control.

**IMPORTANT!** Handle the remote control carefully to avoid dropping or damaging the remote control. Place the remote control back to the docking station after use.

**IMPORTANT!** To activate features using the remote control, the remote control must be adequately powered, and paired with the toilet. Refer to the "Remote Control Setup" section.

**NOTE:** Features can be activated using the remote control. The full flush, front wash, rear wash and stop features can be activated using the toilet side button.

**NOTE:** For features with multiple settings, press the icon to move the setting one level higher. If the feature is set at the highest level, pressing the icon will deactivate the feature or adjust the feature to a lower setting. The last setting used will be saved for the next use.

**NOTE: For K-37983T-\*\* / K-37984T-\*\*:** No auto seat/cover feature is available.

**(C) - Sanitize:** With the seat unoccupied, press to activate flush and run the cleaning cycle on the wand with UV light and sterilized water, and activate sterilized water mist spray inside the bowl. When the user is seated or presses the "Stop" icon, the cleaning cycle will end.

**(D) - Front:** Press to activate the front wash feature and adjust the front wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(E) - Rear:** Press to activate the rear wash feature and adjust the rear wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(F) - Water Temp:** Press to adjust the water spray temperature. There are five settings. When all the "Water Temp" LEDs are OFF, the water temperature is about 77 F(25 C).

**(G) - 3D Wash:** There are five settings for the rear wash feature: general wash, moving wash, pulsating wash, pulsating and oscillating wash, or the 3D wash. When the rear wash feature is active, press the icon to cycle through the settings.

There are two settings for the front wash feature: general wash, and pulsating wash. When the front wash feature is active, press the icon to cycle through the settings. There are four settings for the boost wash feature: general wash, moving wash, pulsating wash, pulsating and oscillating. When the boost wash feature is active, press the icon to cycle through the settings.

**(H) - User Preset:** The presets allow three users to save their feature settings. Press the icon to activate the saved user preferences. Press again until a different "User Preset" LED turns ON to change to a second or third user preset.

**(I) - Seat Temp:** Press to adjust the heated seat temperature. There are five settings. When all the "Seat Temp" LEDs are OFF, the seat heating will turn off.

**(K) - Boost:** While seated, press to activate the boost wash feature and adjust the boost wash water pressure. There are five settings. The feature will stop after approximately 5 minutes. The user may press the "Stop" icon to stop the feature.

**(L) - Dryer:** While seated, press to activate the dryer or adjust the air temperature. There are five settings. The feature will stop after approximately 4 minutes. The user may press the "Stop" icon to stop the feature.

**(M) - Air-Care:** Press to activate the air-care feature. Press the "Stop" icon to deactivate.

**(N) - Eco Flush:** Press to flush the toilet with 0.8 gal (3 L).

**(P) - Full Flush:** Press to flush the toilet with 1.0 gal (3.8 L).

**(Q) - Stop:** Press to stop any activated wash features, the dryer, manual wand cleaning, or air-care feature.

**(R) - Battery LED:** Shows the status of the remote control battery power. When the battery LED flashes, the batteries need to be replaced. Refer to the "Replacing the Remote Control Batteries" section.

**(S) - Forth:** When the rear wash or boost feature is active, press the icon to move the wand position forward. To allow manual cleaning of the rear spray wand, the user may press and hold the icon to extend the rear spray wand. Press the "Stop" icon to retract the rear spray wand.

**(T) - Right:** When the rear wash or boost feature is active, press the icon to rotate the wand position to the right side.

**(U) - Back:** When the rear wash or boost feature is active, press the icon to move the wand position backward. To allow manual cleaning of the rear spray wand, the user may press and hold the icon to retract the rear spray wand.

**(V) - Left:** When the rear wash or boost feature is active, press the icon to rotate the wand position to the left side.

## User Presets

---

**NOTE:** Press the “User Preset” icon to cycle through the 3 user presets. The “User Preset” LED will indicate which user preset is selected.

### Setting the User Presets

- Press the “User Preset” icon to cycle through the user 1, 2, or 3.
- Adjust the features to your preferences.
- Press and hold the “User Preset” icon for approximately 2 seconds to confirm saving the preset. All the “User Preset” LEDs will flash once to confirm the current settings were saved for the selected user.

### Using the User Presets

- When the “User Preset” icon is pressed, the saved preferences will activate.
- Press the “User Preset” icon to cycle through the user presets.

## Enable/Disable Automatic Features

**NOTE:** For details about the features that come enabled or disabled from the factory, refer to the "Default Settings" section in the Homeowners Guide.

### Cover Open/Close (For K-37981T-\*\* / K-37982T-\*\*)

- When enabled, the seat cover automatically opens when the toilet is approached. The seat cover will automatically close approximately 3 minutes after the toilet has been used.
- Press and hold the "**Full Flush**" icon on the control panel until the nightlight blinks three times and a short beep sounds.
- Press and hold the "**Cover**" icon on the remote control until all the "**3D Wash**" LEDs turn ON. Release the icon, then short-press to change the setting.
- From left to right, the first "**3D Wash**" LED will be ON when the sensor is set to short distance, the second LED ON for middistance, and the third LED for long distance.
- A short beep and one "**3D Wash**" LED ON indicate that the feature is enabled. A long beep and all "**3D Wash**" LEDs OFF indicate that the feature is disabled.

### Automatic Flush

- When enabled, the toilet will automatically flush after the user stands up, lowers the seat, or approximately 60 seconds after the front of the toilet last senses motion.
- Press and hold the "**Full Flush**" icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the "**Full Flush**" icon on the remote control all the "**User Preset**" LEDs turn ON. Release the icon, then short-press to change the setting.
- The middle "**User Preset**" LED will be ON when the automatic flush with closing cover is set. All three "**User Preset**" LEDs will be ON when the automatic flush without closing cover is set.
- A short beep and the middle "**User Preset**" LED ON indicate that the automatic flush with closing cover feature is enabled. A long beep and all "**User Preset**" LEDs ON indicate that the automatic flush without closing cover feature is enabled. A long beep and all "**User Preset**" LEDs OFF indicate that the automatic flush feature is disabled.

### Time Setting for Automatic Flush with Closing Cover

- When the time for closing cover is set to short, medium or long, the toilet automatically closes the cover and flushes a short, medium, or long timeframe after the user is detected to have left the seat when the automatic flush with closing cover feature is active.
- Press and hold the "**Full Flush**" icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the "**Seat**" icon on the remote control until all the "**Front**" LEDs turn ON. Release the icon, then short-press to change the setting.
- From left to right, the first "**Front**" LED will be ON when the time is set to short timeframe, the second LED ON for medium timeframe, and the third LED for long timeframe.

### Air-Care

- When enabled, the toilet automatically activates the feature after detecting the user is seated on the toilet.
- Press and hold the "**Full Flush**" icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the "**Air-Care**" icon on the remote control until all the "**Seat Temp**" LEDs turn ON. Release the icon, then short-press to change the setting.

- A short beep and all “**Seat Temp**” LEDs ON indicate that the feature is enabled. A long beep and all “**Seat Temp**” LEDs OFF indicate that the feature is disabled.

### Automatic Seat/Water Temperature

- When enabled, the seat temperature and water temperature automatically adjust according to the room temperature.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**Water Temp**” icon on the remote control until all the “**Water Temp**” and “**Seat Temp**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**WaterTemp**” and “**Seat Temp**” LEDs ON indicate that the feature is enabled. A long beep and all “**WaterTemp**” and “**Seat Temp**” LEDs OFF indicate that the feature is disabled.

### Nightlight

- When enabled, the nightlight automatically turns on in low lighting conditions.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**Front**” icon on the remote control until all the “**Front**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**Front**” LEDs ON indicate that the feature is enabled. A long beep and all “**Front**” LEDs OFF indicate that the feature is disabled.

### Automatic UV Cleaning

- When enabled and the toilet has not been used for hours, an automatic UV cleaning cycle activates for the spray wand. The UV cleaning cycle activates only once within 24 hours.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**Sanitize**” icon on the remote control until all the “**Water Temp**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**Water Temp**” LEDs ON indicate that the feature is enabled. A long beep and all “**Water Temp**” LEDs OFF indicate that the feature is disabled.

### Energy Save

- When enabled, the toilet conserves energy by reducing the seat temperature when the toilet is not in use. When disabled, the seat will remain at the set level even when not in use.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**Seat Temp**” icon on the remote control until all the “**Seat Temp**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**Seat Temp**” LEDs ON indicate that the feature is enabled. A long beep and all “**Seat Temp**” LEDs OFF indicate that the feature is disabled.


### Prolonged Seating Indicator

- When enabled, the toilet will beep several times if the user has been on the seat for a prolonged period of time.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**3D Wash**” icon on the remote control until all the “**3D Wash**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**3D Wash**” LEDs ON indicate that the feature is enabled. A long beep and all “**3D Wash**” LEDs OFF indicate that the feature is disabled.

## Foot Sensor

- **For K-37981T-\*\* / K-37982T-\*\*:** When enabled, the cover is open, and a user's foot is detected to enter the foot sensor area, the toilet automatically raises the seat, lowers the seat, flushes, or closes the cover.
- **For K-37983T-\*\* / K-37984T-\*\*:** When enabled, the toilet automatically flushes when the user's foot is detected to enter the foot sensor area.
- Press and hold the “**Full Flush**” icon on the toilet side button until the nightlight blinks three times and a short beep sounds.
- Press and hold the “**Rear**” icon on the remote control until all the “**Rear**” LEDs turn ON. Release the icon, then short-press to change the setting.
- A short beep and all “**Rear**” LEDs ON indicate that the feature is enabled. A long beep and all “**Rear**” LEDs OFF indicate that the feature is disabled.

## Replacing the Remote Control Batteries

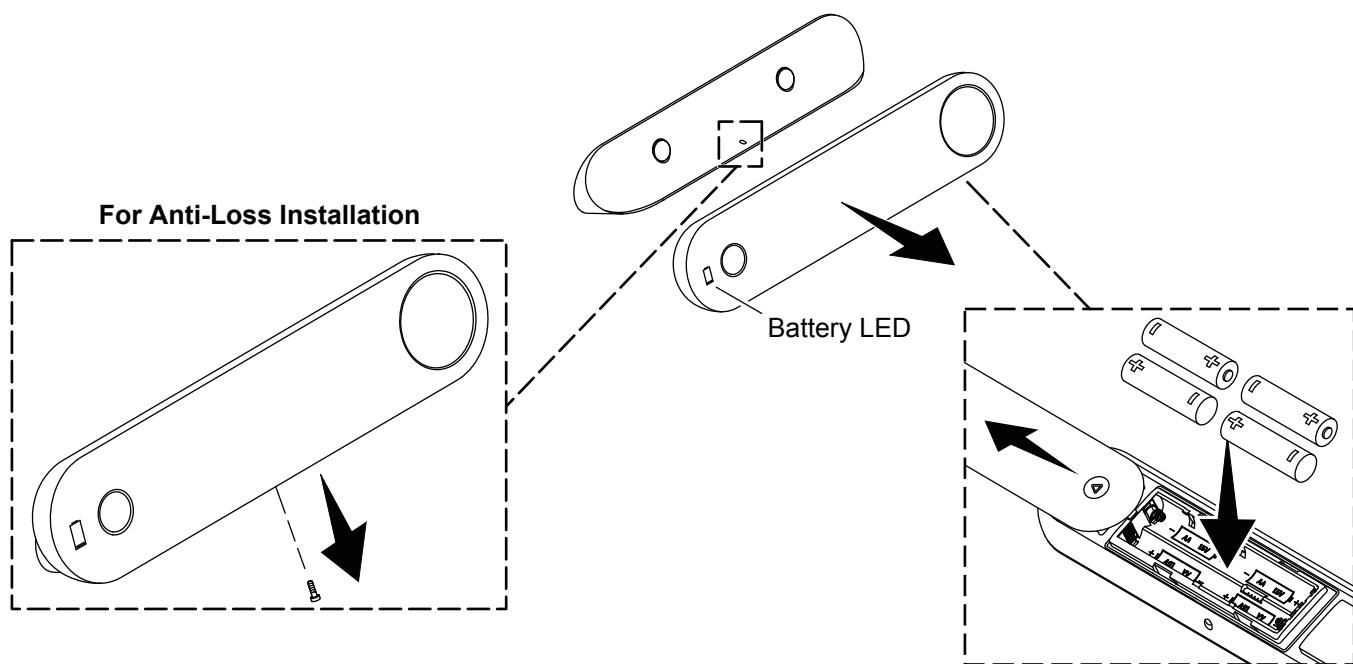

**NOTE:** The battery LED will flash red when the batteries in the remote control are nearly depleted and need to be replaced.

- For anti-loss installation:** Uninstall the screw as shown.
- Remove the remote control from the docking station.
- Press down around the arrow area and slide as shown to remove the cover to the battery compartment.
- Remove the batteries.
- Install the replacement batteries, oriented as shown.
- Reinstall the cover to the battery compartment.
- Place the remote control on the docking station.
- For anti-loss installation:** Reinstall the screw to secure the remote control onto the docking station.

[kohler.com.cn](http://kohler.com.cn)

THE BOLD LOOK  
OF **KOHLER**®

©2025 Kohler Co.



1627832-T14

1627832-T14-C