 


Guide on usage of remote controller

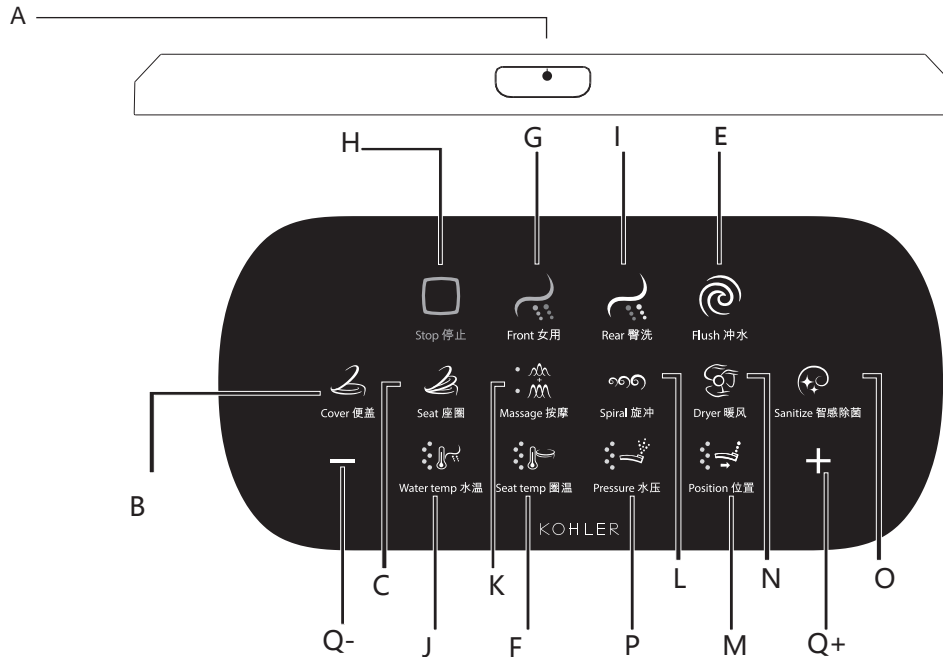

Warning: Take down the remote control from charger before pressing Start key to prevent risk of falling.

5 '!' GHUfh

Press this key to turn on the remote control. Press it again to switch on/off after start.

If the toilet is not connected after start, the icon in the third row will flicker. Connecting it successfully will stop it from flickering and enter into serviceable condition.

6 '!' CdYb#WcgY'Wtj Yf'

Under non-seating status, press this key to open/close the cover.

7 '!' CdYb#WcgY'gYUh

Under non-seating status, press this key to open/close the seat.

9 '!' : 'i gl

● Press this button to flush the toilet.

: '!' GYUhiYa d

● Press this button to adjust temp dial, press +/- (Q+/Q-) to adjust seat temp.

; '!' : fcbh

After seating, press this key to enter Front mode. After 5 minutes or so, the flush stops automatically or press the stop key to turn it off immediately.

< '!' Gfcd

● Press this key to stop the mode of Front, Rear, Dryer and Deodorization, Manual Cleaning Effuser or UV.

● Pressing this key for a long time will turn off the remote control.

=! 'FYUf

After sitting, press this key to enter Rear mode. After 5 minutes or so, the flush stops automatically or press the stop key to turn it off immediately.

The Bidet is equipped with wide oscillate function. If you want to use wide oscillate function, please hold both REAR+POWER buttons for 2s on side panel, then activate rear wash oscillate mode.

> '!' K UHf' hYa d

● Press +/- (Q+/Q-) to adjust water temp when front wash or rear wash is activated.

? '!' A UggUf Y

Under Front or Rear mode, press this key to enter the mode of mobile flushing. Press it again to enter the mode of impulse flushing. Press it at a third time, and the mode of mobile/impulse flushing will be activated at the same time. Press it at a fourth time to exit (When corresponding functions are activated, the light at the left side of icon will turn on).

@! 'GdJfU

During the operation under Rear mode, press this key to flush water in a spiral shape. The icon of Spiral mode flickers. Press it again to exit (or press "Stop" to turn it off). The icon of Spiral mode will then stop flickering.

Guide on usage of remote controller

M - Position

- Press +/- (Q+/Q-) to adjust wand position when front or rear wash is activated.

N - Dryer

After sitting, Press this button to activate dryer function after seated, After 4 minutes or so, it stops automatically or press the Stop key to turn it off immediately.

O - Sanitize

During non-seating status, short press this key to enter UV sterilization function. And the icon will flicker.

P- Water pressure


- Under Front or Rear mode, press +/- (Q+/Q-) to adjust gears of water pressure.

O - Parameter adjustment key Q+/Q-:

Only J/F/P/M function is activated, the "+/-"key shall be used to adjust related parameter.



Low voltage alarm

Caution: Please charge in time when the voltage alarm is activated.

- When the  button flickers, it indicates that the built-in battery in the remote control is used up. Put the controller on the base to charge its battery;

Pairing


Caution: Pairing can be done only under unseated status.

- When the cover is powered on normally, press the Start key at the top of the remote control. When the icon of the lowest row flickers for a long time, it means the remote control needs to be paired with the main unit.
- Press and hold the Dryer key. When the icon at the lowest row flickers, start the operation at the main unit end.
- Meanwhile press and hold the  key and  key at side keyboard. Do not release the key until hearing a short beep.
- Once the icon at the lowest row of remote control stops flickering, it means it has been paired successfully.


Communication between remote control and toilet

- If the remote control is moved away from the sensing area, the icon at the bottom row of remote control will flicker automatically (indicating a searching the signal for the toilet). When the remote is near to the toilet, the signal will be connected automatically under normal power condition. Then the icon will stop flickering when it is connected successfully.


Poweroff function

- Press and hold the  key at any time, the remote controller will enter Power off mode.

Ü^ { [ç Ä ù ^ ç] Á Õ ~ ä ^ | ä ^ ^

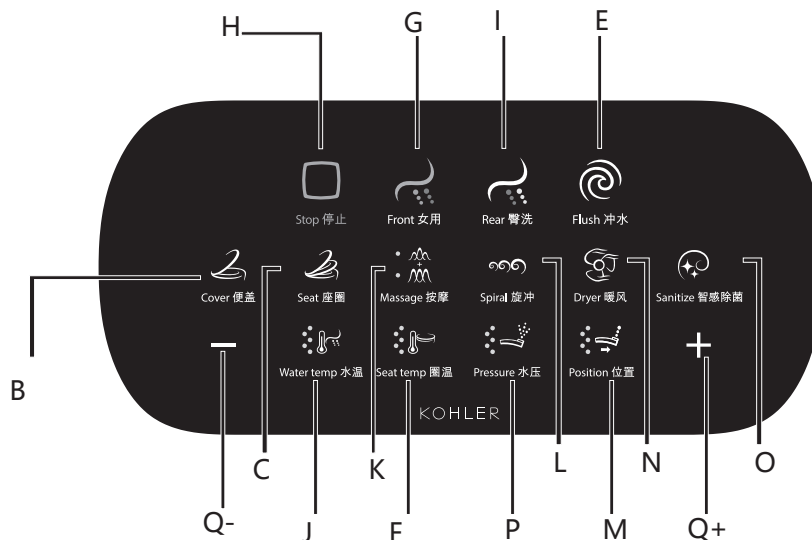 

Guide on usage of remote controller

Keep pressing the  key until a short beep is heard, and release the key only after the night lamp flickers for three times. Then change the setting of B/C/E/F/I/O by the following requirements.

B - Open/close the cover...Sensing distance setting

- Press and hold the key to set up the sensing distance for auto cover-turning:
 1. Night light quick flickers once means short distance (short beep).
 2. Night light quick flickers twice means mid distance (short beep).
 3. Night light quick flickers three times means long distance (short beep).
 4. Night light slow flickers once means turn off auto lid-turning function (long beep).

C - Seat On/Off...Deodorization function setting

- Press and hold this key to turn on/off the deodorization function.
 1. Night light quick flickers once to turn on deodorizer function (short beep).
 2. Night light slow flickers once to turn off deodorizer function (long beep).

E - Flush...Automatic flushing setting

- Press and hold this key to set up auto flush mode
 1. Slow flashing of night light once, indicates auto flush function deactivated(long pip).
 2. Quick flashing of night light once, indicates auto flush function without closing the cover activated(short pip).
 3. Quick flashing of night light twice, indicates auto flush function with closing the cover activated(short pip).

F - Seat temp...Energy saving setting


- Press and hold the key of Seat Temp to activate the function of energy saving. Press and hold it again to deactivate this function.
 1. Night light quick flickers once to turn on auto sterilization function (short beep).
 2. Night light slow flickers once to turn off auto sterilization function (long beep).

I - Rear Wash...automatic flushing with closing the cover delay time setting

- Press and hold the key to set up delay time for automatic flushing with closing the lid.
 1. Quick flashing of night light once, indicates short-level time delayed(short pip).
 2. Quick flashing of night light twice, indicates medium-level time delayed(short pip).
 3. Quick flashing of night light 3 times, indicates long-level time delayed(short pip).

O - Sanitize Setting

- Press and hold to set up the on/off status of automatic UV sterilization.
 1. Night light quick flickers once to turn on auto UV function (short beep).
 2. Night light slow flickers once to turn off auto UV function (long beep).

 
When the setting of B/C/E/F/I/O is not modified for a certain period, repeat the process that is to keep pressing the  key until a short pip is heard and release the key only after the night lamp flickers for three times before the next change of setting.

M - Position...Effuser cleaning settings

- Under non-seating status, press and hold this key to activate the function of manual cleaning. The nozzle can be cleaned manually. Press and hold it again or press Stop key to deactivate this function.

Usage and Replacement of Battery for Remote Controller

- Battery holder - of remote controller uses 4 #5 alkaline batteries.
- When battery is low, the battery holder lamp will flicker in red indicating the batteries need to be replaced, indicate the replacement of battery.
- Caution:
 1. The positive and negative polarities of battery must be consistent with the mark of remote controller.
 2. New and old batteries shall not be mixed.
 3. Please use alkaline battery.

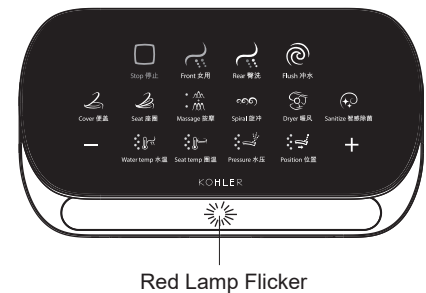


Guide on usage of remote controller

Others

- Do not put the remote control at a place where it may be sprayed by liquid, or immersed in liquid.
- Do not place it near hand dryer, hair dryer and small size home appliances, to avoid disturbance of normal usage of the remote control.
- Do not apply external force to the key zone of remote controller frequently or fiercely.
- After usage of remote control, put it back into the remote holder mounted on wall.
- Prevent dropping the remote control during usage.
- Anti-loss function: lock remote on docking station by screws. Specific method refers to installation instruction.

 遥控器使用指南

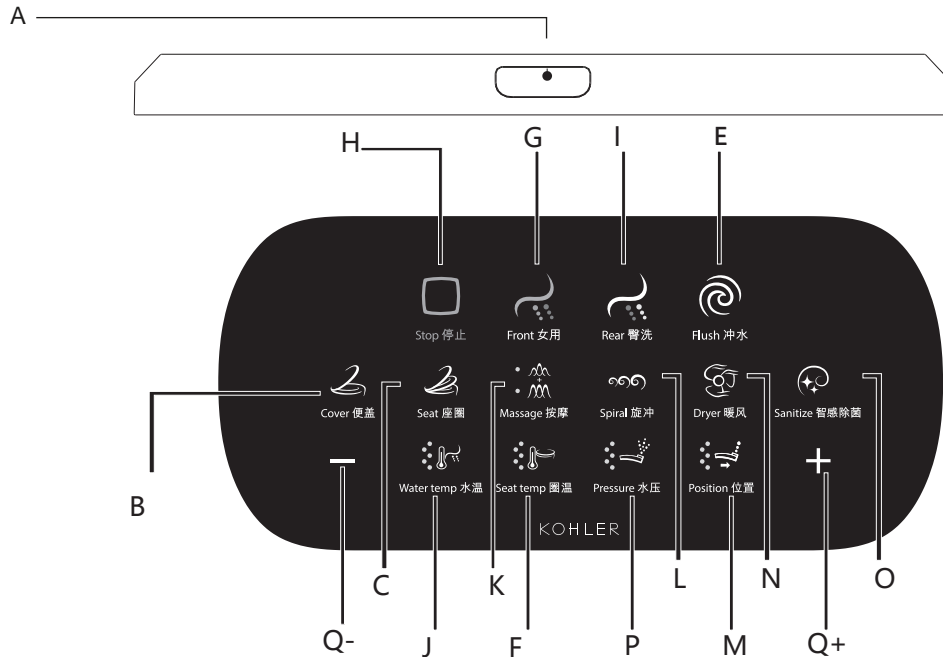

警告：为避免掉落的风险，请从充电座上取下遥控器再按开机键。

A - 开机

按此键进行遥控器开机。开机后按此键可进行开、关屏切换。
开机后若未与坐便器连接上，则第三排图标会闪烁，连接成功后停止闪烁，进入可使用状态。

B - 便盖开/关

离座状态下，可按此键进行开/关盖动作。

C - 座圈开/关

离座时，可按此键进行开、关座圈动作。

E - 冲水

●按此键对坐便器进行冲洗。

F - 圈温

●按此键调整圈温档位，按+/-键（Q+/Q-）调节座圈加热温度。

G - 女性冲洗

落座后，按此键进入女性冲洗，约5分钟后自动停止或按停止键立即关闭。

H - 停止

- 按此键可停止女性冲洗、臀部冲洗、暖风和除臭，手动清洁喷管、UV等功能。
- 长按此键关闭遥控器。

I - 臀部冲洗

落座后，按此键进入臀部冲洗，约5分钟后自动停止或按停止键立即关闭。

本机附带宽幅清洁功能，如想使用宽幅清洁，请同时长按侧键上的臀部冲洗键和电源键约2秒，然后启动臀部冲洗的移动模式。

J - 水温

●在开启女性冲洗或臀部冲洗后，按此键再按+/-键（Q+/Q-）调节水温。

K - 按摩

在开启女性冲洗或臀部冲洗后，按此键进入移动冲洗，再次按进入脉冲冲洗，第三次按移动/脉冲同时进行，第4次按退出该模式（相应功能启动时，图标左侧的灯亮）。

L - 旋转冲洗

在进行臀部冲洗期间，按此键进行旋转水型冲洗，旋转冲洗图标闪动。再按退出旋转冲洗（或按“停止”键关闭），旋转冲洗图标停止闪动。

遥控器使用指南

M - 位置

- 在开启女性冲洗或臀部冲洗后，按此键再按+/-键（Q+/Q-）调节喷管移动位置。

N - 暖风

落座后，按此键开启暖风功能，约4分钟后自动停止或按停止键立即关闭。

O - 智感除菌

在离座状态，短按此键进入紫外线杀菌功能，图标闪动。

P - 水压


- 在开启女性冲洗或臀部冲洗后，按此键再按+/-键（Q+/Q-）调节水压档位。

Q - 参数调节按键Q+/Q-:

只有触发J/F/P/M功能时，才会激活“+/-”按键进行相应的参数调节。



低电压报警

注意：电压报警后请及时充电。

- 当  键闪烁时，表示遥控器内置电池电量将耗尽，需将遥控器放置在基座上充电；

配对

注意：配对操作只能在离座状态下进行。

- 坐便盖正常上电，按遥控器顶端开机键开机，当最下面一排图标长时间闪烁，即表示该遥控器需要与本体进行配对操作
- 长按暖风键，当最下面一排图标快闪后开始进行本体端操作。
- 同时长按本体侧键盘的  键和  键，直到听到一声短鸣后放开按键。
- 看到遥控器最下面一排图标停止闪烁，表示配对成功。

 
遥控器与本机的通讯

- 遥控器被移动离开感应区域，遥控器最下面一排图标会自动闪动（表示寻找主机信号），拿回主机附近后，如主机是通电正常工作状态，将自动连接信号，连接成功后停止闪动。

关机功能

- 任何时候长按  键，遥控器进入关机状态。

遥控器设置指南

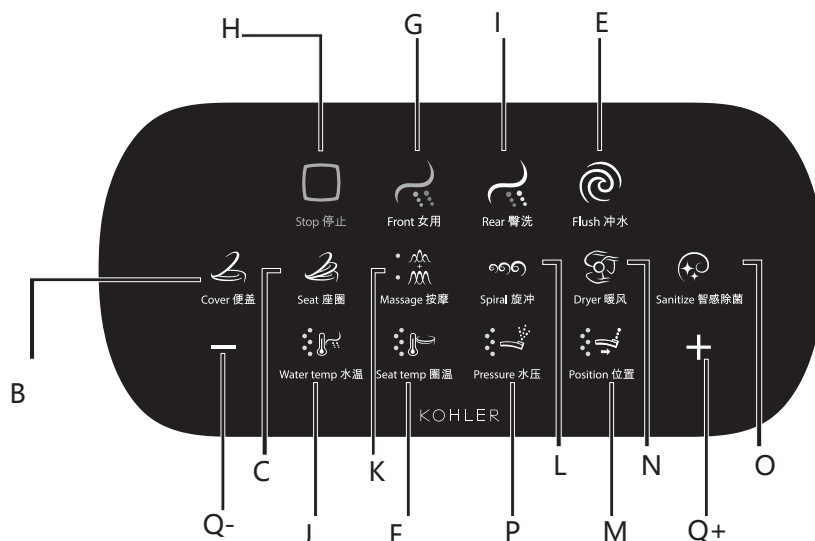

遥控器使用指南

按住本体侧键盘 \odot 键，直到听到一声短音，同时夜灯闪烁三次后，放开按键，随后可按照以下B/C/E/F/I/O变更设置。

B - 便盖开/关…感应距的设置

- 长按进行自动翻盖感应距离设置：
 1. 夜灯快闪一次为近距（短音）。
 2. 夜灯快闪二次为中距（短音）。
 3. 夜灯快闪三次为远距（短音）。
 4. 夜灯慢闪一次则关闭自动翻盖功能（长音）。

C - 座圈开/关…除臭功能设置

- 长按此键进行开启、关闭除臭功能切换。
 1. 夜灯快闪一次开启除臭功能（短音）。
 2. 夜灯慢闪一次关闭除臭功能（长音）。

E- 冲水…自动冲水设置

- 长按此键进入自动冲水设置模式。
 1. 夜灯慢闪一次，表示关闭自动冲水设置（长音）。
 2. 夜灯快闪一次，表示启用不关盖自动冲水设置（短音）。
 3. 夜灯快闪二次，表示启用关盖自动冲水设置（短音）。

F - 圈温…节能设置

- 长按圈温键打开节能功能，再次长按关闭该功能。
 1. 夜灯快闪一次开启节能功能（短音）。
 2. 夜灯慢闪一次关闭节能功能（长音）。

I - 臀洗…自动关盖冲水延时时长设置

- 长按此键进入自动关盖冲水延时时长设置模式。
 1. 夜灯快闪一次，表示短档延时（短音）。
 2. 夜灯快闪二次，表示中档延时（短音）。
 3. 夜灯快闪三次，表示长档延时（短音）。

O - 智感除菌设置

- 长按可设置紫外线自动杀菌的开/关状态。
 1. 夜灯快闪一次开启紫外线自动杀菌功能（短音）。
 2. 夜灯慢闪一次关闭紫外线自动杀菌功能（长音）。

一定时间不进行B/C/E/F/I/O设置变更后，下次变更前需要重新用按住本体侧键盘 \odot 键，直到听到一声短音，同时夜灯闪烁三次。

M - 位置…喷管清洁设置

- 离座状态下，长按此键启动手动清洁喷管功能，喷管伸出，可对喷头进行手动清洗，再次长按此键或按停止键停止该功能。

遥控器电池的使用及更换

- 遥控器充电座使用4节5号碱性电池。
- 当电量不够时，充电座会有红灯闪烁，提示用户需要更换电池。
- 注意：
 1. 电池的正负极必须与遥控器上的标记一致。
 2. 新旧电池不能混用。
 3. 请使用碱性电池。



遥控器使用指南

其他

- 请勿将遥控器放在液体可能直接喷淋到的地方，或浸泡在液体中。
- 请勿放置在烘手机、电吹风等小型家电的周围，以免干扰遥控器的正常使用。
- 请勿对遥控器的按键区域频繁、剧烈地施加外力。
- 遥控器使用完毕后，应放回墙上的遥控器支架。
- 在使用过程中，避免遥控器跌落。
- 防遗失功能：遥控器可通过螺丝与底座锁定，具体方法参见安装说明书。