 


Guide on usage of remote controller

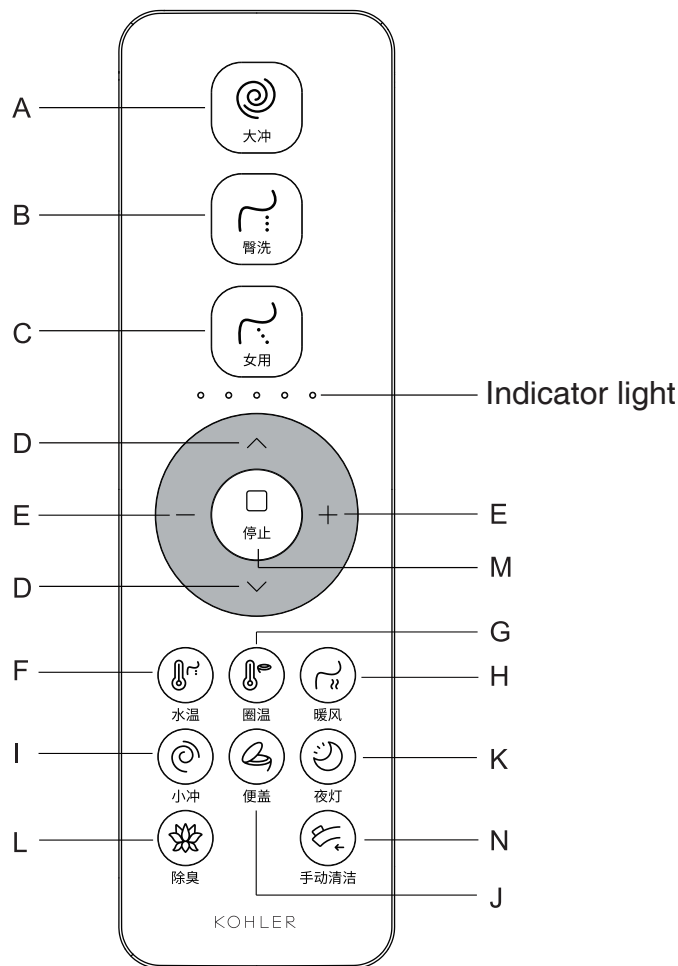

⚠ Caution: To avoid the risk of the remote control falling, remove it from the holder before operation.
(Non-loss-prevention mounting.)

A - Full flush

- Short press “ @ ” button, the toilet starts full flushing.

B - Rear washing

- Press “ ㄣ ” button, the indicator light is on showing current water temperature level, it starts rear washing;
Press again this button to shift to oscillating washing (nozzle moves forward and backward to expand washing area).
The washing will stop automatically after one cycle 150s, while it will stop immediately if the user presses “ □ ” button.

C - Front washing

- Press “ ㄣ ” button, the indicator light is on showing current water temperature level, it starts front washing;
Press again this button to shift to oscillating washing (nozzle moves forward and backward to expand washing area).
The washing will stop automatically after one cycle 150s, while it will stop immediately if the user presses “ □ ” button.

D - Nozzle position adjustment

- Press “ ^ ” or “ v ” button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

 
E - Water volume adjustment

- Press “ + ” or “ - ” button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Guide on usage of remote controller

F - Water temperature adjustment

- Press “

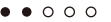 Room temperature
  Level 1
  Level 2
  Level 3
  Level 4
  Level 5

G - Seat temperature adjustment

- Press “

 Room temperature
  Level 1
  Level 2
  Level 3
  Level 4
  Level 5

H - Dryer wind temperature adjustment

- Press “

 Room temperature
  Level 1
  Level 2
  Level 3
  Level 4
  Level 5

I - ECO flush

- Short press “

J - Open/Close the seat cover

- Short press “

K - Night light

- Night light adjustment: Short press “

L - Deodorization

- Short press “

M - Stop

- Long press “

N - Nozzle cleaning


- When no one is seated, short press “

Pairing

- Shut off the power supply of toilet.
- Press and hold “- The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are Paired successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Guide on usage of remote controller

Remote Control Setup Guide

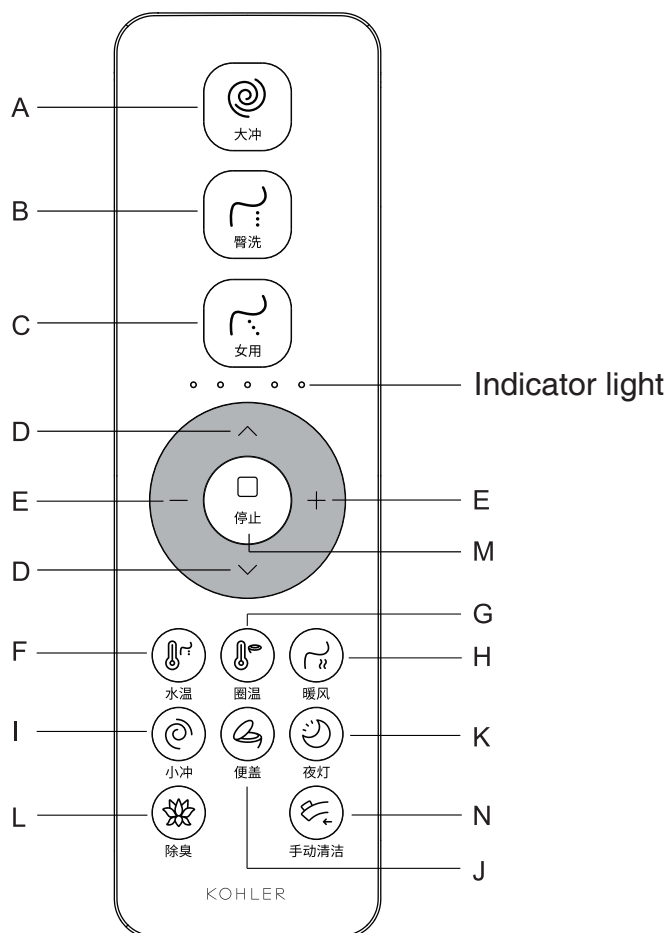

A - Full flush button... Automatic flush setting

- Long press “@” button to turn on/off auto flush function. When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

H - Dryer...Positive and negative ion purification settings*

- When the user leaves the seat and no washing or drying function is active, press and hold the “☼” button to activate the positive and negative ion purification function. The purification will automatically stop after approximately 2 hours of operation. During the purification process, the purification will automatically stop if any other button is pressed or if the user sits down.

J - Cover...Auto cover open/close

- Long press “☼” button to turn on/off auto lid open/close function.
Approaching the toilet
When user enters the sensing range, the seat cover opens automatically.
Leaving the toilet
The seat cover closes automatically around 180 seconds after user leaves.

K - Night light...Night light setting

- Night light adjustment: Short press “☼” button to turn on/turn off night light.
- Intelligent mode: Long press “☼” button to enter into intelligent mode (Night light will be on or off depending on the surrounding light). If the product is on intelligent mode, short press this button to exit intelligent mode. (Default setting: intelligent mode)

* Positive and negative ion purification refers to the positive and negative ion generator producing ions to purify the ceramic bowl.

Guide on usage of remote controller

L - Deodorization...Deodorization setting

- Short press “” button to turn on/off auto deodorization function. The deodorization function will be automatically turned on when the user is seated, and will stop after leaving. Under drying, deodorization will stop. (This function is turned on by default.)

M - Stop...Energy-saving settings

- Long press “” button to enter energy saving mode, long press “” button again to exit energy saving mode.
- Under energy saving mode, seat temperature is set to Level 1 for energy saving.
(Note: If the seat is at room temperature before energy saving, it will remain so.)
Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

M&C - Quiet mode

- Press and hold the “” button and then press the “” button to turn on/off quiet mode.

J&E - Sensing distance adjustment

- To increase the sensing distance, first press the “” button, then press the water volume “+” button.
- To decrease the sensing distance, first press the “” button, then press the water volume “-” button.
- Sensing distance settings are Near, Medium, and Far, corresponding to 1, 3, and 5 indicator lights respectively.


M&H - Automatic temperature adjustment on/off settings

- Press and hold the “” button, then press the “” button to turn on or off the automatic temperature adjustment mode. A short beep from the main unit indicates activation, while a long beep indicates deactivation.
When activated, the main unit will intelligently adjust the water, air, and seat temperatures according to the ambient temperature. (Default setting is off.)

Guide on usage of remote controller

Remote Control Battery Usage and Replacement

- The remote control uses two AAA alkaline batteries.
- When battery power is low, pressing any button on the remote control will cause the 1st, 3rd, and 5th indicator lights to flash, indicating that the batteries need to be replaced.
- **CAUTION**
 1. The original dry cell batteries are non-rechargeable. Do not recharge them.
 2. Insert the batteries according to the "+" and "-" markings in the battery compartment. Do not insert them in reverse.
 3. Remove exhausted batteries and dispose of them safely. Do not discard them carelessly.
 4. Do not heat or disassemble the battery, or dispose of it in water or fire.
 5. Do not connect the "+" and "-" terminals with metal wire, etc., and do not place it together with metal necklaces, hairpins, etc.
 6. Do not mix old and new batteries, or batteries of different models or brands.
 7. Do not use batteries with peeling casings, and do not use rechargeable batteries instead of dry cells.
 8. When not in use for an extended period, remove the batteries from the product and store them securely, keeping them out of the reach of infants and young children.

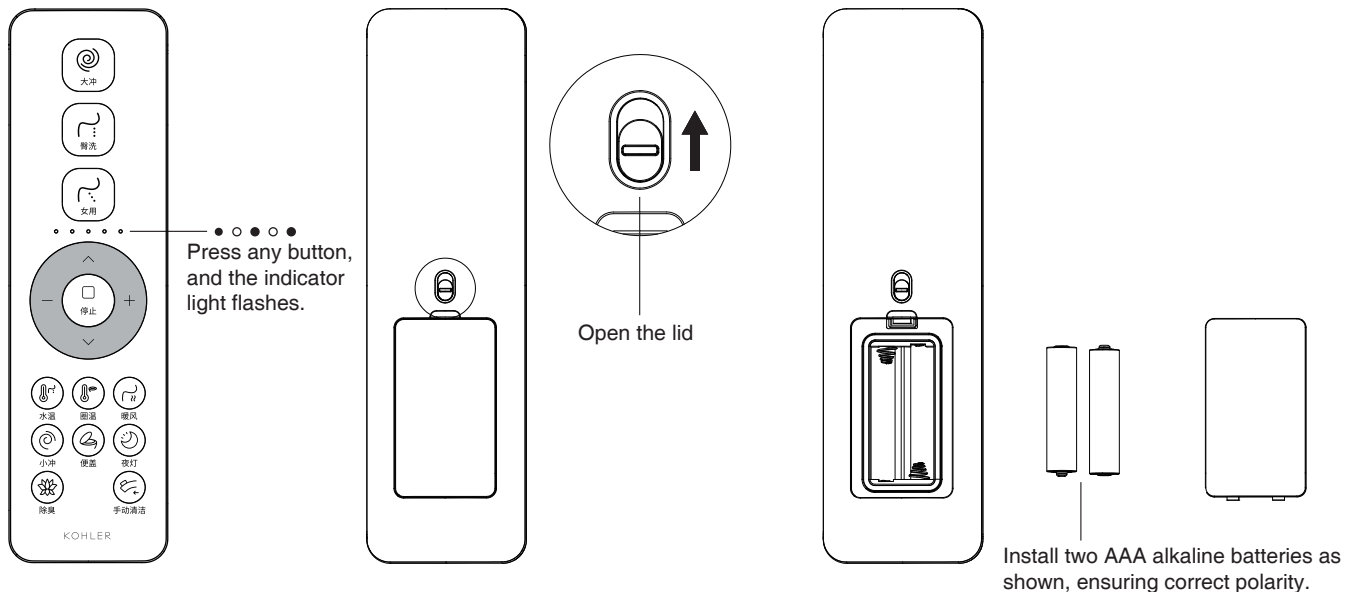

Others

- If a power outage occurs during washing, the nozzle may not retract. Once power is restored and the unit restarts, the nozzle will retract automatically. If power is off for an extended period and the toilet must be used, gently push the nozzle back by hand. Do not apply excessive force to avoid damaging the nozzle or motor.
- The user must be seated for the Rear Wash, Feminine Wash, and Warm Wind Dry functions to operate. If the user stands up during a wash cycle, the nozzle will continue spraying for 1-2 seconds. Please press the Stop button before standing up.
- Sit as far back on the seat as possible to ensure accurate nozzle positioning and to avoid splashing.