 


Guide on usage of remote controller

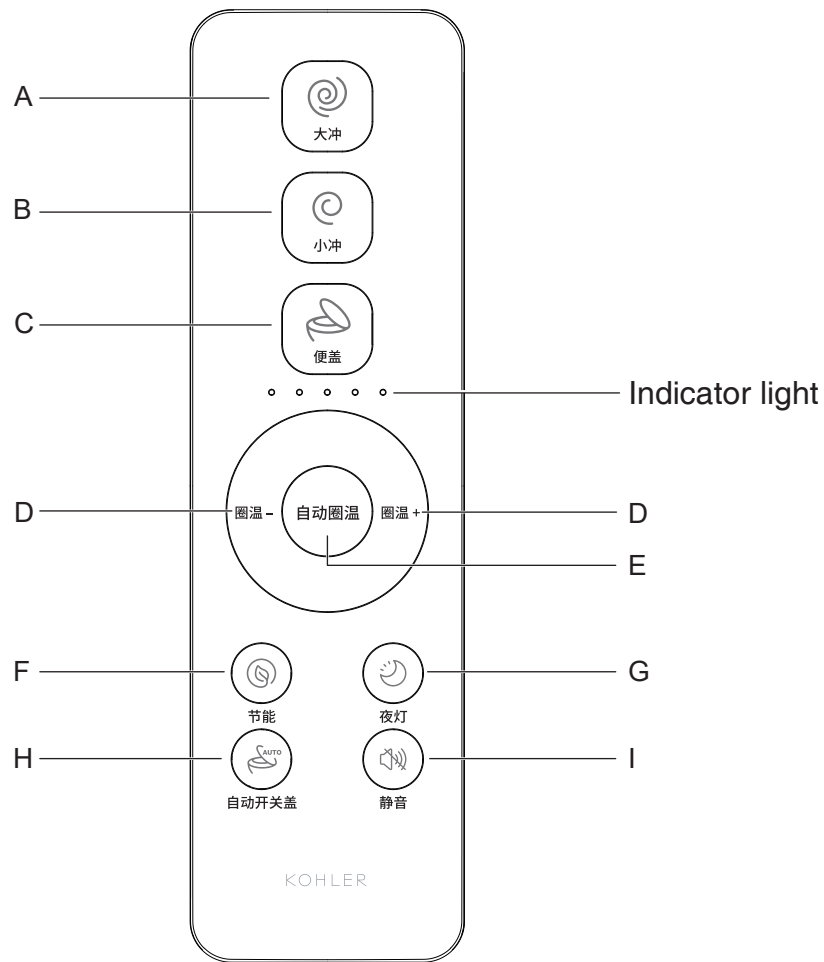

⚠ Caution: To avoid the risk of the remote control falling, remove it from the holder before operation. (Non-loss-prevention mounting.)

A - Full flush

- Short press “” button, the toilet starts full flushing.
- Long press “” button to turn on the auto flush function, and the buzzer will sound a short beep.
Long press “” button again to turn off the auto flush function, and the buzzer will sound a long beep.

B - ECO flush

- Short press “” button, the toilet starts ECO flushing.

C - Open/Close the seat cover

- Short press “” button, open or close the seat cover.

D - Seat temperature adjustment

- Press “圈温 -”, “圈温 +” button to adjust the seat temperature. The indicator light will illuminate to show the selected level. When the light is off, it indicates level 0 (room temperature). There are 3 levels in total.

 Room temperature
  Level 1
  Level 2

Guide on usage of remote controller

E - Automatic temperature adjustment

- Short press “自动圈温” button to turn on the automatic temperature adjustment mode, and the buzzer will sound a short beep. When activated, the main unit will intelligently adjust the seat temperatures according to the ambient temperature. Short press “自动圈温” button again to turn on the automatic temperature adjustment mode, and the buzzer will sound a long beep.

F - Energy saving

- Short press “” button to enter energy saving mode, Short press “” button again to exit energy saving mode.
- Under energy saving mode, seat temperature is set to Level 1 for energy saving.
(Note: If the seat is at room temperature before energy saving, it will remain so.)
Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

G - Night light

- Night light adjustment: Short press “” button to turn on/turn off night light.
- Intelligent mode: Long press “” button to enter into intelligent mode (Night light will be on or off depending on the ambient light). If the product is on intelligent mode, short press this button to exit intelligent mode.
(Default setting: intelligent mode)

H - Auto cover open/close

- Short press “” button to turn on auto lid open/close function, and the buzzer will sound a short beep. Short press “” button again to turn off auto lid open/close function, and the buzzer will sound a long beep.

I - Quiet mode


- Short press “” button to turn on/off quiet mode.

Pairing

- ☐ Shut off the power supply of toilet.
- ☐ Press and hold “自动圈温” button, then press “” button, the indicator light will flash.
- ☐ Re-connect the power plug and press "reset" button.
- ☐ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are Paired successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Guide on usage of remote controller

Remote Control Setup Guide

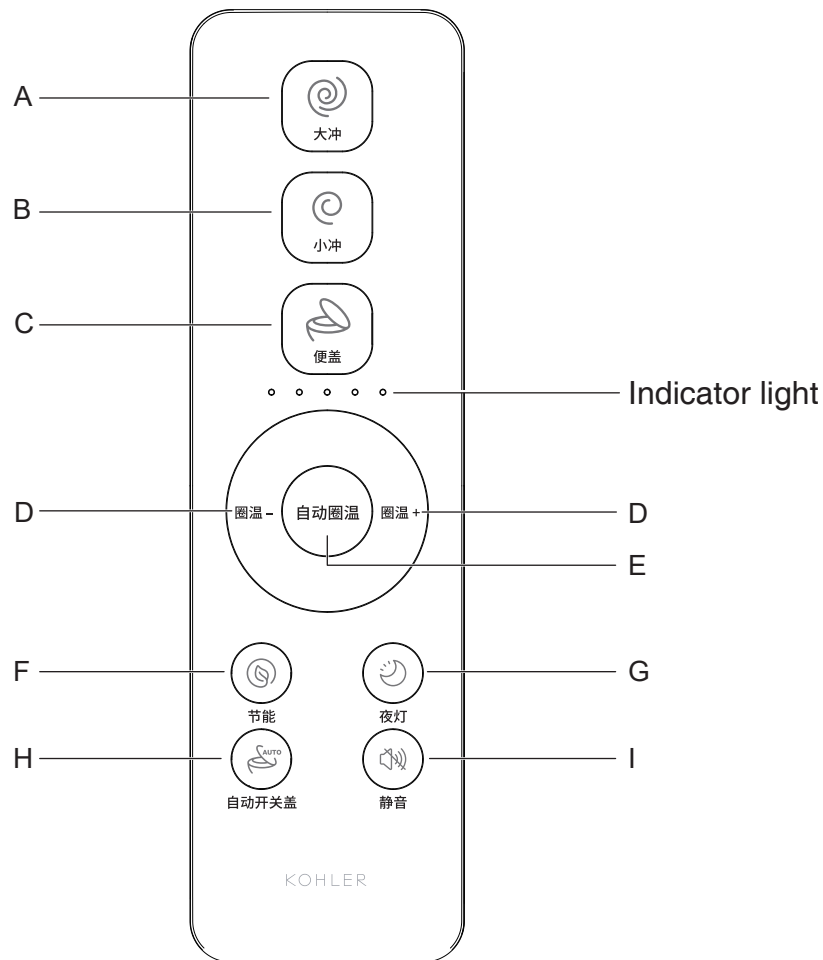

C&D- Sensing distance adjustment

- To increase the sensing distance, first press the " 便盖 " button, then press the water volume " 圈温 + " button.
- To decrease the sensing distance, first press the " 便盖 " button, then press the water volume " 圈温 - " button.
- Sensing distance settings are Near, Medium, and Far, corresponding to 1, 3, and 5 indicator lights respectively.


E&F- Prolonged sitting reminder settings.

- Press and hold " 自动圈温 " button, then press the " 节能 " button to turn on/off the prolonged sitting reminder function. When this function is turned on, the buzzer will beep three times as a reminder after the user has been seated for a certain period. If the user leaves the seat during this period, the reminder is automatically canceled. (Applicable only to toilets with this function.)

Guide on usage of remote controller

Remote Control Battery Usage and Replacement

- The remote control uses two AAA alkaline batteries.
- When battery power is low, pressing any button on the remote control will cause the 1st, 3rd, and 5th indicator lights to flash, indicating that the batteries need to be replaced.
- **CAUTION**
 1. The original dry cell batteries are non-rechargeable. Do not recharge them.
 2. Insert the batteries according to the "+" and "-" markings in the battery compartment. Do not insert them in reverse.
 3. Remove exhausted batteries and dispose of them safely. Do not discard them carelessly.
 4. Do not heat or disassemble the battery, or dispose of it in water or fire.
 5. Do not connect the "+" and "-" terminals with metal wire, etc., and do not place it together with metal necklaces, hairpins, etc.
 6. Do not mix old and new batteries, or batteries of different models or brands.
 7. Do not use batteries with peeling casings, and do not use rechargeable batteries instead of dry cells.
 8. When not in use for an extended period, remove the batteries from the product and store them securely, keeping them out of the reach of infants and young children.

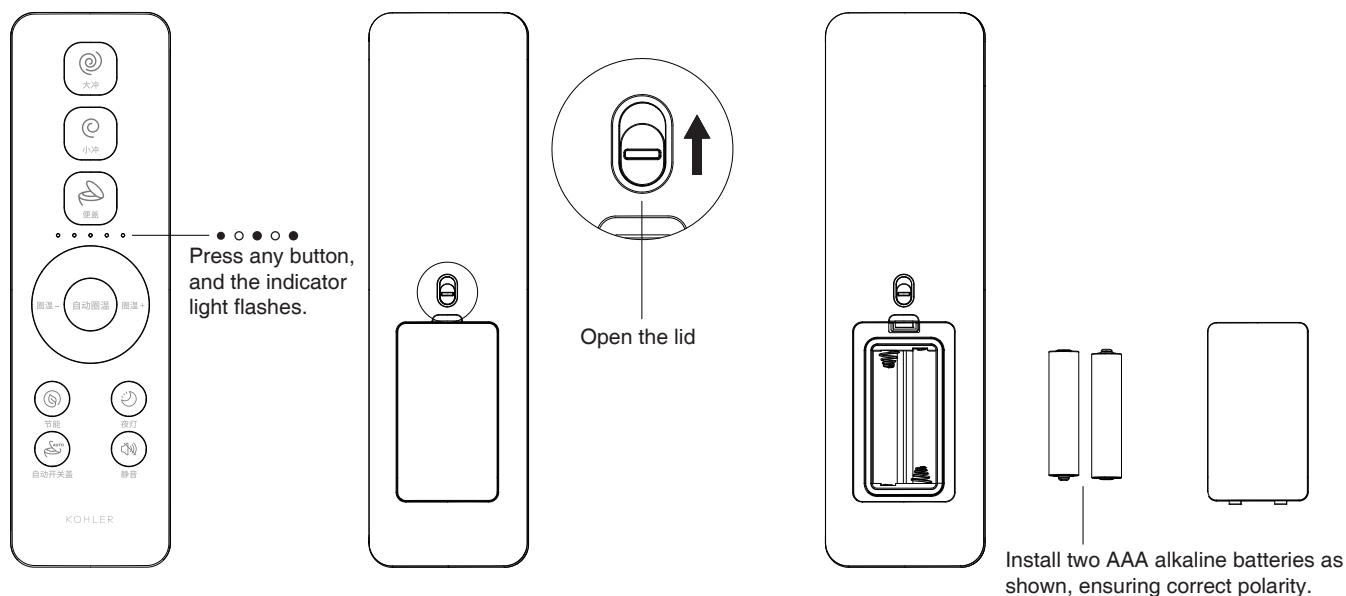

Others

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.