



派乐PARALLEL

安装说明书
INSTALLATION INSTRUCTIONS

派乐非标淋浴房，一字型
PARALLEL CUSTOM DOOR

K-36962T

派乐非标浴缸屏风
PARALLEL BATH SCREEN

K-36964T

派乐非标淋浴房(带置物架)，一字型
PARALLEL CUSTOM DOOR W/STORAGE

K-36963T

派乐非标浴缸屏风(带置物架)
PARALLEL BATH SCREEN W/STORAGE

K-36965T

派乐非标淋浴房置物架
SHELF, PARALLEL DOOR

K-36960T

派乐非标浴缸屏风置物架
SHELF PARALLEL BATH SCREEN

K-36961T

BEFORE YOU BEGIN

- Before you install your shower door, please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely installed prior to installing your Parallel door.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 4 and 5 for reference.
- This instruction covers several door models. They will vary in width.

NOTE: For ease of installation, two people should perform the installation steps.

IMPORTANT: The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3 mm/m. KOHLER Company won't take responsibility of the installation quality.

ATTENTION: Please install this door on a straight level curb, whose width should be no less than 65 mm. The distance between the inner rim of the curb and the rim of the shower room should be no less than 80mm. Installing these doors with less than this dimension may result in the front face of the header protruding past the edge of the enclosure.

 **CAUTION: Risk of injury or product damage.**
Tempered glass cannot be cut.

安装之前

- 在您安装淋浴房之前，请您仔细阅读此说明书以熟悉所需要的工具、材料及安装顺序。遵循适合您的特定安装要求的各项内容，避免不必要的损失。除了要正确安装外，还应阅读所有的操作及安全说明。
- 所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容，请把这些资料交给用户阅读。
- 确保在安装Parallel淋浴房之前已经完整安装了浴室和完工墙面材料。
- 在进行淋浴房安装之前，请拿出、排列并确认所有的零件。请参考第4、5页上所示的分解图。
- 本说明书涉及多个淋浴房型号。它们在宽度尺寸上会有不同。

注意：为了便于安装，请安排两个人来共同实施安装步骤。

重要事项：淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负3mm/m以内。如果超出此范围，科勒公司将不保证淋浴房的完美使用。

建议：将本产品安装在平直的挡水条上。挡水条宽度应不少于65mm。挡水条内边至洗浴间边缘不小于80mm。如果小于这一尺寸，安装这些淋浴房将可能导致顶部型材前表面超出洗浴间的边缘(见第3页中挡水条安装示意图)。

 **警告：**可能有人伤害或者产品损坏的危险。钢化玻璃不能进行切割。

中山科勒卫浴有限公司
广东省中山市中山火炬开发区兴业路13-1号 邮编：528437


ROUGHING-IN

尺寸图


Colors/Finishes
SHP Polished Silver

颜色/表面
SHP 抛光亮银

UNIT: mm
单位: 毫米

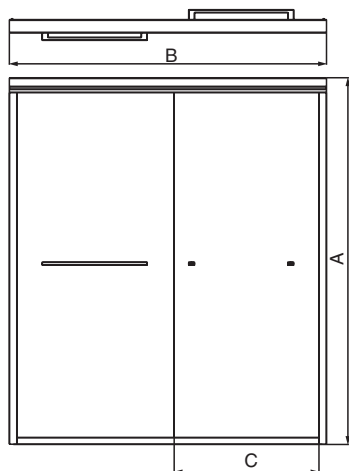


PARALLEL DOOR
派乐淋浴房(不带置物架)

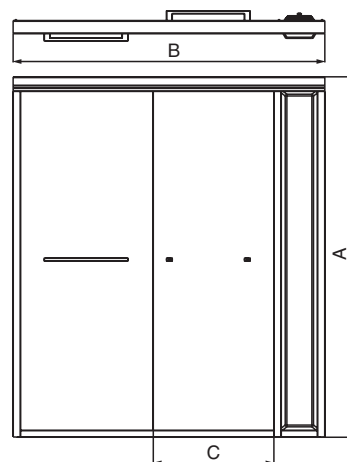

PARALLEL DOOR W/STORAGE
派乐淋浴房(带置物架)

Roughing-In Notes 尺寸图附注			
PARALLEL DOOR	A	B	C (Walk Through) (通过宽度)
K-36962T	1850~2000	1101~2000	480~930
K-36964T	1500~1800	1501~1800	680~830

Roughing-In Notes 尺寸图附注			
PARALLEL DOOR W/STOR	A	B	C (Walk Through) (通过宽度)
K-36963T	1850	1401~2000	520~820
K-36965T	1500	1501~1800	570~720

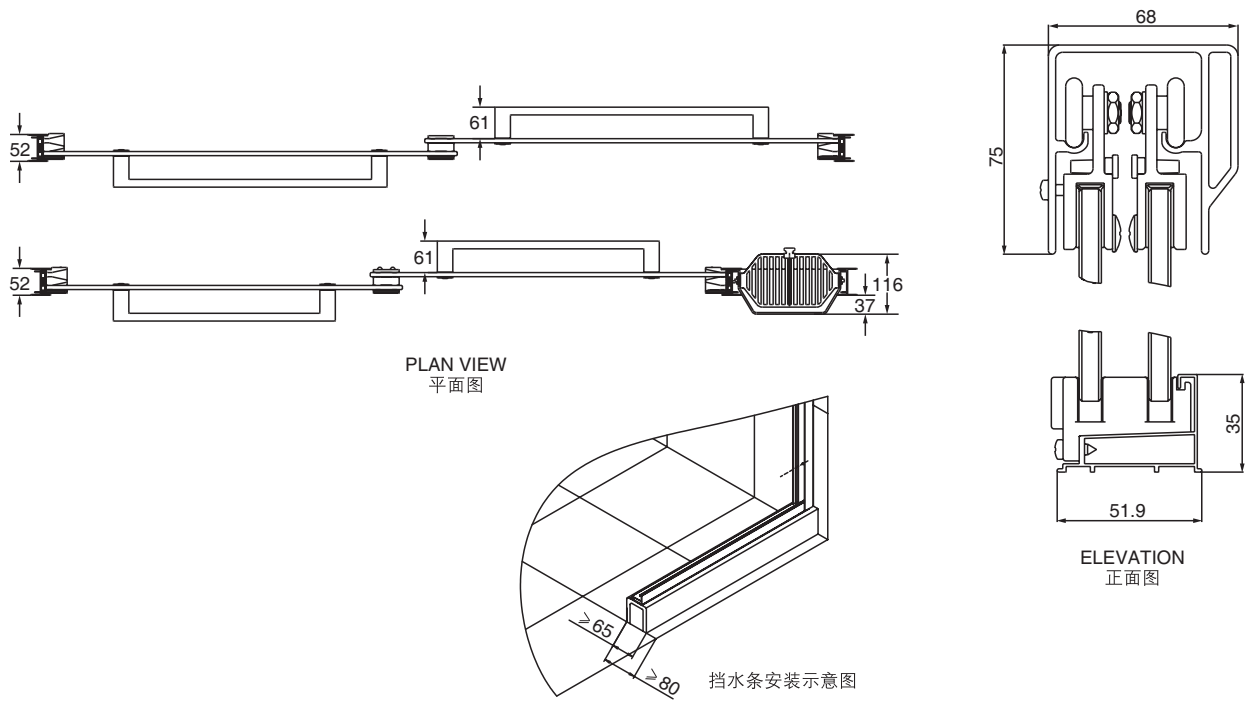

INSTALLATION REQUIREMENTS

安装要求

A. Tools Required

- Blade Screwdriver
- Phillips Screwdriver
- Pencil
- Caulk Gun
- Measuring Tape
- Safety Glasses
- Center Punch
- Hammer
- Knife
- Drill & 3.2mm Drill Bit
- Level

Plus:

- Conventional Woodworking Tools
- Drop Cloth
- Masonry Bit For Ceramic Tile 6mm
- Silicone Sealant
- Masking Tape

A. 所需工具


- 平头螺丝刀
- 十字螺丝刀
- 铅笔
- 硅胶枪
- 卷尺
- 护目镜
- 中心冲
- 锤子
- 刀片
- 普通电钻以及 $\phi 3.2\text{mm}$ 的钻头
- 水平仪

还有:

- 传统木工工具
- 绒布
- 瓷砖用冲击钻头6mm
- 硅胶
- 遮蔽胶带

B. Parts Identification


PARALLEL DOOR
派乐淋浴房(不带置物架)

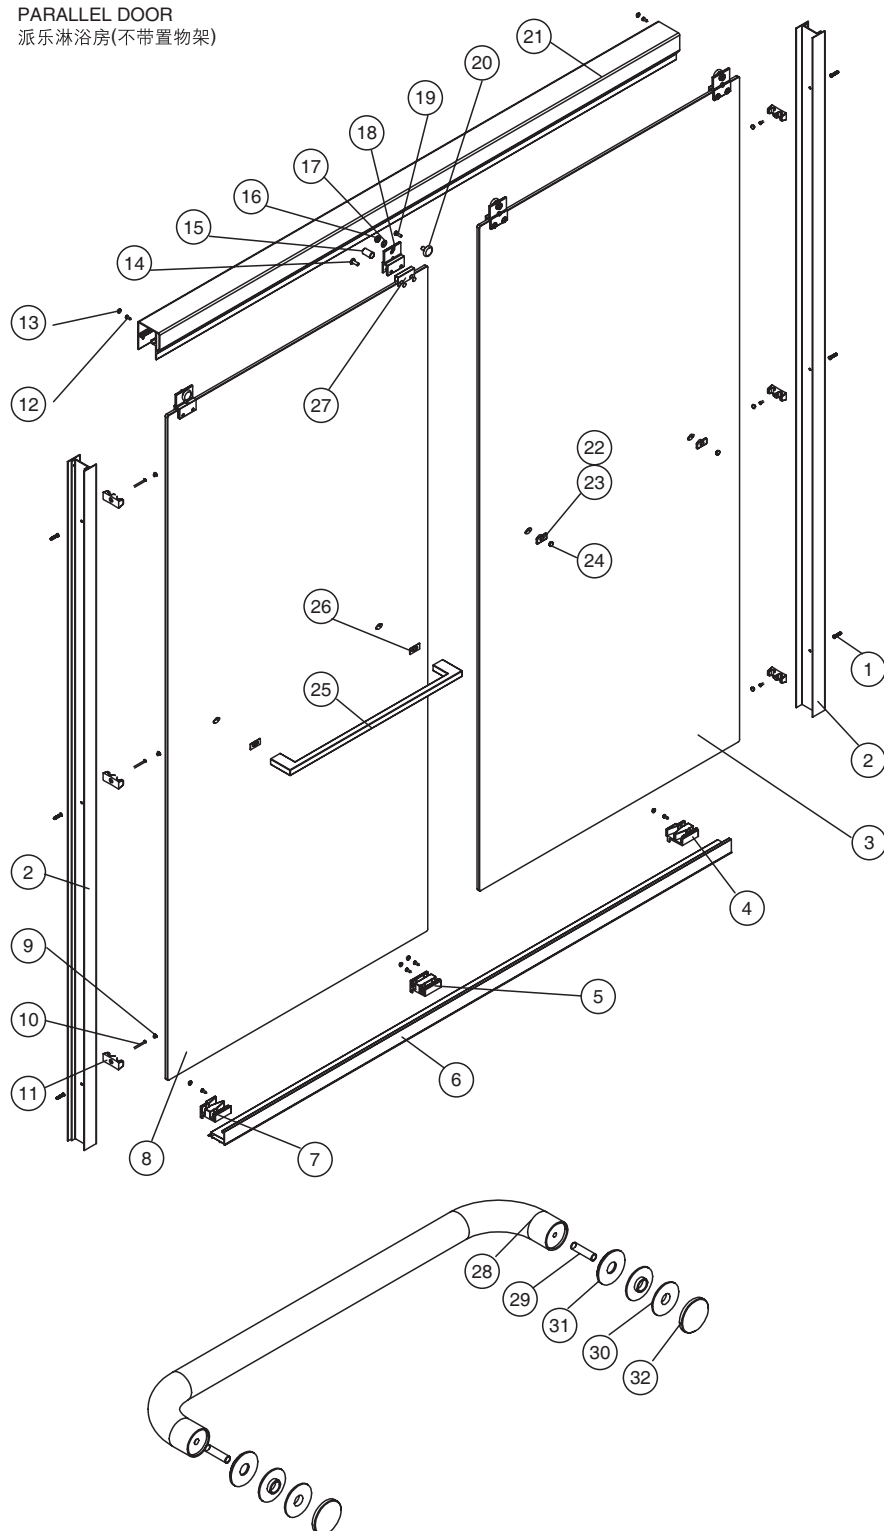

B. 零件识别

序号	P/N	描述	数量
①	1057064	Wall Anchor 入墙胶粒	6个
②	1106625-*	Wall Jamb, Left 1810 左墙边柱	2个
	1111089-*	Wall Jamb, Left 1460 左墙边柱	2个
③	1106635-*	Door Glass 门玻璃	1个
④	1106644-*	End Block, Right 右挡块	1个
⑤	1106643-*	Middle Block 中挡块	1个
⑥	1106629-*	Bottom Track 下导轨	1个
⑦	1106642-*	End Block, Left 左挡块	1个
⑧	1110258-*	Door Glass Logo 门玻璃	1个
⑨	1106634-95	Screw Cap, Bar 拉手螺钉帽	6个
⑩	1150121	Screw ST3.5x45 螺钉	6个
⑪	1128476	Buffer, Door 门缓冲垫	6个
⑫	1073172	Screw ST3.9x12 螺钉	6个
⑬	1109928	Cap of Screw 螺钉帽	6个
⑭	1106641	Screw M6x16 螺钉	8个
⑮	1111104	Tube, Glass Hole 玻璃护套	8个
⑯	1106640	Six Nut M8x4 六角薄螺母 M8x4 GB/T 6172.1	4个
⑰	1106639	Washer 8 垫圈8 GB/T 861.1	4个
⑱	1106636-SHP	Roller Support 8mm 滚轮支架	4个
⑲	1073175	Safe Nail 止脱销钉	4个
⑳	1106638	Top Roller Assy. 滚轮	4个
㉑	1106628-*	Top Track 上导轨	1个
㉒	1106652	Screw 7G M4x16 螺钉	4个
㉓	1106633-*	Towel Bar Washer 拉手垫	4个
㉔	1106634-*	Screw Cap, Bar 拉手螺钉帽	4个
㉕	1106631-BS	Towel Bar 400 拉手	2个
	1111085-BS	Towel Bar 500 拉手	2个
	1111086-BS	Towel Bar 650 拉手	2个
㉖	1106632	PVC Washer, Towel Bar 拉手PVC垫	4个
㉗	1106637	Buffer Roller 缓冲垫	4个
㉘	1128460	Handle Bar 400 拉手	2个
	1128461	Handle Bar 500 拉手	2个
	1128462	Handle Bar 650 拉手	2个
㉙	1128459	Screw M6x25 螺钉	2个
㉚	1128464	Washer 垫片	4个
㉛	1128463	Bar Cover 端盖	4个
㉜	1128465	Handle Nut 把手螺母	2个

PARALLEL DOOR W/STORAGE
派乐淋浴房(带置物架)

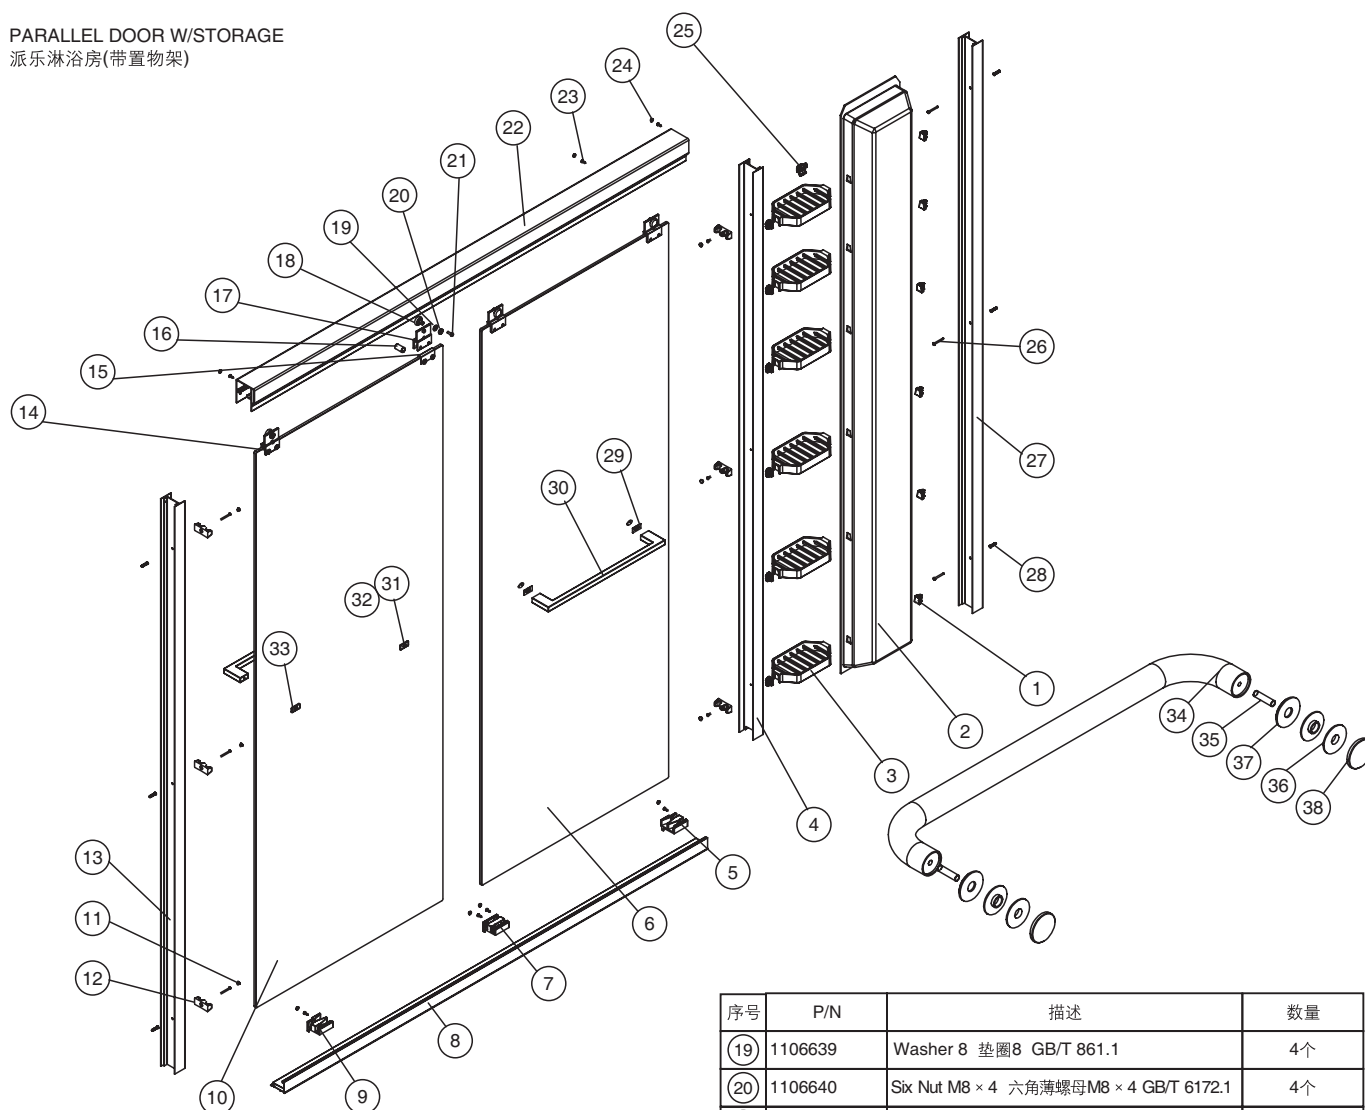

序号	P/N	描述	数量
①	1106647-0	Support Shelf 隔架支架	12个或10个
②	1106649	Storage Column 1804.8mm 贮藏架	1个
	1106648	Storage Column 1454.8mm 贮藏架	1个
③	1041024	Chamfer Shelf 隔架	6个或5个
④	1106627-*	Wall Jamb, Center 1810 中墙边柱	1个
	1111091-*	Wall Jamb, Center 1460 中墙边柱	1个
⑤	1106644-*	End Block, Right 右挡块	1个
⑥	1110258-*	Door Glass Logo 门玻璃	1个
⑦	1106643-*	Middle Block 中挡块	1个
⑧	1106629-*	Bottom Track 下导轨	1个
⑨	1106642-*	End Block, Left 左挡块	1个
⑩	1106635-*	Door Glass 门玻璃	1个
⑪	1106634-95	Screw Cap, Bar 拉手螺钉帽	6个
⑫	1128476	Buffer, Door 门缓冲垫	6个
⑬	1106625-*	Wall Jamb, Left 1810 左墙边柱	1个
	1111089-*	Wall Jamb, Left 1460 左墙边柱	1个
⑭	1106641	Screw M6x16 螺钉	8个
⑮	1106637	Buffer Roller 缓冲垫	4个
⑯	1111104	Tube, Glass Hole 玻璃护套	8个
⑰	1106636-SHP	Roller Support 8mm 滚轮支架	4个
⑱	1106638	Top Roller Assy. 滚轮	4个

序号	P/N	描述	数量
⑰	1106639	Washer 8 垫圈8 GB/T 861.1	4个
⑳	1106640	Six Nut M8 × 4 六角薄螺母M8 × 4 GB/T 6172.1	4个
㉑	1073175	Safe Nail 止脱销钉	4个
㉒	1106628-*	Top Track 上导轨	1个
㉓	1073172	Screw ST3.9x12 螺钉	10个
㉔	1109928	Cap of Screw 螺钉帽	7个
㉕	1040716	Hook Shelf 吊钩	6个或5个
㉖	1109927	Screw ST3.5x45 螺钉	6个
㉗	1106626-*	Wall Jamb, Right 1810 右墙边柱	1个
	1111090-*	Wall Jamb, Right 1460 右墙边柱	1个
㉘	1057064	Wall Anchor 入墙胶粒	6个
㉙	1106632	PVC Washer, Towel Bar 拉手PVC垫	4个
㉚	1106631-BS	Towel Bar 400 拉手	2个
	1111085-BS	Towel Bar 500 拉手	2个
	1111086-BS	Towel Bar 650 拉手	2个
㉛	1106634-*	Screw Cap, Bar 拉手螺钉帽	4个
㉜	1106652	Screw 7G M4x16 螺钉	4个
㉝	1106633-*	Towel Bar Washer 拉手垫	4个
㉞	1128460	Handle Bar 400 拉手	2个
	1128461	Handle Bar 500 拉手	2个
	1128462	Handle Bar 650 拉手	2个
㉟	1128459	Screw M6x25 螺钉	2个
㊱	1128464	Washer 垫片	4个
㊲	1128463	Bar Cover 端盖	4个
㊳	1128465	Handle Nut 把手螺母	2个

INSTALLATION


安装步骤

FOR WITHOUT STORAGE MODELS

以下适用于不带置物架型号的安装步骤

Step1: Install Bottom Track and Wall Jambs


步骤1：安装下轨道与墙边柱

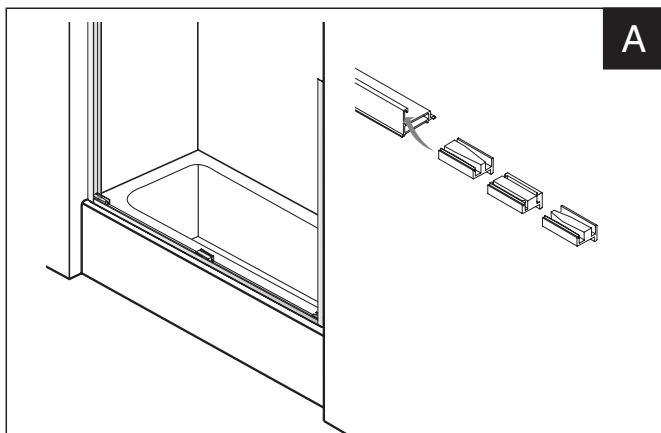

A

A. Insert left end block, middle block and right end block into the bottom track, place the bottom track on the middle the bath tub edges;


A.把三个下轨挡块插入下轨道，把下轨放在盆沿中央；

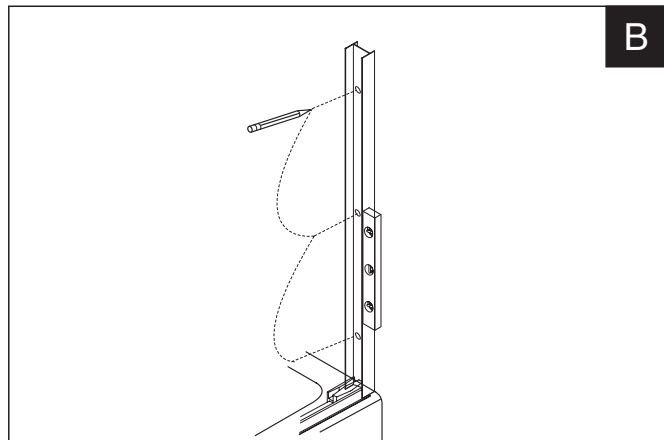

B

B. Place the wall jamb on the wall vertically, inserting into the end of the end block. Mark the drill position;


B.把墙边柱套在下轨端部，垂直贴墙，标注打孔位置；

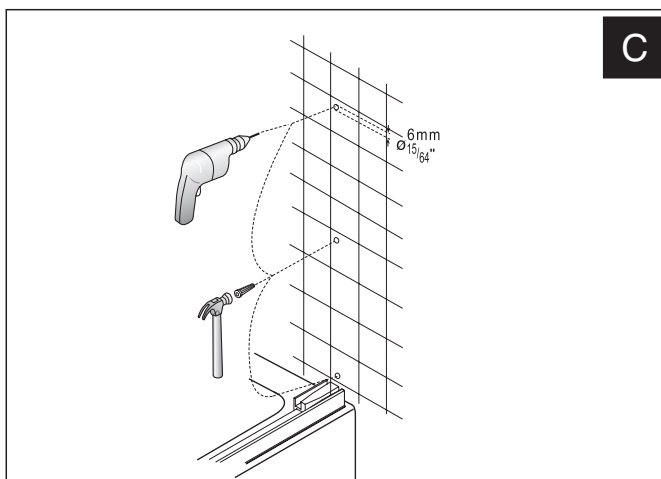

C

C. Drill $\phi 6\text{mm}$ holes and insert wall anchors;

C. 钻 $\phi 6\text{mm}$ 孔，放入墙胶粒；

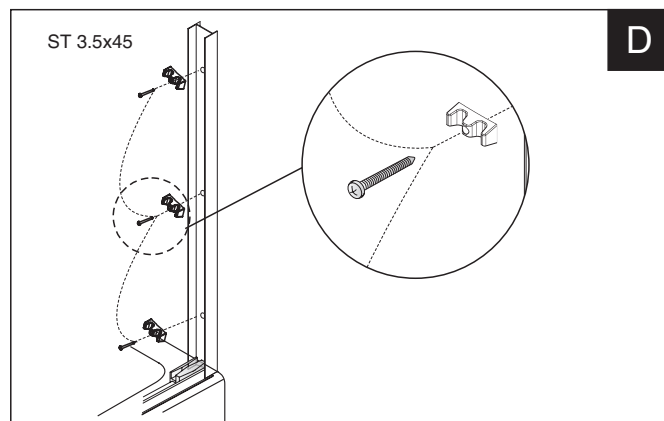

D

D. Fix the wall jamb with ST3.5X45 screws inserting into the buffer insert;


D. 用ST3.5X45的螺钉套入门缓冲垫固定在墙边柱上；

E. The left and right end blocks should be flush against the inner side of the wall jambs. Drill two $\phi 3.2\text{mm}$ holes in the inner side of two ends of the bottom track according to the pre-drilled holes.

E. 左右挡块靠紧墙边柱内侧，在两端内侧沿着挡块预打孔，在下导轨上打两个 $\phi 3.2\text{mm}$ 的孔。

F. Cover the screw cap. (Gray)

F. 盖上拉手螺钉盖(灰色)。


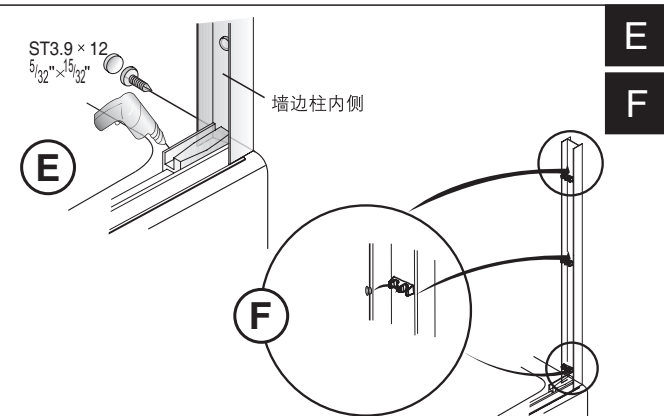


E

F


Setp2: Install Top Rail

步骤2：安装上轨道

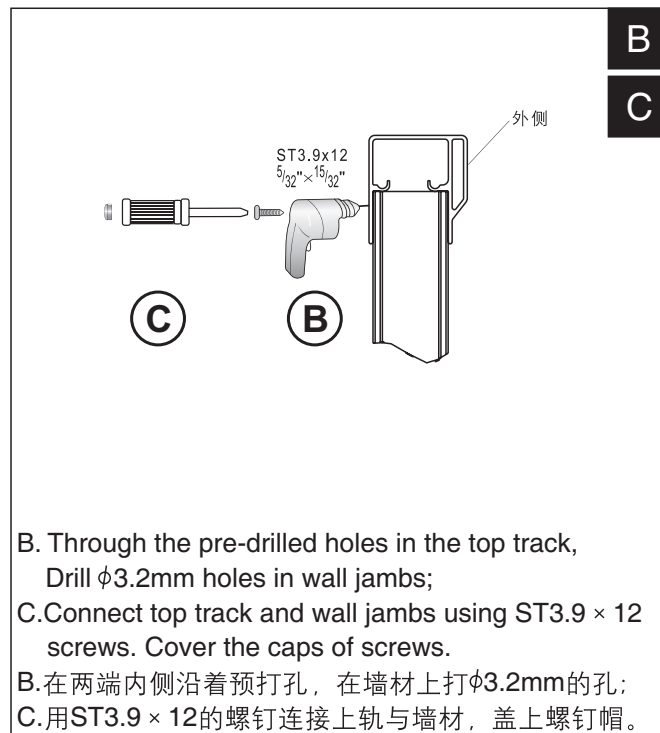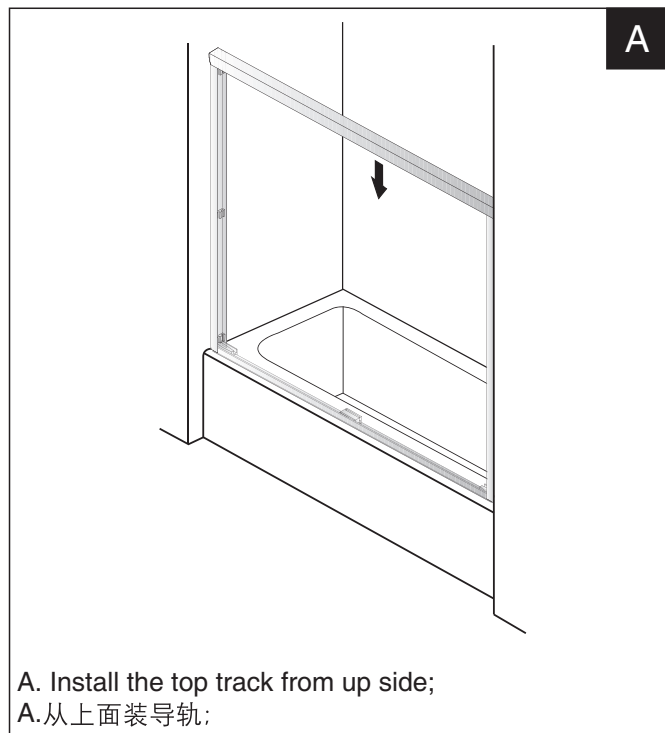


Step3: Install Door Panels

步骤3：安装门扇

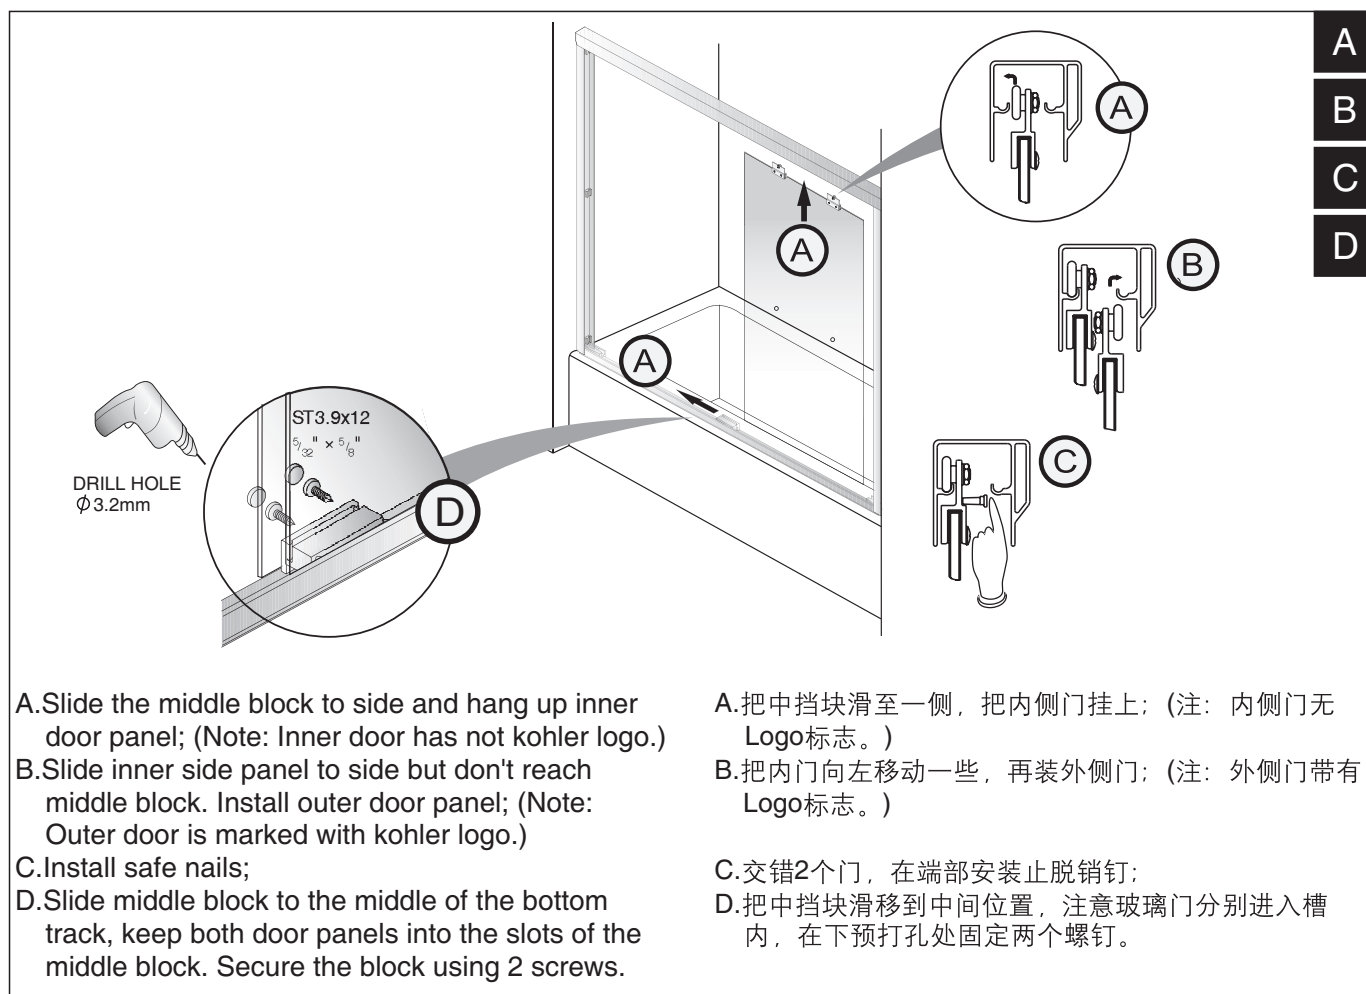

Step4: Install Handles and Apply Silicone

步骤4：安装把手与密封胶

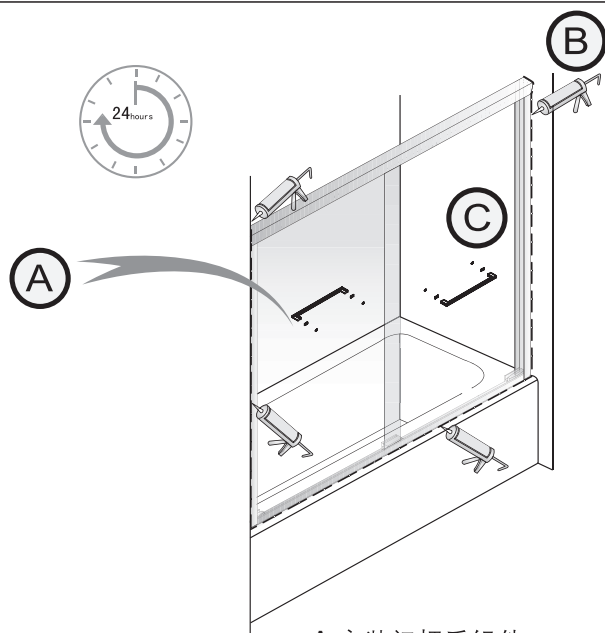

A

B

C

A. Install door handles;

B. Apply silicone along the wall jambs and bottom track outside of the shower door;

C. Apply silicone along the wall jamb and bottom track inside of the shower door.

A. 安装门把手组件;

B. 沿墙材及下轨道外侧密封胶;

C. 沿墙材及下轨道内侧密封胶。

Remark: the shower doors can only be used after 24 hours.


注意：24小时后可以使用。

FOR WITH STORAGE MODELS (For Right Corner Only)

以下适用于带置物架(右置)型号的安装步骤
(左置则反之)


Step1: Install Bottom track and Wall Jambs

步骤1：安装下导轨与墙边柱

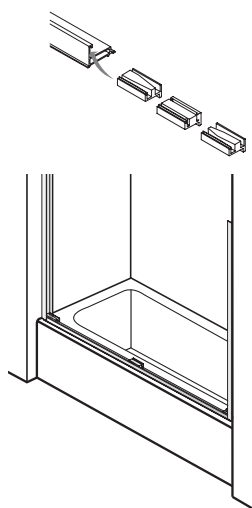

A



A. Insert left end block, middle block and right end block into the bottom track, place the bottom track on the middle of the bath tub edges or of the curb;
A. 把三个下导轨挡块插入下导轨，把下导轨放在盆沿或挡水条中央;

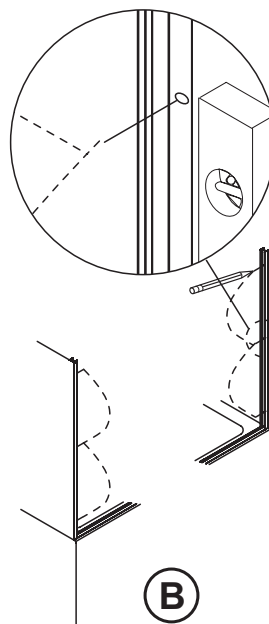

B





C



B. Place the wall jamb on the wall vertically, inserting into the end of the end block. Mark the drill position;
C. Drill 6mm holes and insert wall anchors;
B. 把墙边柱套在下导轨端部，垂直贴墙标注打孔位置;
C. 钻 $\phi 6\text{mm}$ 孔，放入墙胶粒;

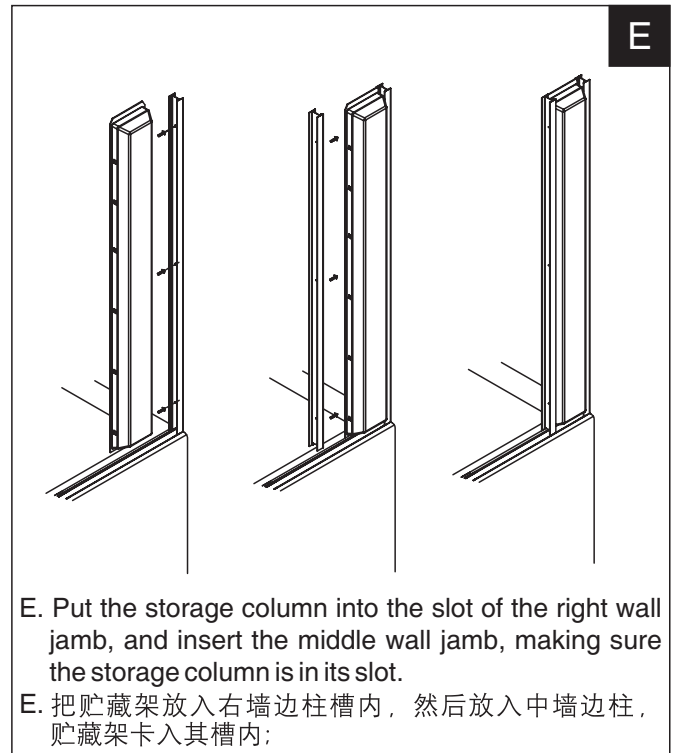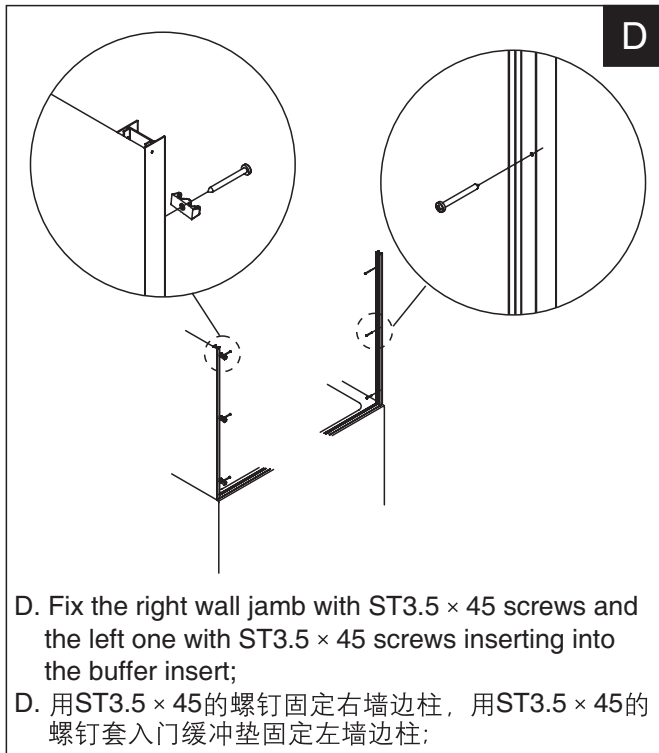

Setp2: Install Top Track


步骤2：安装上导轨

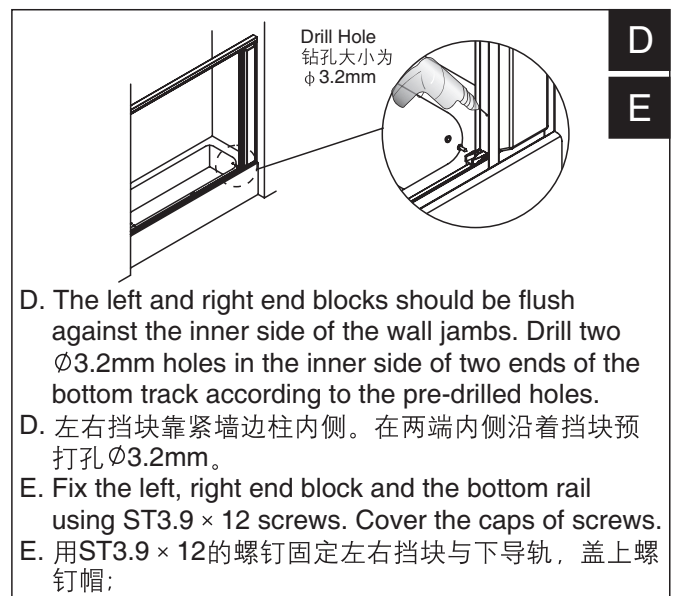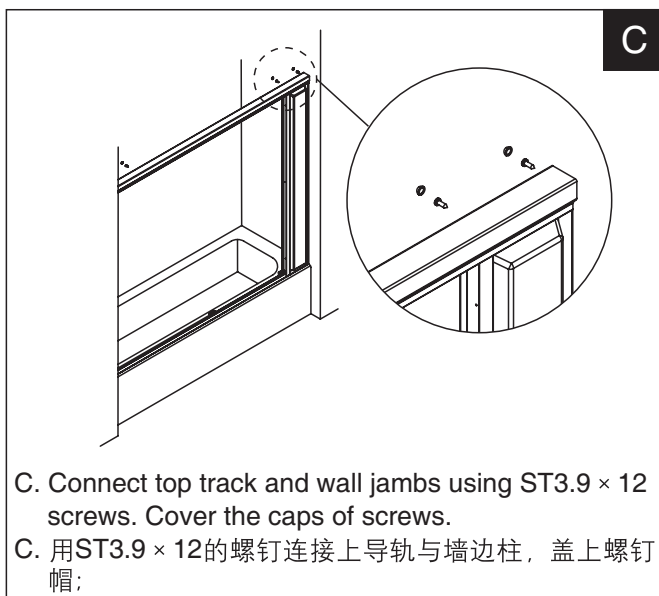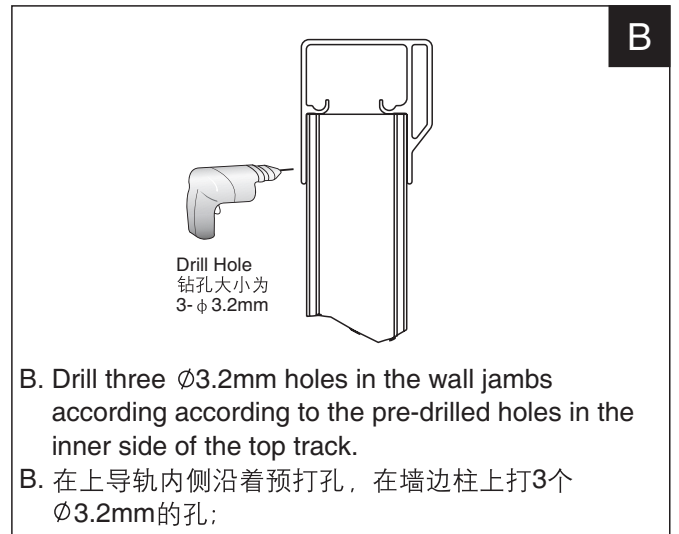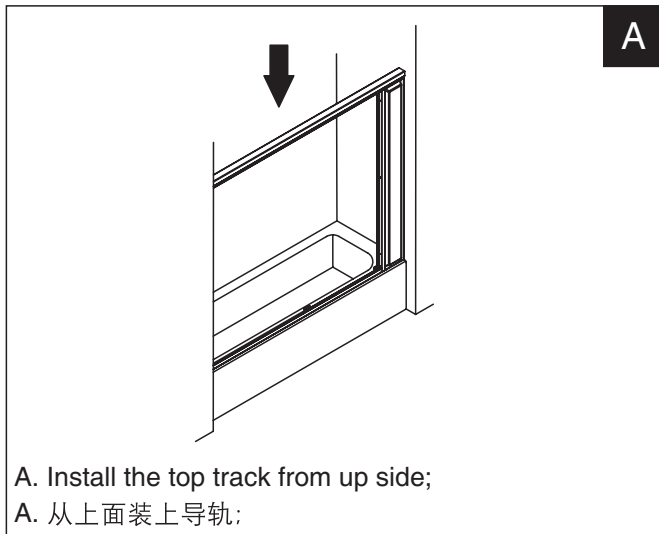

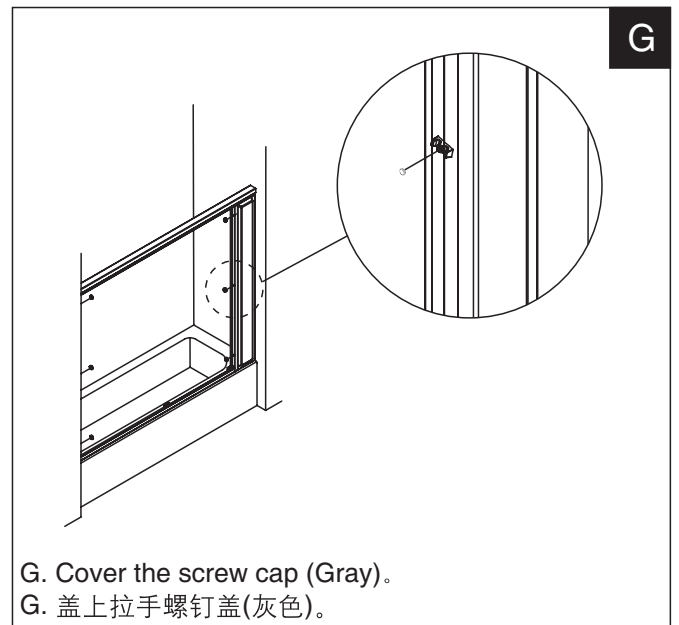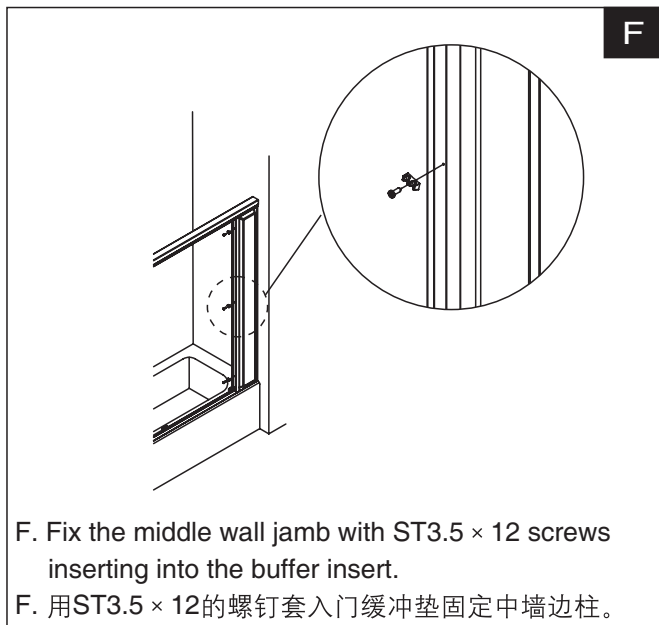

Step3: Install Door Panels

步骤3：安装玻璃门

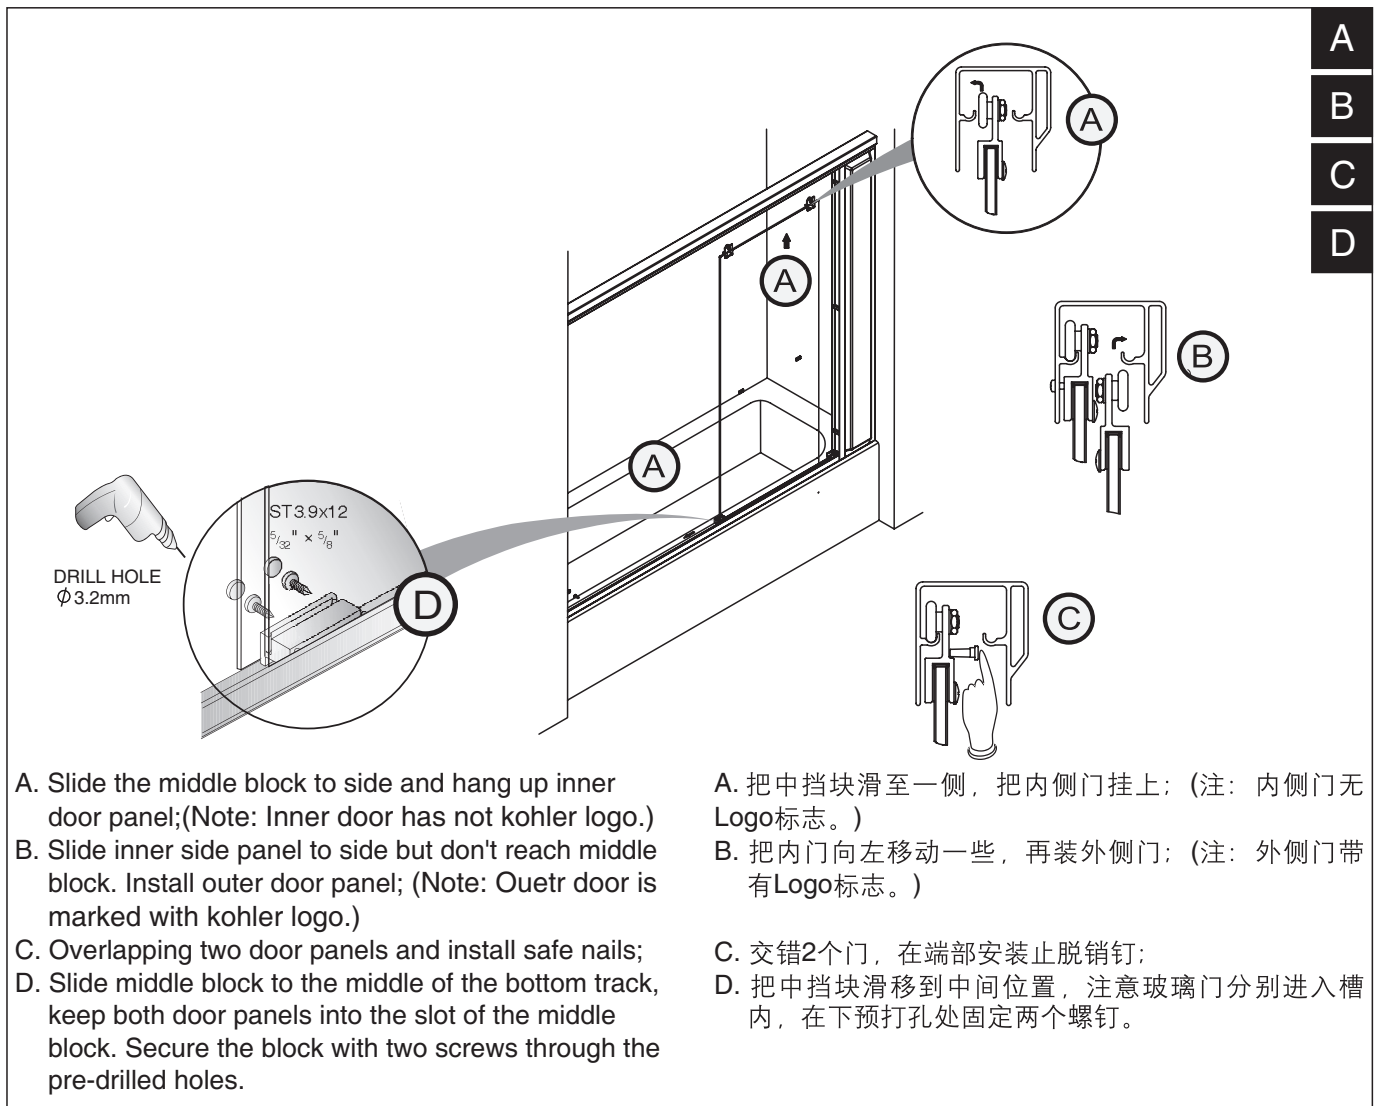


Step4: Install Handles and Apply Silicone

步骤4: 安装拉手与密封胶

A

B

C

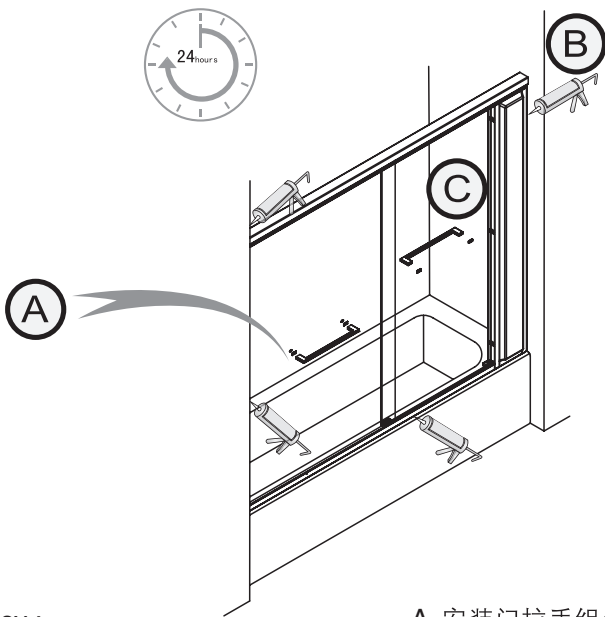

A. Install door handle Assy.;

B. Apply silicone along the wall jambs and bottom track outside of the shower door;

C. Apply silicone along the wall jambs and bottom track inside of the shower door.

A. 安装门拉手组件;

B. 沿墙边柱以及下导轨外侧密封胶;


C. 沿墙边柱以及下导轨内侧密封胶;

Remark: the shower doors can only be used after 24 hours.

注意: 24小时后可以使用。

Step5: Install Chamfer Shelf, etc.

步骤5: 安装隔架等

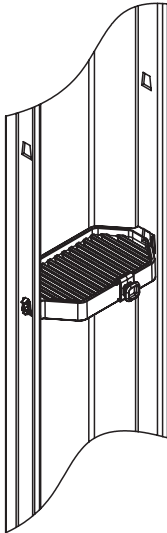

Insert hook shelf into the outside edge of chamfer shelf.

把吊钩卡入隔架外沿。

APPLY SILICONE SEALANT

Apply silicone sealant to the outside (dry side) of the door frame where it comes into contact with the wall and bath unit. Allow the silicone sealant to cure fully before use of the bath unit.

涂装硅胶

给淋浴房框架与墙面和挡水条接触的外部(干燥的一面)涂装硅胶。在使用淋浴房之前，要让硅胶完全凝固。

CARE AND CLEANING

Your Kohler Shower Enclosure will remain beautiful if you take care of it.

Water conditions in various parts of the country will determine any extra cleaning attention you may have to give your new shower enclosure. A simple routine of daily care will keep your shower enclosure looking like new.

Kohler does not recommend the use of abrasive cleaners on any of its products. Harsh cleaners will damage the metal or glass finish on your shower enclosure.

Replace seals, when they show signs of wear, yellowing or are not watertight. Refer to the Kohler Service Parts page.

护理和清洁

阁下所拥有的科勒淋浴房如果能细心加以照料必将长期保持美观。

全国各地不同的水质条件将确定您的新淋浴房可能必须投入额外的清洁力度。一个简单的日常护理习惯将会令您的淋浴房焕然一新。

科勒公司建议不要在本公司产品上使用酸性或碱性清洗剂。烈性的清洁剂将会损坏您淋浴房上的金属或者玻璃表面抛光。

当密封件出现磨损、发黄或者不再防水的时候，请加以更换。参见科勒公司维修零件页。