

BEFORE YOU BEGIN

- Before you install your shower door, please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 3 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.



CAUTION: Risk of injury or product damage.

Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

ATTENTION: Please install this door on Kohler receptors or curbs. (Not included). If the curb is not Kohler-branded, please note its top width should fall within the range of 50~80mm.

IMPORTANT: The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3 mm/m. KOHLER Company won't take responsibility of the installation quality.

安装之前

- 在您安装淋浴房之前, 请您仔细阅读此说明书以熟悉所需要的工具、材料及安装顺序。遵循适合您的特定安装要求的各项内容, 避免昂贵的损失。除了要正确安装外, 还应阅读所有的操作及安全说明。
- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容, 请把这些资料交给用户阅读, 保管。
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理, 并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前, 请拿出、排列并确认所有的零部件。请参考第3页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房, 参照本说明书进行安装。



警告: 可能有人伤害或者产品损坏的危险。钢化玻璃不能进行切割, 钻孔或硬物敲击。搬移或安装过程中, 小心确保玻璃边、角部位不受撞击, 以防爆裂伤人。


建议: 将本产品安装在科勒淋浴盆或挡水条上(需另行购买)。如自备挡水条, 建议顶面宽度尺寸为50~80mm。

重要事项: 淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负3mm/m以内。如果超出此范围, 科勒公司将不保证淋浴房的完美使用。

ROUGHING-IN

尺寸图

Unit: mm
单位: 毫米

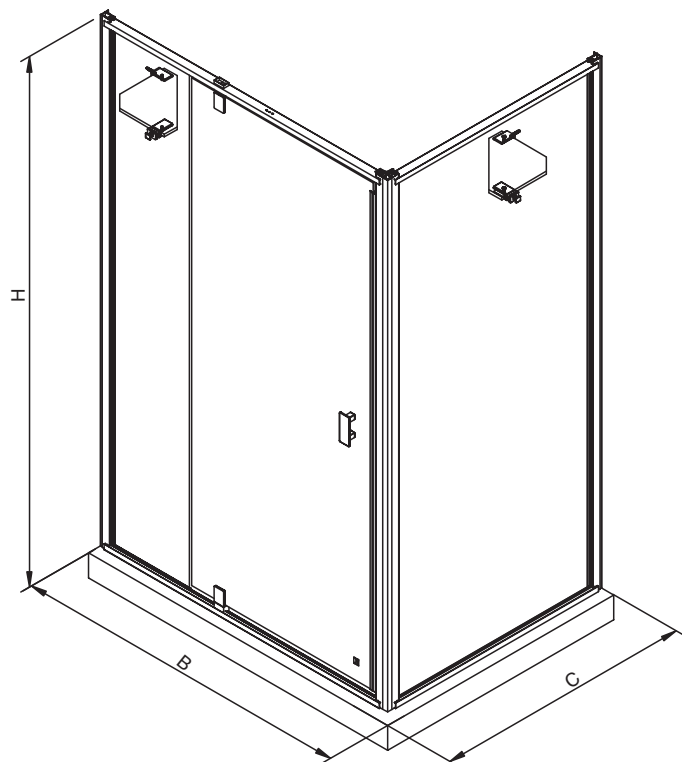

SKU	B	C	H
K-37467T	1000-1400	700-1000	1850-2000

PARTS IDENTIFICATION

零件识别

IMPORTANT

The wall channel for the side panel is delivered to the door assembly. Remove the panel wall channel before installing the door, but do not remove the transit blocks.

Before installation check that all components are correctly supplied.


If any parts are missing please ring the helpline.
800-820-2628

重要

侧扇的上墙型材与门扇组件是连接在一起的。开始安装门扇前请先移开上墙型材，但是注意请勿移除滑块。

安装前请确认包装中所有零件均完好无缺。

如果有零件遗漏，请拨打热线电话：
800-820-2628

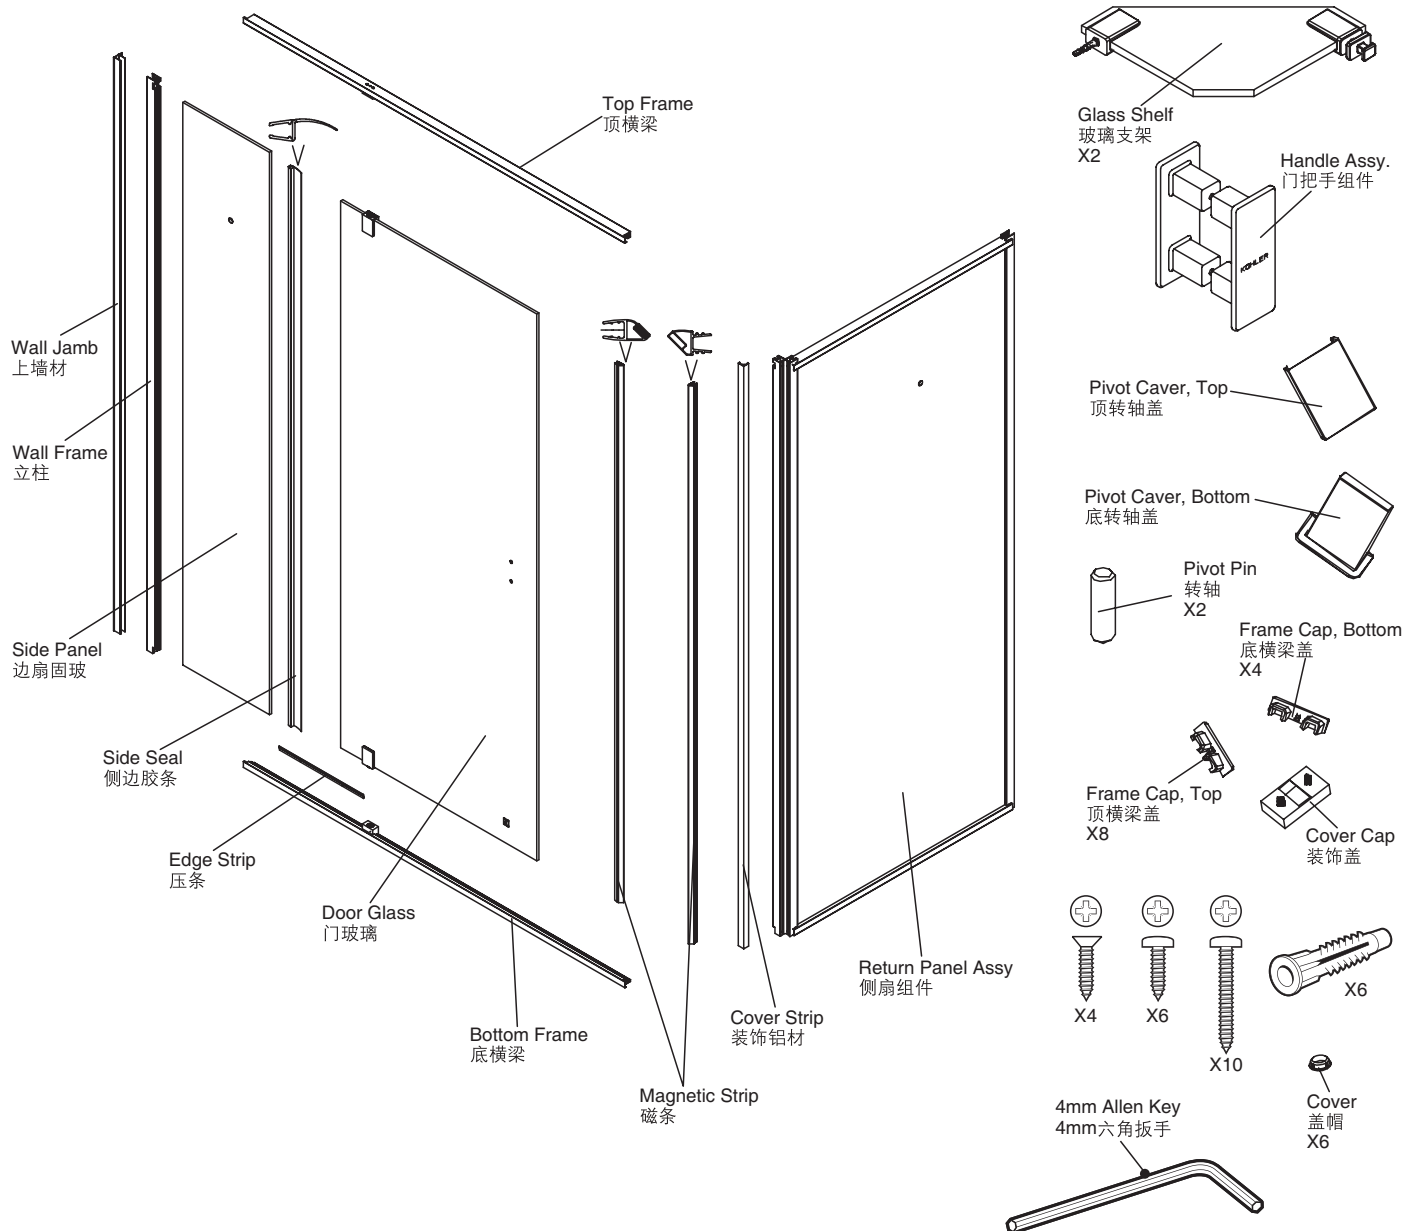

INSTALLATION REQUIREMENTS

安装要求

Tools Required

- Phillips Screwdriver
- Pencil
- Caulk Gun
- Measuring Tape
- Safety Glasses
- Center Punch
- Hammer
- Knife
- Masonry Drill & 6mm Drill Bit
- Level

Materials Required

- Drop Cloth
- Tape
- Silicone Sealant

所需工具

- 十字螺丝刀
- 铅笔
- 硅胶枪
- 卷尺
- 护目镜
- 中心冲
- 锤子
- 刀片
- 冲击钻以及6mm冲击钻头
- 水平仪

所需材料


- 绒布
- 胶带
- 硅胶

NOTE

LH version shown. RH fitting is a mirror image of these instructions.

注意：

左开门安装如图所示，右开门安装则为左开门安装之镜像。

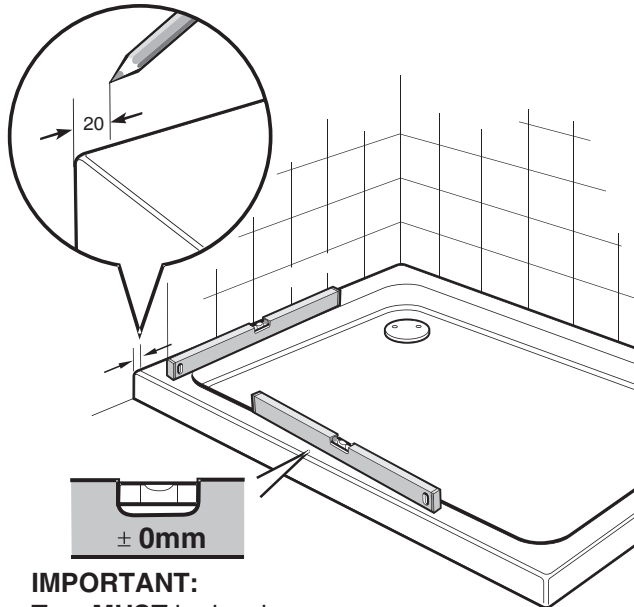

Mark the wall 20mm in from the front edge of the tray on both sides.

从挡水条两边向内偏20mm。

IMPORTANT

Tray must be level in all planes or door will not install properly.

重要：

底盘必须在各个面都保持水平，否则会影响之后淋浴房的安装。

IMPORTANT:

Tray **MUST** be level along front edge.

重要：


底盘必须水平。

STEP

1

Fix the wall jamb.

固定上墙铝材。

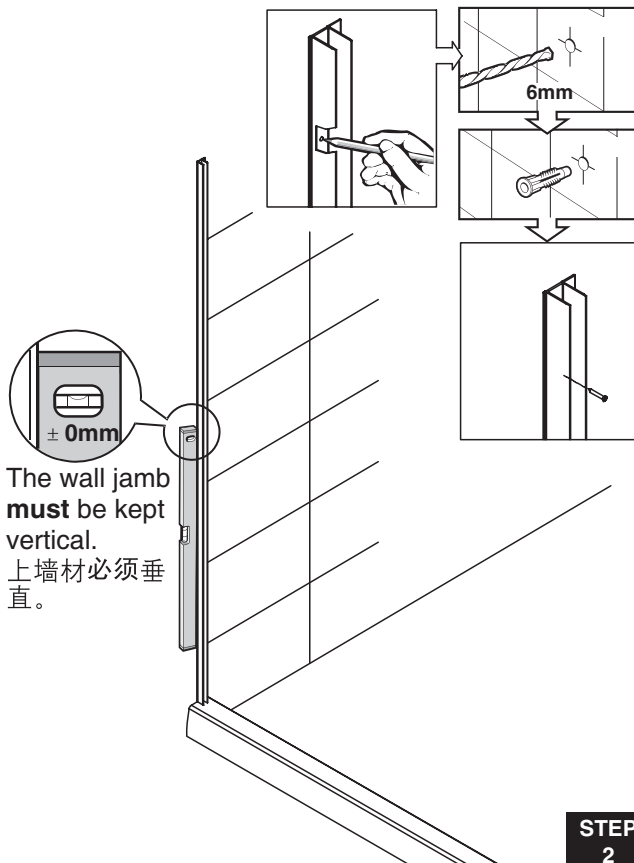

The wall jamb **must** be kept vertical.

上墙材必须垂直。


STEP
2

RETURN SIDE

侧扇


Mark the wall 20mm in from the front edge of the tray on both sides.

从挡水条两边向内偏20mm。

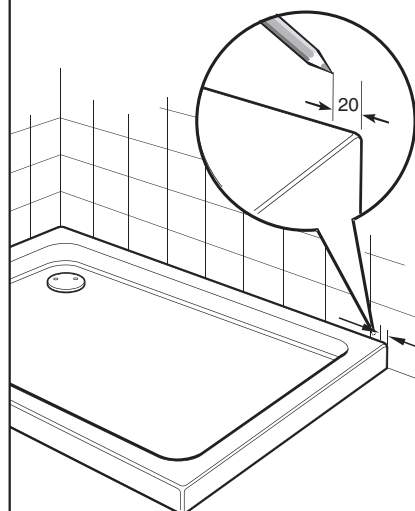


STEP
3


Fix the side wall jamb.
固定侧扇上墙铝材。

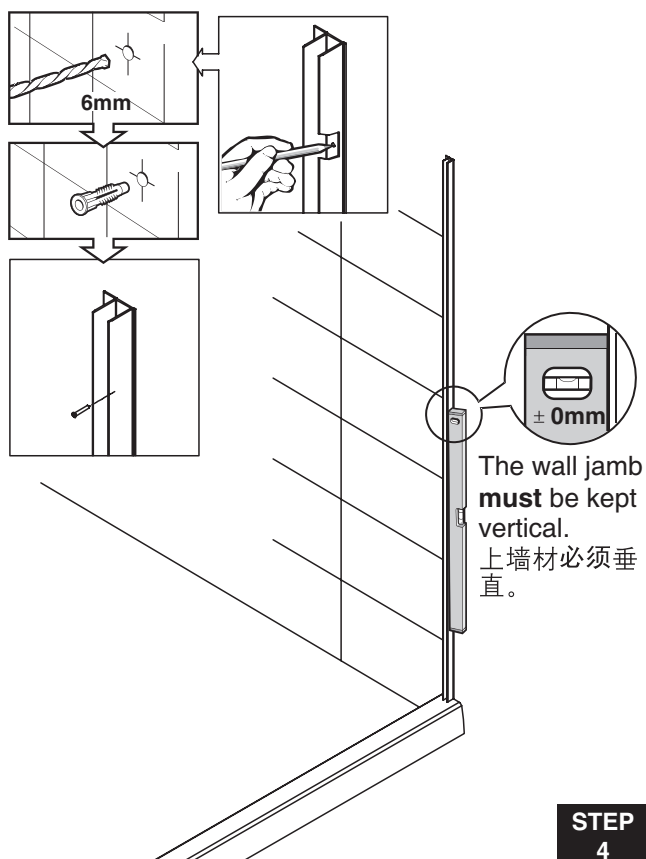


Fix both top and bottom frame to the side wall frame.
将上下横梁固定到边立柱上。

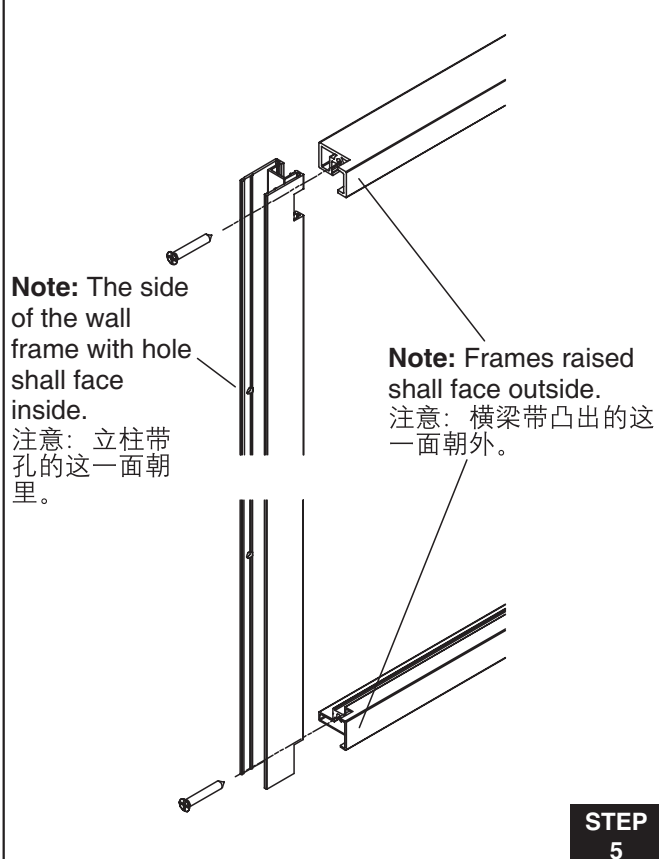


Insert the frame into the wall jamb.
将框架插入上墙铝材。

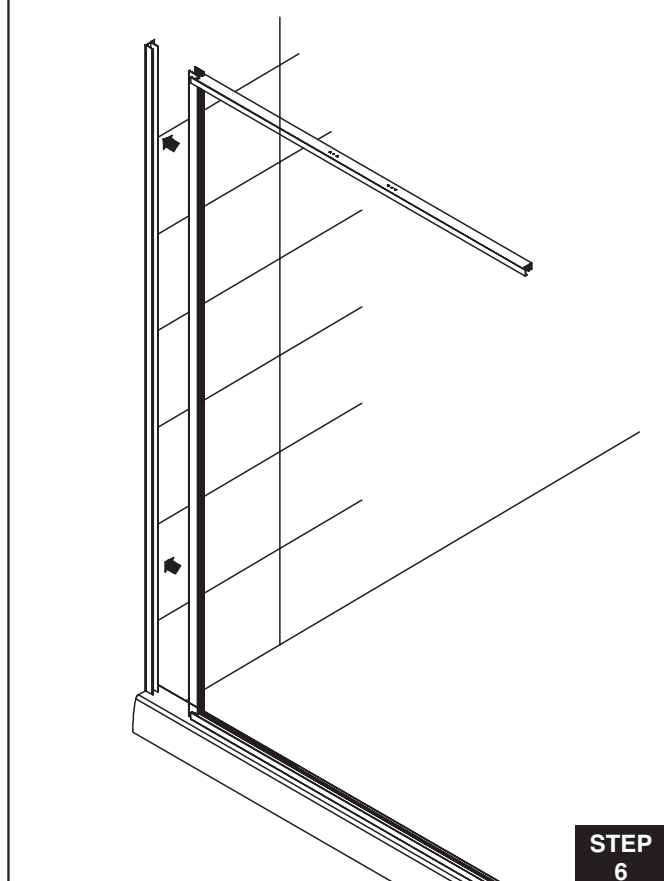

Insert the return panel assy into the wall jamb.
将侧扇组件插入上墙铝材。

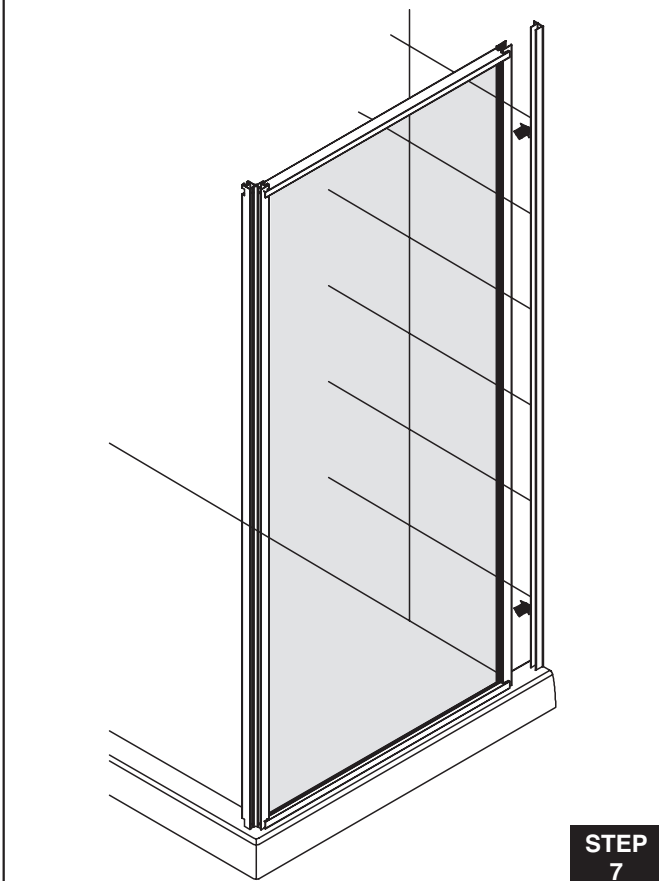


Connect the return panel assy with the top and the bottom frame.
将侧扇组件和上下横梁连接起来。


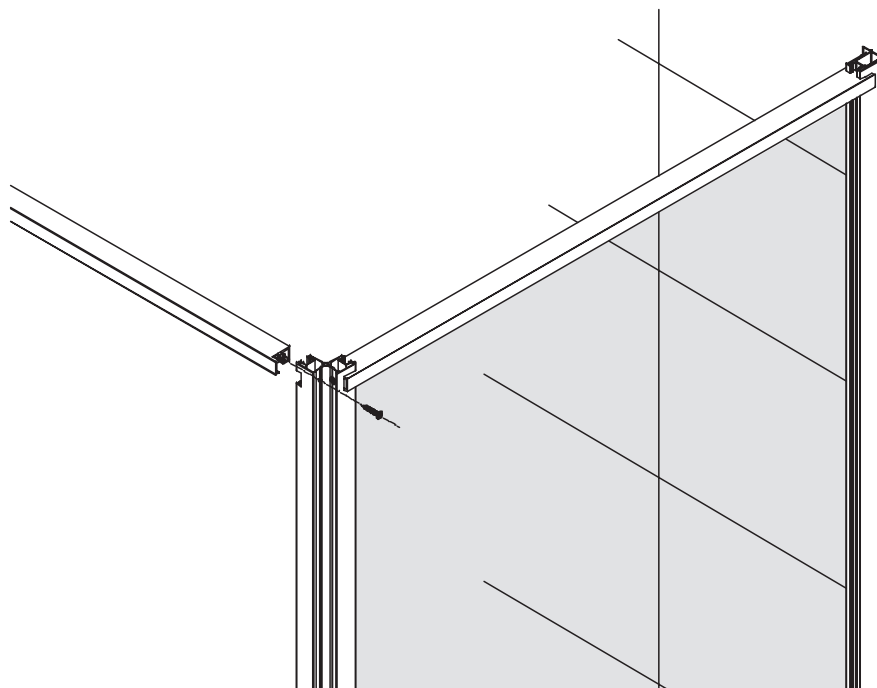


STEP
8

Please first insert the glass into the top frame and then into the bottom frame.
先将边扇玻璃往上插入上横梁槽内，再卡入下横梁。

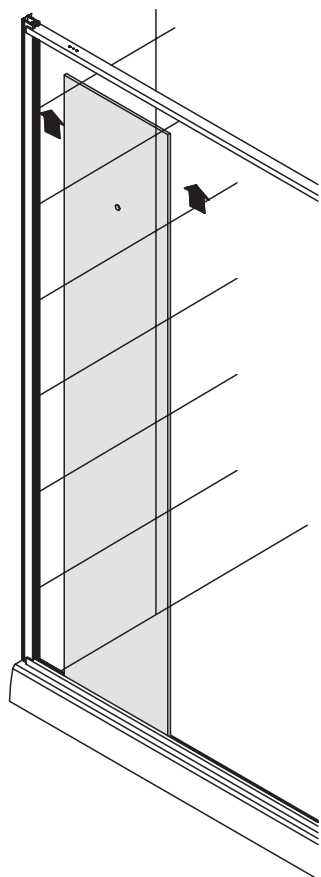


Please insert the glass in the correct direction: the end with the hole shall be close to the top frame and the labeled side with arrows on the label shall be against the wall.
注意玻璃方向：带孔端朝上；带箭头标签端靠墙。

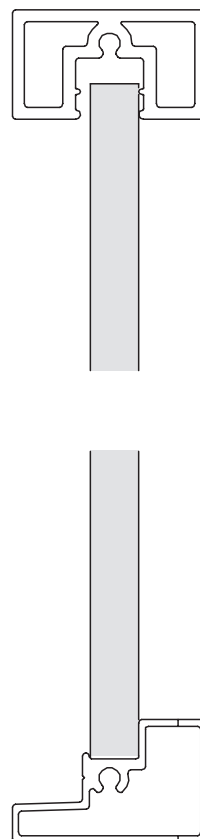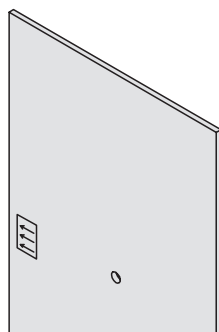

STEP
9


Insert the glass into the wall frame.
将玻璃插入边立柱槽内。

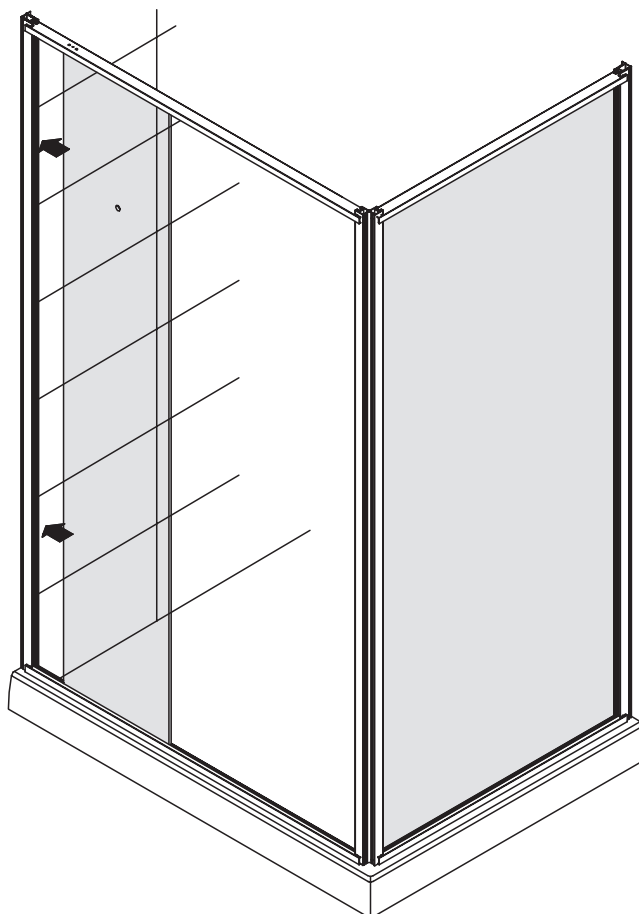


STEP
10

Lift the door into place.
Insert the pin into the base and then insert the glass door.
安装玻璃门，将转轴插入底部轴座上，然后将玻璃门对位插入。

IMPORTANT: Ensure the door is fully supported at all times.
重要：整个安装过程中玻璃门必须有足够支撑。

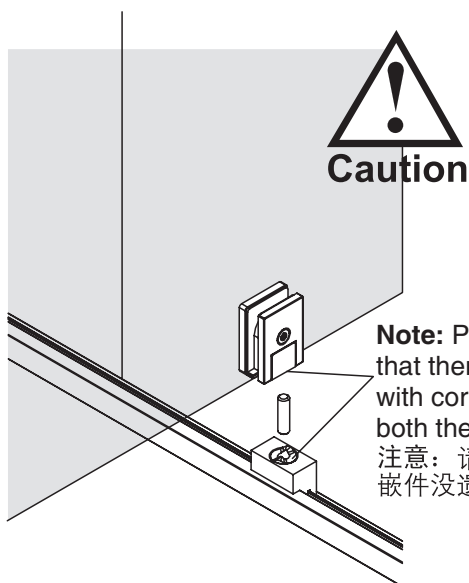


Note: Please make sure that there should be inserts with correct directions at both these two places.
注意：请确认此两处的塑料嵌件没遗失且方向正确。

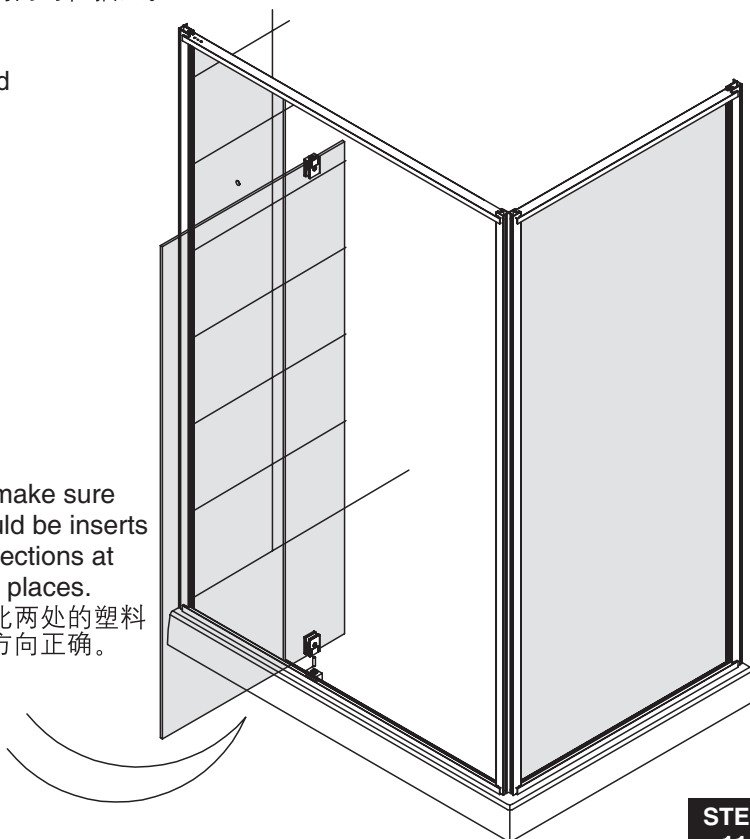


STEP
11

Remove the pivot pin assembly on top.
卸下顶部转轴组件。

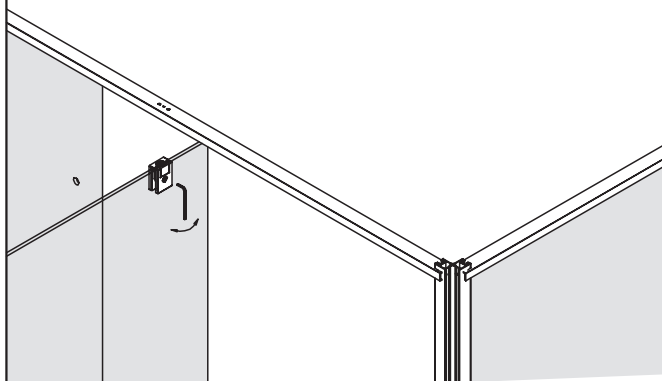

STEP
12


Insert the pivot pin both into the base and the body.
Then tighten the glass and the pivot pin assembly.
将转轴插入轴座及轴体，再将玻璃和转轴组件锁紧。

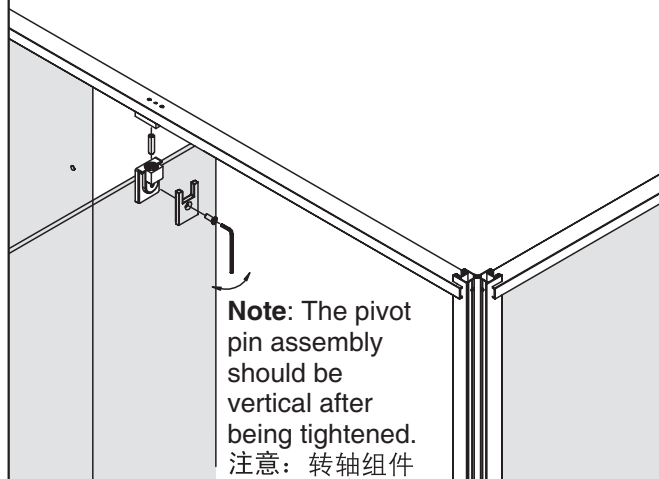

Note: The pivot pin assembly should be vertical after being tightened.
注意：转轴组件锁紧后应该垂直。


STEP
13

Install the handle.
安装把手。

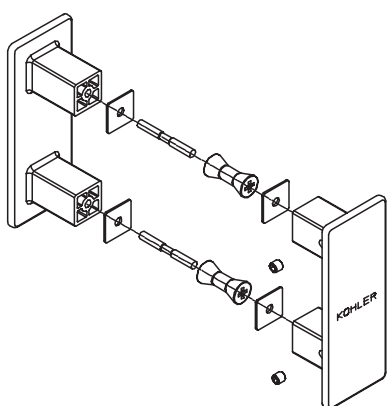


STEP
14

Push the wall frames at both sides to make the gap even between the glass and the top and bottom frames.
左右推动两边立柱，直到门玻璃与横梁的间隙均匀。

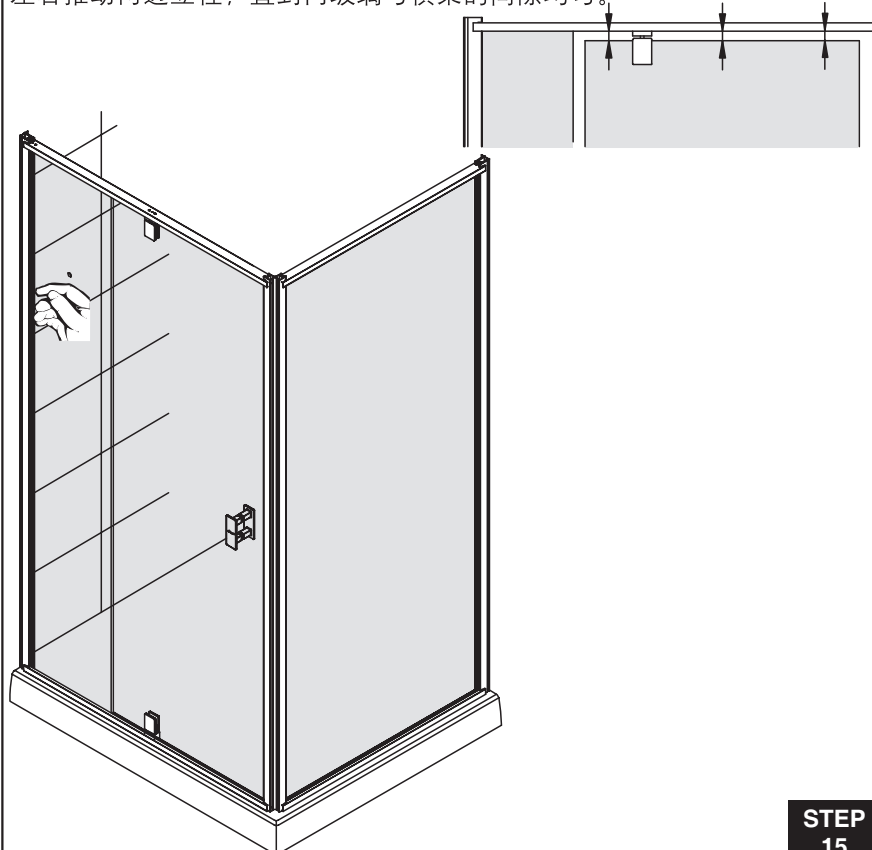


STEP
15

Tighten the wall jamb and the wall frames.
锁紧上墙铝材及边立柱。

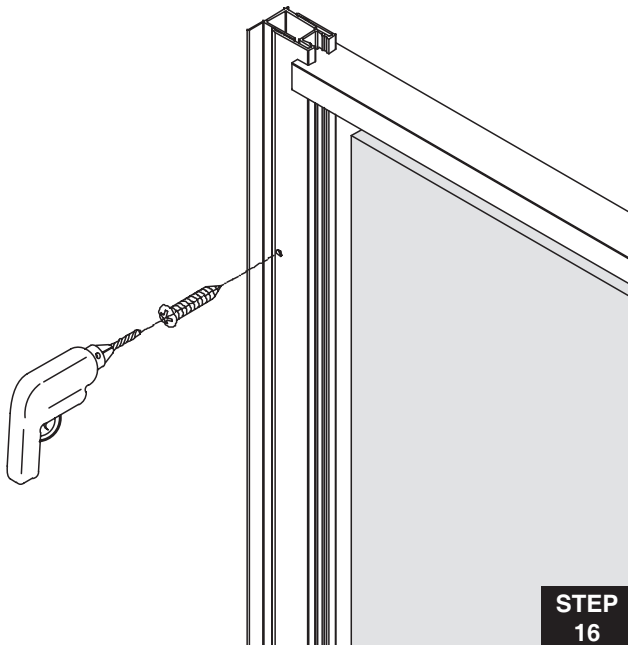

STEP
16


Fix the magnetic strips onto the door glass and the wall frames.
将磁条分别装到门玻璃及立柱上。

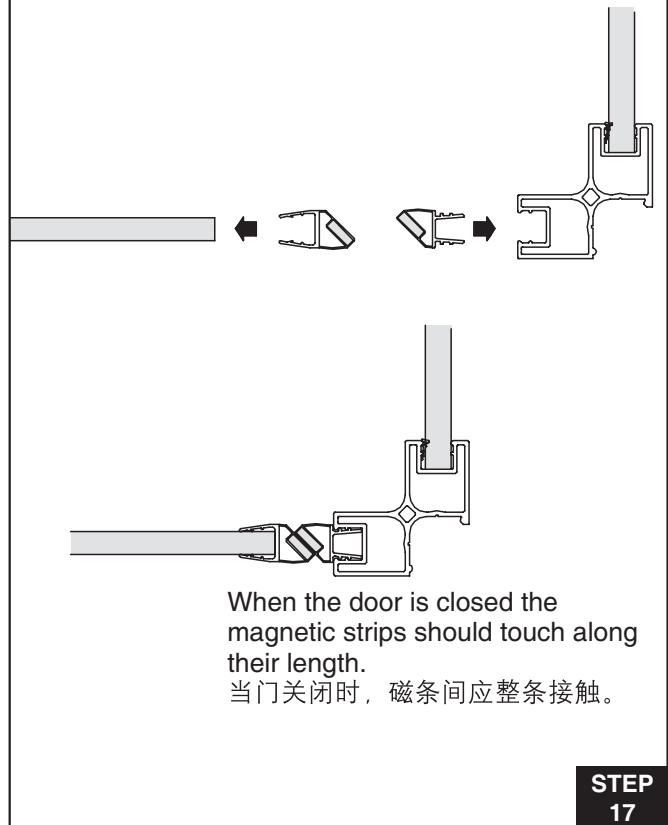

When the door is closed the magnetic strips should touch along their length.
当门关闭时，磁条间应整条接触。


STEP
17

Fix the glass and the top frame. Then insert the side seal into the wall frame.
固定玻璃与上横梁及立柱间卡如单边胶条。

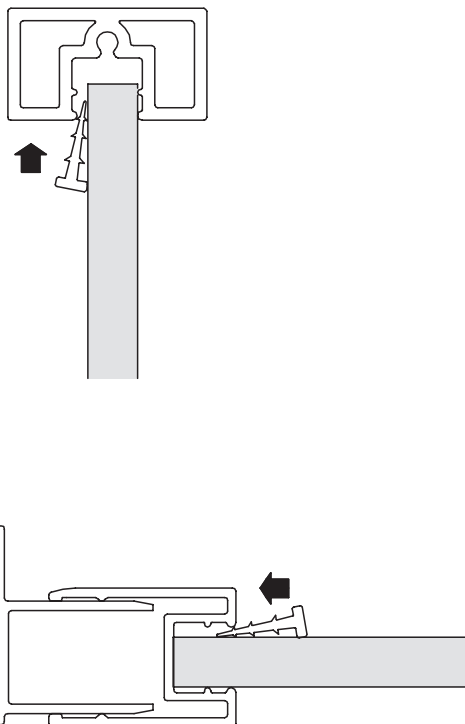

STEP
18


Install the edge strip to fix the side panel.
安装压条，锁紧固定玻璃。

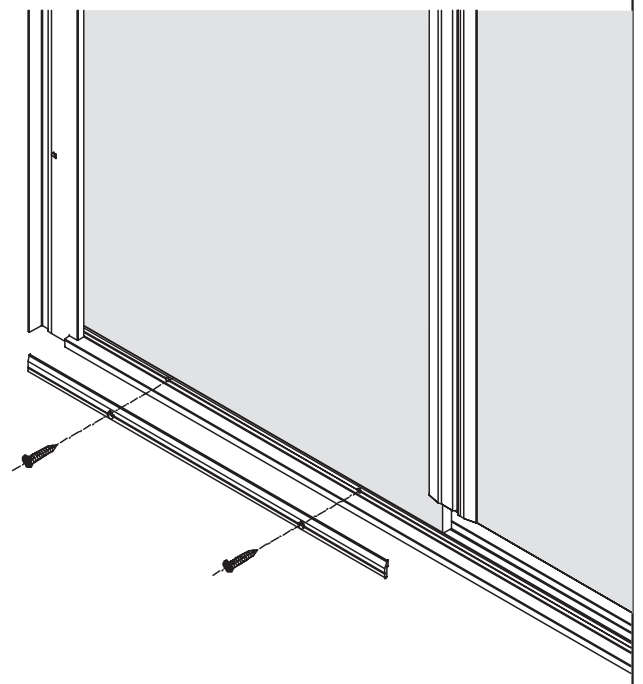

STEP
19


Install the base of the glass bracket.
安装玻璃支架座。

Note: Ensure the accessory is positioned in a horizontal way.
注意：配件应该处于水平状态。

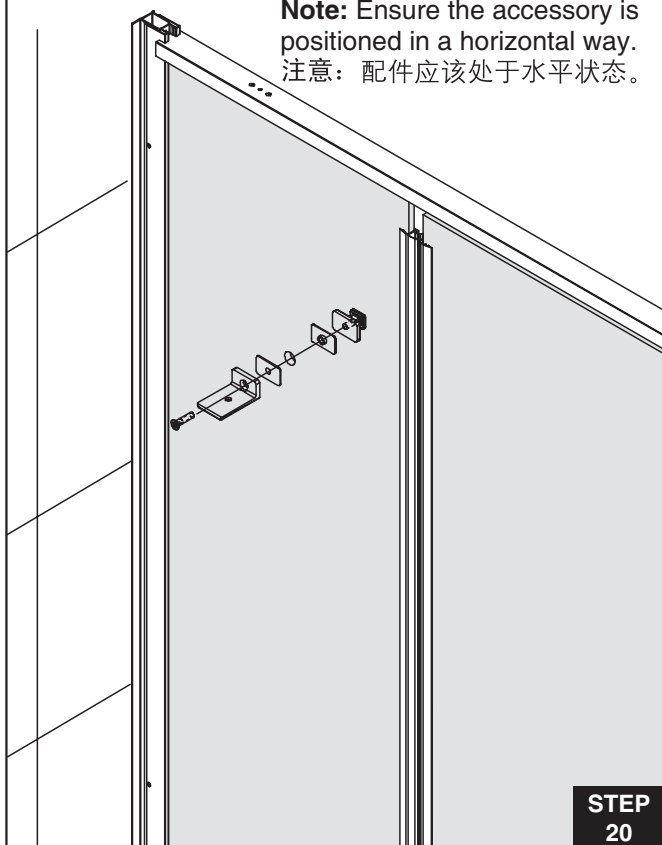


STEP
20

Line, then fix the bracket base.
画线，固定支架座。

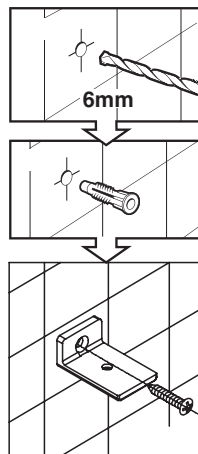


Note: Ensure the accessory is positioned in a horizontal way.
注意：配件应该处于水平状态。

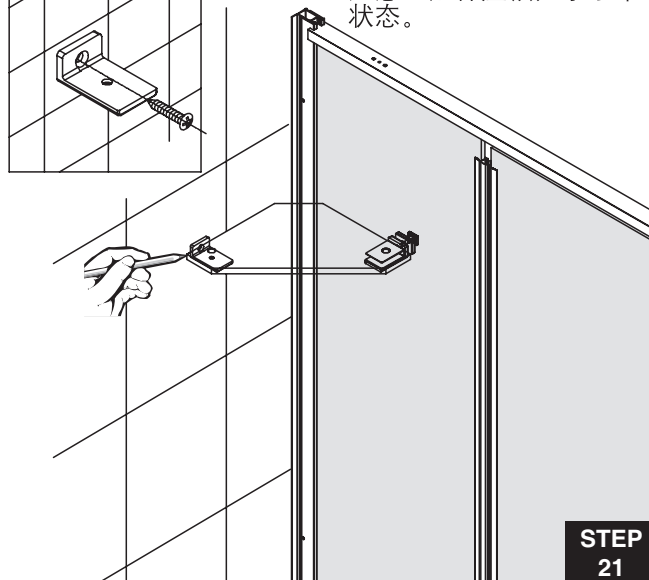


STEP
21

Fix the glass bracket.
固定玻璃支架。

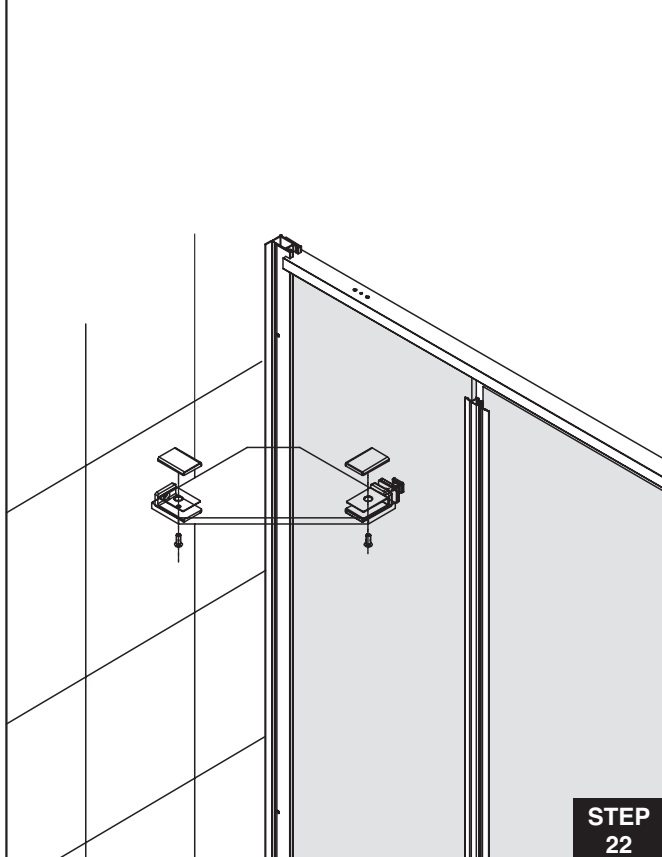


STEP
22

Insert the cover seal to the top frame.
将装饰胶条卡入上横梁。

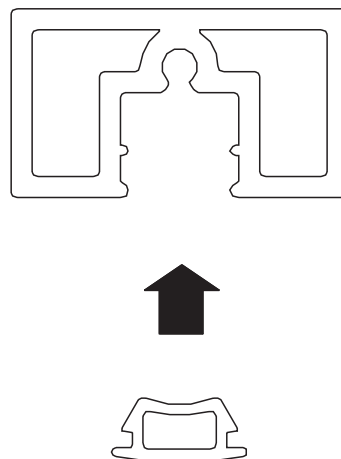


STEP
23

Insert the bottom seal to the door glass.
将底边胶条卡到门玻璃上。

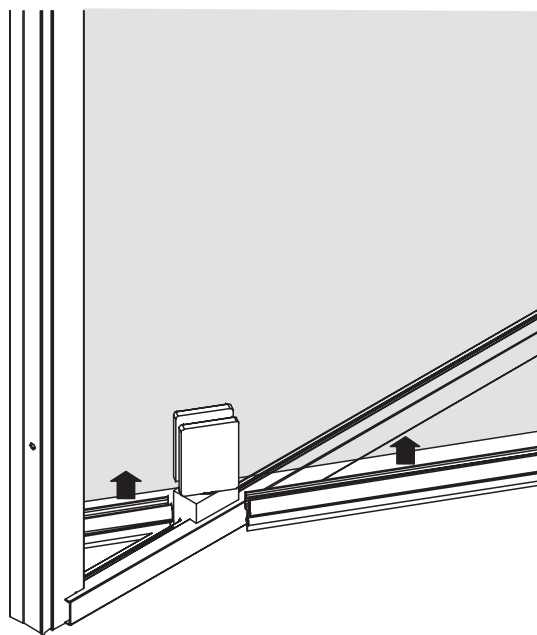


STEP
24

Install the cover strip.
安装装饰铝材。

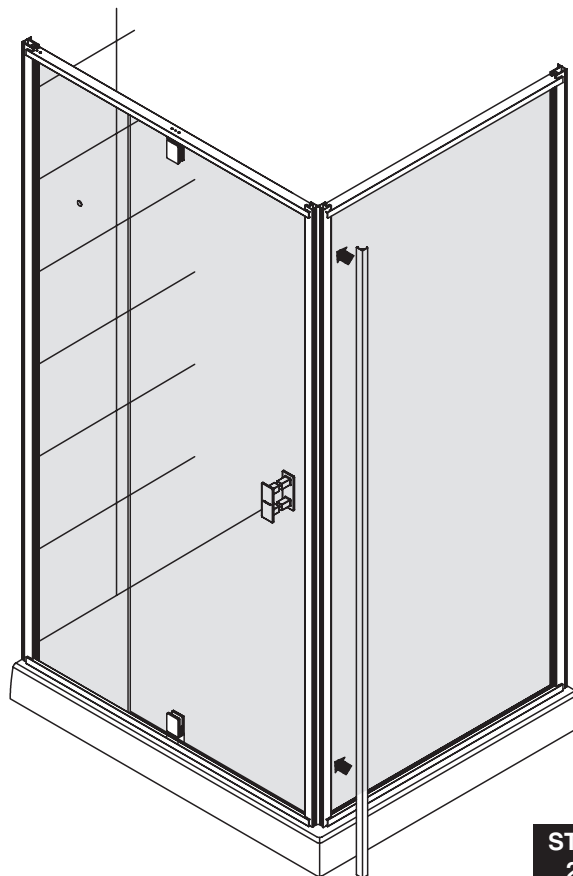


STEP
25

Install the pivot pin and other cover caps.
安装转轴及其他装饰盖。

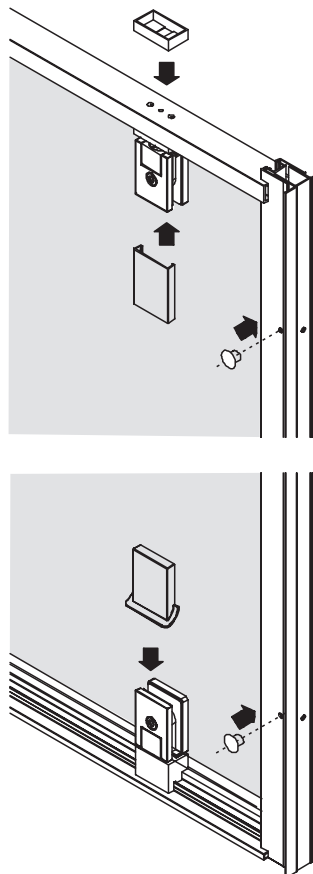


STEP
26

Install the frame cap of top and bottom frame.
安装上下横梁堵头。

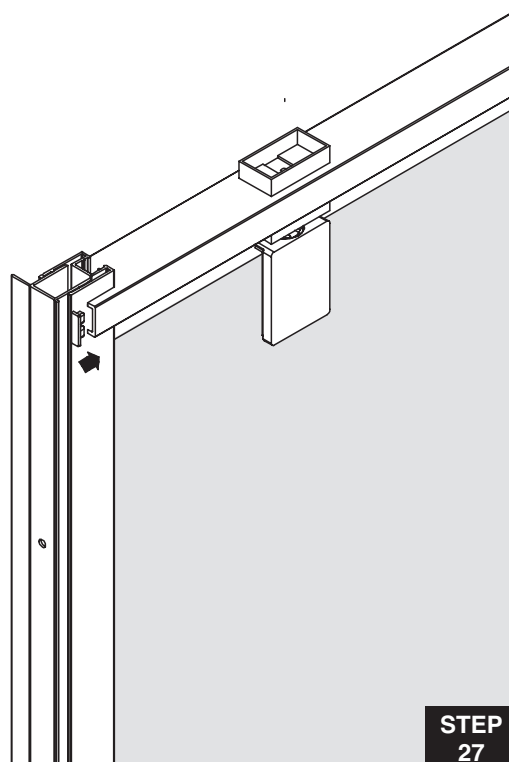

STEP
27

Lay a thin bead of sealant between the wall channel and the bottom frame.
在两边上墙材及下导轨涂上一层薄的防水胶。

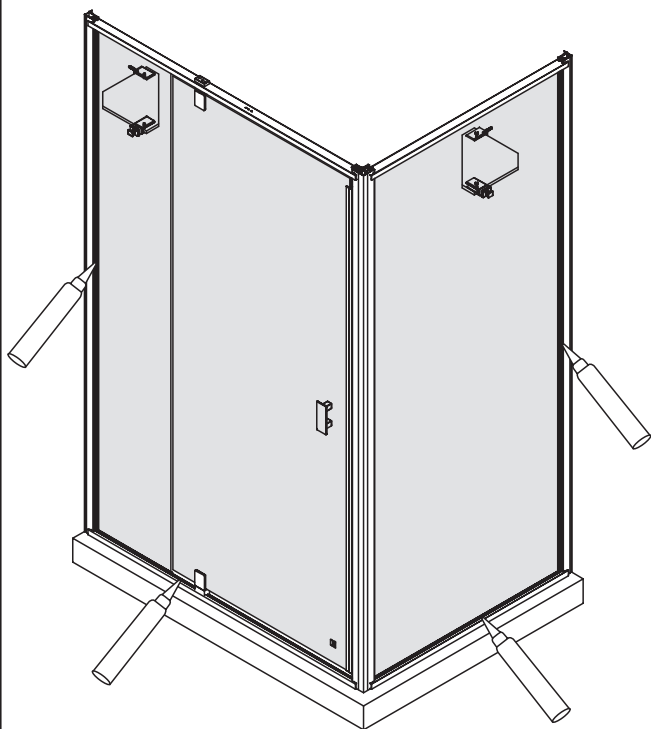

STEP
28

Do not use the enclosure for at least 24 hours.
安装后24小时内请勿使用淋浴房。



24hrs

STEP
29