

1203093-2-A

安装步骤


如何安装水龙头

为使安装顺利，G1/2"内螺纹管道配件(1)应已装好。预留150mm的间距，保持水平。管道配件要垂直并不能凸出装修好的墙面。热供水管装在左边。

在两个接头(2)涂上螺纹密封胶或缠绕足以密封的密封胶带，旋入冷热水管中。

调节两个接头，使其中心距离为150mm并保持同一水平。它们凸出墙面的尺寸应该在36到47mm之间。

将装饰盖(3)套入水龙头螺母(4)。将垫片(5)放入水龙头螺母中，将螺母旋到接头上。用带状扳手或用软布垫在普通扳手和螺母之间，锁紧螺母。将装饰盖后推至与墙面接触。

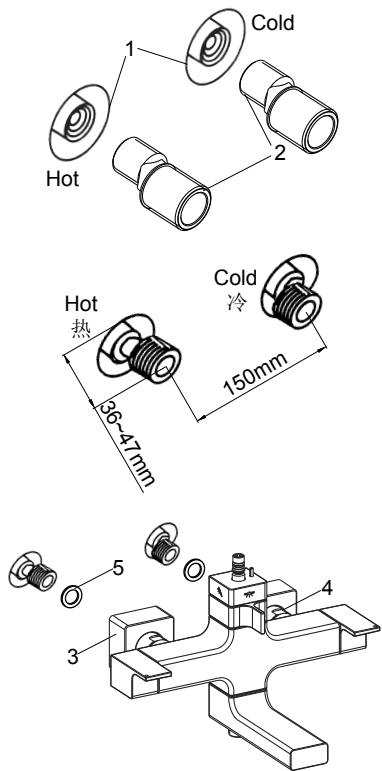

INSTALLATION

How To Install The Faucet

To perform installation, installer must provide G1/2" female supply fittings(1), spaced 150mm apart and level. The supply fittings should be vertical and not beyond the finished wall. Hot supply pipe must be located on the left.

Install the two offset connectors(2) into the hot and cold supply pipes. Use appropriate thread sealants or thread tape on pipe threads.

Adjust the center-to-center distance between the connectors to 150mm and level. They should extend 36 to 47mm beyond the finished wall.

Slide the escutcheons(3) onto the nuts(4). Put the washers(5) into the nuts, thread the nuts to connectors. Tighten the nuts with strap wrench or soft cloth between product and regular wrench. Push the escutcheon against the finished wall.

如何安装淋浴杆


试装滑杆组件(6)，以确定胀塞(7)安装位置。将滑杆组件通过销子(8)装在龙头上。将接头(9)紧贴墙壁放置。若不能贴紧墙壁，则通过旋松或旋紧接头使其紧贴墙壁放置。用铅笔在墙面上标记接头底部的轮廓和底部轮廓的中心点。

根据胀塞直径在中心点位置钻孔。将胀塞塞入孔中，用自攻钉(10)带垫片(11)固定底座(12)。

注意：底座上有圆形凹槽一面贴紧墙面。

将装饰盖(13)套在接头(9)上。将滑杆组件通过销子装在龙头上，同时将接头(9)套在底座(12)上。用六角扳手(14)锁紧螺钉(15)。用六角扳手(16)锁紧螺钉(17)。将装饰盖(13)后推至与墙面接触，用六角扳手(14)锁紧螺钉(18)。

Slide the escutcheon(13) onto the connector(9). Install the slide bar kit onto the faucet by the pin, and Install the connector(9) onto mounting board. Tighten the screw(15) with the hex wrench(14). Tighten the screws(17) with the hex wrench(16). Push the escutcheon(13) against the finished wall, and tighten the screw(18) with the hex wrench(14).

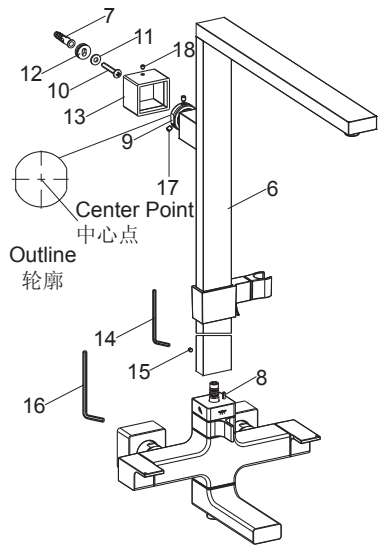

How To Install The Slide Bar

Rehearse the slide bar kit(6) installation for the anchor(7) mounting location determination. Install the slide bar kit onto the faucet by the pin(8). Place the connector(9) against the finished wall. If not, make it against the finished wall by loosening or tightening the connector. Mark the outline of the bottom of the connector and the center point of the outline with a pencil on the wall.


Drill a hole on the center point as the anchor diameter. Press the anchor into the hole. Secure the mounting board(12) by the self-tapping screw(10) with the washer(11).

NOTE: Orient the side with round groove on the mounting board against the finished wall.

如何安装手持花洒和软管

将切换手柄(19)旋至手持花洒标志处，打开水源冲掉杂质。

去掉软管(20)两端接头的保护套。将软管的短接头(20-1)与接头(21)连接并拧紧。将软管的长接头(20-2)与花洒(22)连接并拧紧。

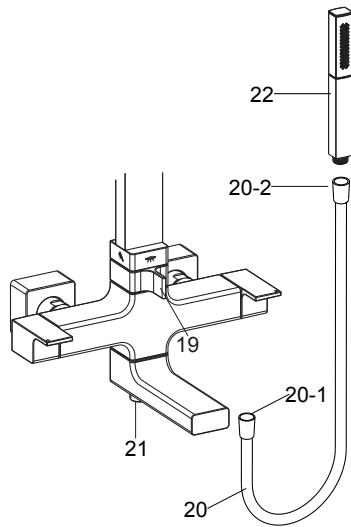

How To Install The Handshower And The Hose

Turn the diverter handle(19) to the handspray logo and run hot and cold water for about one minute to remove any debris.


Remove the guards on the outlet connectors of the hose(20). Tighten the shorter connector(20-1) of the hose to the connector(21). Tighten the longer connector(20-2) of the hose to the handshower(22).

如何安装花洒头

装花洒头(23)之前，将切换把手(19)旋至花洒头标志处，打开水源冲掉管路中的杂质。

将花洒头旋到出水口(24)上，用带状扳手锁紧。

在装花洒头之前，可根据需要安装限流器(25)。先取出垫片(26)，按图示方向放入限流器，再装回垫片。

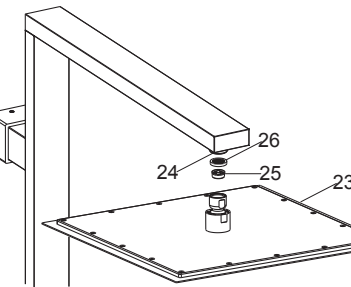

How To Install The Shower Head

Turn the diverter handle(19) to the showerhead logo and run hot and cold water for one minute to remove any debris before the shower head(23) is installed.

Tighten the showerhead onto the outlet (24) with strap wrench.

Before installation, install the regulator (25) if needed. Take out the washer(26) and install the restrictor as the figure shown, reinstall the washer.

安装结果检查

检查并确保所有的衔接处都已拧紧，确保手柄在关的位置。

打开排水系统和主要供水源，检查并修理有漏水的接口。

INSTALLATION CHECKOUT

Ensure that all connections are tight. Ensure that the handles are in the off position.

Turn on the drain and main water supply, and check for leaks. Repair as needed.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可适用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.