

No.2 KOHLER ROAD, SANSHUI CENTRAL INDUSTRIAL PARK, LEPING TOWN, SANSHUI DIST., FOSHAN, GUANGDONG, PRC POST CODE: 528137
广东省佛山市三水区乐平镇三水中心工业园区科勒大道2号 邮编：528137

8# MENGSHAN RD, ECONOMIC DEVELOPMENT ZONE OF HUANTAI, ZIBO, SHANDONG, CHINA POST CODE: 256410
山东省淄博市桓台经济开发区蒙山路8号 邮编：256410

NO.1 KOHLER STREET, ECONOMIC DEVELOPMENT ZONE OF FAKU COUNTY, SHENYANG LIAONING PROVINCE, PRC POST CODE: 110400
辽宁省沈阳市法库经济开发区科勒大街1号 邮编：110400

REMOVE EXISTING LAVATORY

- Turn off the water supply to the faucet.
- Open the faucet valves, then disconnect the supply lines.
- Disconnect the drain assembly and remove the trap.
- Remove the existing lavatory.

INSTALLATION

- Cut the template on the cut-out line.
- Position the template on the counter top to ensure clearance between the lavatory, faucet, and back splash. Verify cabinet clearance beneath the counter top.
- Trace the template on the counter top with a pencil.
- Check the clearance between the lavatory, faucet, back splash, and cabinet. Readjust the template.

- Drill a 13mm hole on the inside of the outline.

- Cut the opening in the counter top along the inside edge of the pencil line.
- For marble counter top, be sure to follow cutting instructions from manufacturer.

- Temporarily position the lavatory in the opening, and adjust to fit.
- Trace a pencil line around the outside edge of the lavatory.
- Remove the lavatory.

If the faucet and drain are not installed, install them this time. Be sure to follow all instructions packed with the product.

- Apply sealant to the inside of the pencil line.
- Spread the sealant evenly with a putty knife.

NOTE:

- Please use soft and water-proof sealant.
- Do not use epoxy resin adhesive or sealing materials that will expand after concreting, such as cement. Otherwise, Kohler will not be responsible for any product damage caused by such material.

- Carefully position the lavatory in the opening of the countertop and press down firmly. Mount the washer, bolt 2 and bolt 1 in sequence from bottom of the countertop.

Note: Fix one side of frame to the product by bolt 2, then screw bolt 1 in the other side of frame, and adjust the frame to level; Lock in bolt 2 (do not overtighten, avoid damage to the ceramic)

- Apply a bead of sealant around the counter top cut-out hole. Wipe away any excess sealant with a clean cloth. Allow the sealant to cure for at least 30 minutes before proceeding.

- Connect and tighten the trap to the drain, and complete the water supply connections to the faucet according to the instructions packed with the faucet.

- After installing the dropper, put the decorative cover in the sink hole.

- Accessories are placed in front of the basin as follows.

NOTE

- This product cannot be used with large cap drain;
- It is recommended to use Kohler pop up drain or Kohler cable drain;
- When using the click drain, remove the decorative cap before opening/closing the drain; as shown in the figure:


IMPORTANT CONSUMER INFORMATION (CARE AND CLEANING)

To keep your lavatory looking new, make sure you rinse it out thoroughly after each use. **DO NOT USE ABRASIVES** on this product, as they will scratch and ruin the surface. Stubborn stains, paint, or tar can be removed with turpentine or paint thinner.


Do not use the product in the water below 0°C.

CAUTION: Please do not use hard materials (like scouring pad) to clean product surface, especially the product logo.

SERVICE PARTS

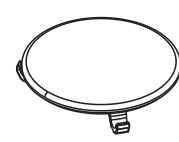


1492083
Decorative Cap
装饰盖

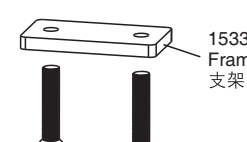

1533210
Frame
支架

1533209
Bolt
螺栓

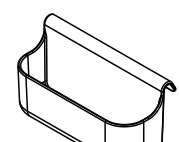

28919T-NA
Spacity Short Container
短收纳盒

拆除旧脸盆

- 关掉水龙头的供水源。
- 打开龙头阀门，然后除开供水管。

- 再旋开排水装置，并拿开弯管。

- 移走旧脸盆。

安装

- 将切割图沿切割线切出。
- 将切割图放在墨洗台上，确保脸盆、龙头和防溅挡板之间有足够的距离。确保墨洗台下的储物柜也有足够空间。

- 用铅笔沿切割线在墨洗台面划线。

- 再次检查脸盆、龙头和防溅挡板之间的距离，以及储物柜的空间，如有必要，可调节切割模板的位置。

- 用一个13mm的钻头，在切割口内侧钻一个导孔。
- 沿着自切割图勾画出来的铅笔线内侧切开台面。
- 对于大理石台面，请遵循制造商的台面切割指示。

- 将台面放入开口中，并做相应调整。

- 用铅笔沿脸盆外缘在墨洗台上划线。

- 将脸盆拿开。

若龙头和落水尚未安装，请于此时安装，请确保遵循包装随附的安装指示。

- 沿铅笔划线的内侧涂抹硅胶。
- 用油灰刀将硅胶抹匀。

注意：

- 只能使用柔软的防水密封胶。
- 切勿使用环氧树脂胶或水泥等硬化后体积变大的密封材料，科勒对所有因此而引起的陶瓷破裂恕不负责。

- 小心地将脸盆置于台面开口适当位置，向下按牢。从台面下部按顺序装入以下配件：垫片、螺栓2、螺栓1。

注意：先把支架一侧用螺栓2和产品固定，然后再把螺栓1旋入支架另一侧并把支架调到尽量水平；然后锁紧螺栓2（请勿过紧，以然损坏陶瓷）。

- 沿台面切割口涂抹硅胶，用干净的布擦去多余硅胶，至少等待30分钟，让硅胶固化，方可继续进行安装。

- 遵循龙头说明书连接供水管和排水装置。

- 安装落水器后，把装饰盖放在落水孔中。

- 配件按如下方式放在面盆的前边。

注意事项

- 此产品不能使用大帽盖下水器。
- 此产品推荐使用科勒提拉杆下水器或科勒线绳下水器。
- 当使用弹跳下水器时，需先取出装饰盖后才可以开关下水器；如图所示：

