KOHLER®



1600532-T2

记录您的型号：
Record your model number: _____

请遵守当地管路安装及建筑条例。

1A. 6 mm 钻头

3A. 在标记位置钻 6 mm 的孔。

4A. 确保底座卡扣面向下，安装胀塞，旋紧螺钉，使底座固定紧贴墙壁。

5A. 将托架扣在底座上，使卡扣嵌入豁口。

需要帮助？ 请联系我们的客户服务中心。

- 中国大陆：+(86) 800-820-2628, +(86) 400-820-2628
- 中国香港、中国澳门、中国台湾：+(852) 3125-7728
- **保养和清洁：** kohler.com.cn/support/care-and-cleaning/

本产品支持**科勒®水龙头五年有限担保**，详见包装所附的《合格证》。

Follow all local plumbing and building codes.

1A. 6 mm Drill Bit

3A. Drill 1/4" (6 mm) pilot holes at the marked locations.

4A. Verify that the bracket base is installed with the stopper side facing downward.

5A. Secure the bracket onto the bracket base and locked into place by the stopper.

Need help? Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- Hong Kong (China), Macau (China), Taiwan (China): +(852) 3125-7728
- **Care and cleaning:** kohler.com.cn/support/care-and-cleaning/

This product is covered under the **Five-Year Limited Warranty for KOHLER® Faucets**, found in the packed Compliance Certification.

1

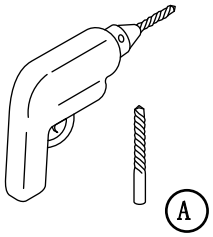

2

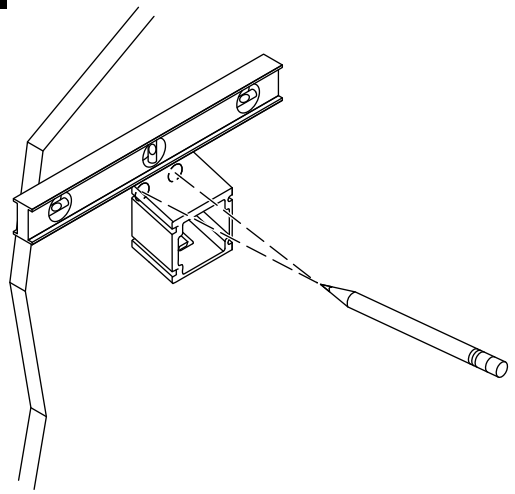

3

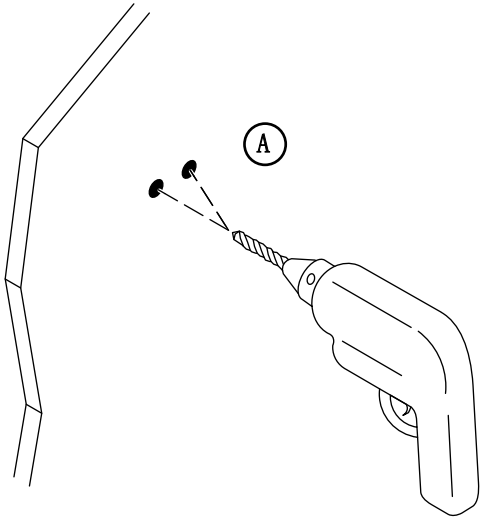

4

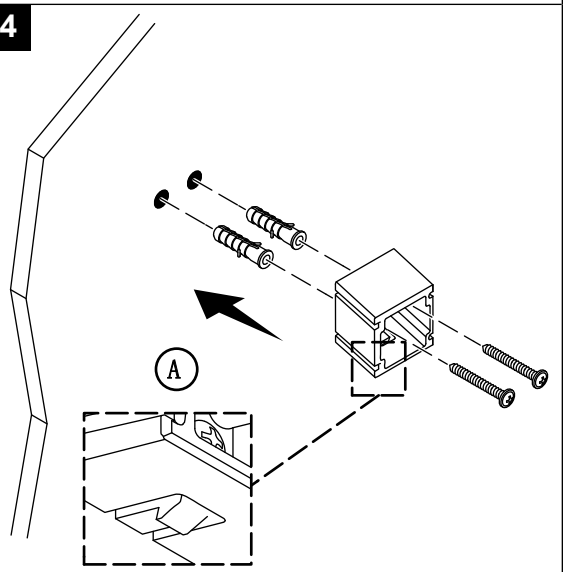

5

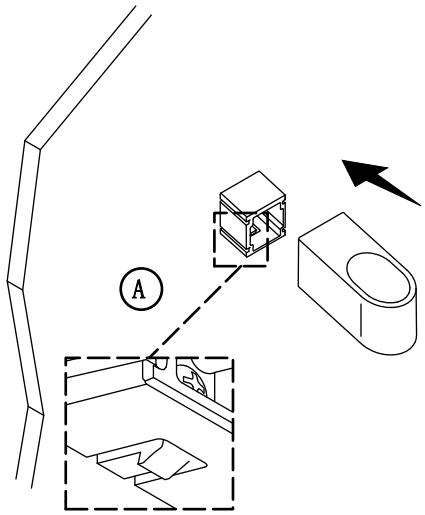

©2024 Kohler Co.