

BEFORE YOU BEGIN

- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 2 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.
- The product complies with QB/T 2584-2023.

⚠ CAUTION: Risk of injury or product damage.
Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

ATTENTION: Please install this door on Kohler receptors or curbs(Not included). If the curb is not Kohler-branded, please note its top width should be more than 80mm.

IMPORTANT: The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3mm/m. KOHLER Company won't take responsibility of the installation quality.

Do not use the enclosure for at least 24 hours.
安装后 24 小时内请勿使用淋浴房。



安装之前

- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容, **请把这些资料交给用户阅读, 保管。**
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理, 并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前, 请拿出、排列并确认所有的零部件。请参考第 2 页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房, 参照本说明书进行安装。
- 本产品符合 QB/T 2584-2023。

⚠ 警告: 可能有人伤害或者产品损坏的危险。
钢化玻璃不能进行切割, 钻孔或硬物敲击。搬移或安装过程中, 小心确保玻璃边、角部位不受撞击, 以防爆裂伤人。


建议: 将本产品安装在科勒淋浴盆或挡水条上(需另行购买)。如自备挡水条, 建议顶面宽度尺寸大于 80mm。

重要事项: 淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负 3mm/m 以内。如果超出此范围, 科勒公司将不保证淋浴房的完美使用。

ROUGHING-IN


尺寸图

Unit: mm
单位: 毫米

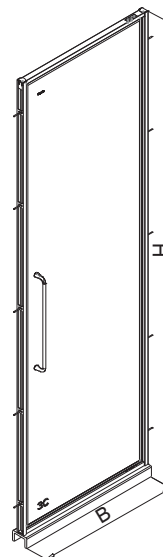


SKU	B	H
K-36453T	700-1000	1850-2200
K-36454T		

ZHONGSHAN KOHLER SHOWER CO., LTD. NO13-1, XINGYE ROAD, ZHONGSHAN TORCH DEVELOPMENT ZONE, ZHONGSHAN, GUANGDONG, CHINA POST CODE: 528437
中山科勒卫浴有限公司 广东省中山市中山火炬开发区兴业路 13-1 号 邮编:528437

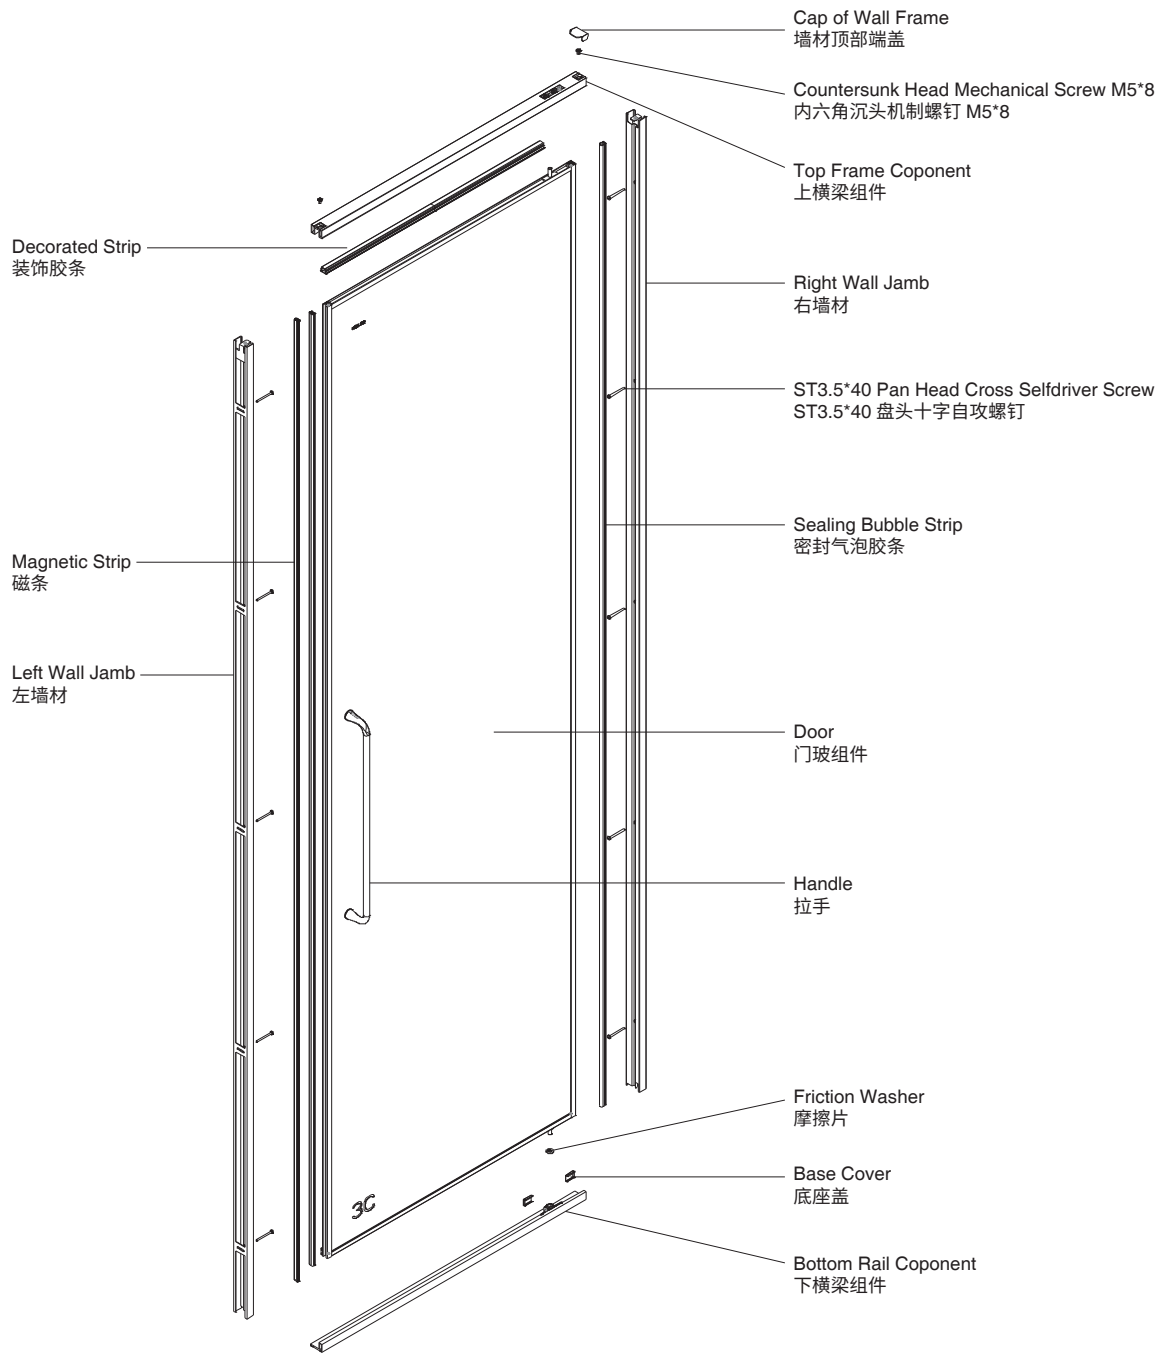


	X2	Cap of Wall Frame 墙材顶部端盖		X2	Magnetic Strip 磁条		X10	ST3.5*40 Pan Head Cross Selfdriver Screw ST3.5*40 盘头十字自攻螺钉
	X1	Top Rail 上横梁		X1	Sealing Bubble Strip 密封气泡胶条		X10	Hollow Wall Anchor, Nylon 膨胀套
	X1	Right Wall Jamb 右墙材		X1	Handle 拉手		X1	Screw Key 4.0mm 4.0 内六角扳手
	X1	Left Wall Jamb 左墙材		X1	Washer 摩擦片		X1	Screw Key 3.0mm 3.0 内六角扳手
	X1	Bottom Frame 下横梁		X2	Base Cover 底座装饰盖			
	X1	Decorated Strip 装饰条		X2	Countersunk Head Mechanical Screw M5*8 内六角沉头机制螺钉 M5*8			

Tools Required/所需工具

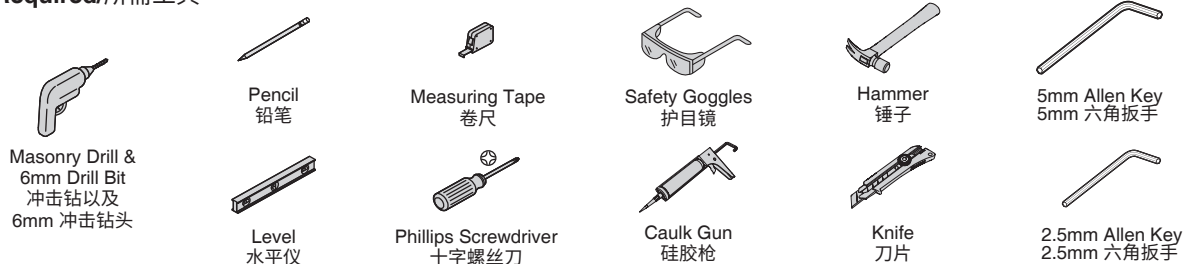

Install the seal so that it is horizontal.
放置挡水条，需确保挡水条放置水平。

Installation tip: This shower door requires two people to install.
安装提示：此淋浴房需两人共同安装。

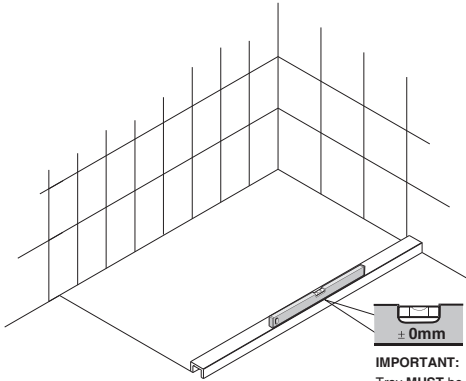


IMPORTANT:
Tray **MUST** be level along front edge.
重要：
底盘必须水平。

STEP 1

1. Place the bottom rail on the seal and level it.
2. Snap the two sides of the wall jambs from top to bottom into the lower guide successively. The distance from the outside of the wall jambs from the edge of the seal is 20mm. Trace the positioning holes and then punch holes on the wall. Then install the expansion screws.

1. 将下横梁放在挡水条上，打好水平。
2. 先后将两侧墙材从上往下卡入下导轨，墙材外侧离挡水条沿距离为 20mm，描好定位孔后再往墙上打孔，并装入膨胀螺钉。

Pay special attention to the internal and external orientation of the wall jambs (refer to enlarged image).
特别注意墙材的内外方向（见放大图）。

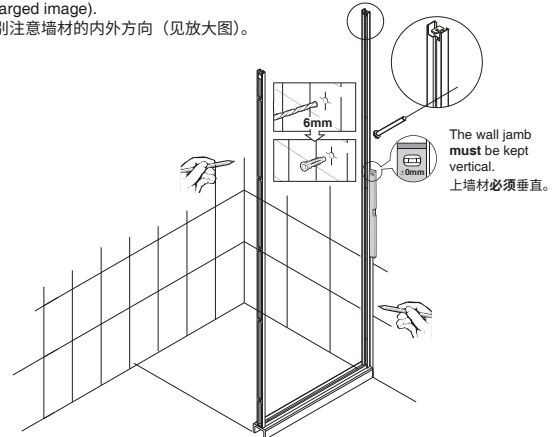


The wall jamb **must** be kept vertical.
上墙材必须垂直。

STEP 2

1. Secure both sides of the wall jambs with screws.
2. Ensure that the wall jamb is perpendicular to the ground.

1. 用螺钉将两侧墙材固定。
2. 确保墙材与地面垂直。

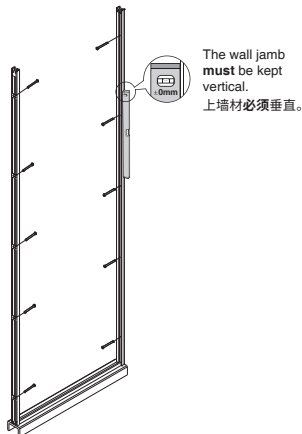

The wall jamb **must** be kept vertical.
上墙材必须垂直。

STEP 3

1. Snap the top frame into the left and right wall jambs.
2. Installation of door glass: Lift up the door glass. Insert the lower pivot of the door glass into the lower pivot base. Snap the upper pivot of the door glass into the pivot base of the top frame.

3. Secure the top frame edge to the left and right wall jambs with screws.

1. 将上横梁卡入左右两侧墙材。
2. 安装门玻：抬起门玻，将门玻下转轴插入下转轴座，将门玻上转轴卡入上横梁边框转轴座内。
3. 用螺钉将上横梁边框与左右墙材固定。

Snap the friction washer into the bottom pivot of the door glass.
将摩擦片卡入门玻底部转轴。




STEP 4

1. Remove the tape protective film on the slots of left and right wall jambs and boarder of the door glass.

2. Install two magnetic strips and sealing bubble strips.

1. 撕掉左右墙材槽内和门玻边框内的胶带表皮。


2. 安装两根磁条和密封气泡胶条。

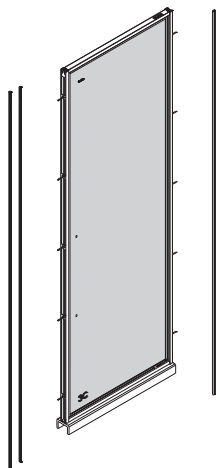

STEP 5


1. Install the handle.
2. Install the left and right caps of wall frame.
3. Install the top frame decorated strip.

1. 安装拉手。
2. 安装左右墙材顶部端盖，
3. 安装上横梁装饰胶条。

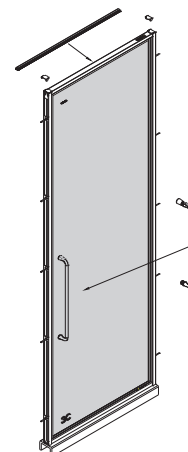


STEP 6

1. Adjust the screws on the pivot base. Adjust the inner and outer door opening.
 2. Adjust the door glass position.
 3. Install the pivot base cover.
1. 调节转轴座上的螺钉，调节内外开门。
 2. 调节门玻位置。
 3. 安装转轴座装饰盖。

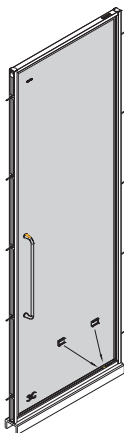

STEP
7

1. Glue both sides of the wall jambs and the bottom rail in place.
 2. For shower door with seal, glue the bottom edge of the seal in place.
1. 墙材两侧和下横梁需打胶固定。
 2. 带挡水条淋浴房，在挡水条底部边沿打胶固定。

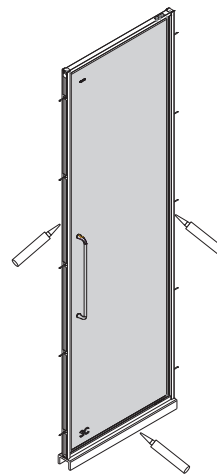

STEP
8