

BEFORE YOU BEGIN

- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information—**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 2 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.
- The product complies with QB/T 2584-2023.



CAUTION: Risk of injury or product damage.

Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

IMPORTANT:

- The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3mm/m. KOHLER Company won't take responsibility of the installation quality.
- Do not insert hands into the gap between the door panel and fixed panel near the hinge, to avoid risk of pinching.

Do not use the enclosure for at least 24 hours.
安装后 24 小时内请勿使用淋浴房。



安装之前

- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容，**请把这些资料交给用户阅读，保管。**
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理，并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前，请拿出、排列并确认所有的零部件。请参考第 2 页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房，参照本说明书进行安装。
- 本产品符合 QB/T 2584-2023。



警告：可能有人伤害或者产品损坏的危险。

钢化玻璃不能进行切割，钻孔或硬物敲击。搬移或安装过程中，小心确保玻璃边、角部位不受撞击，以防爆裂伤人。


重要事项：

- 淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负 3mm/m 以内。如果超出此范围，科勒公司将不保证淋浴房的完美使用。
- 手不要伸到转轴处门玻和固玻的缝隙内，以免夹伤手。

ROUGHING-IN


尺寸图

Unit: mm
单位：毫米

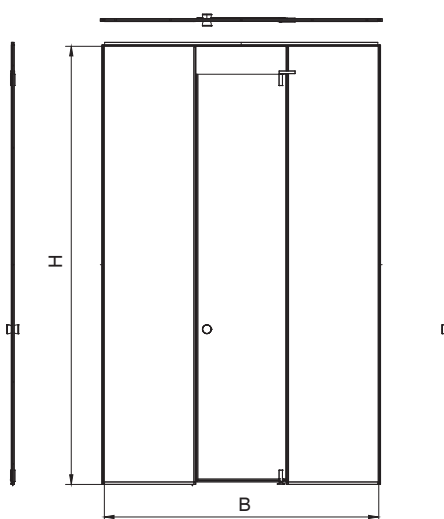

SKU	B	H
K-EX38645T	1200-2100	2200-3200

ZHONGSHAN KOHLER SHOWER CO., LTD. NO13-1, XINGYE ROAD, ZHONGSHAN TORCH DEVELOPMENT ZONE, ZHONGSHAN, GUANGDONG, CHINA POST CODE: 528437
中山科勒卫浴有限公司 广东省中山市中山火炬开发区兴业路 13-1 号 邮编：528437

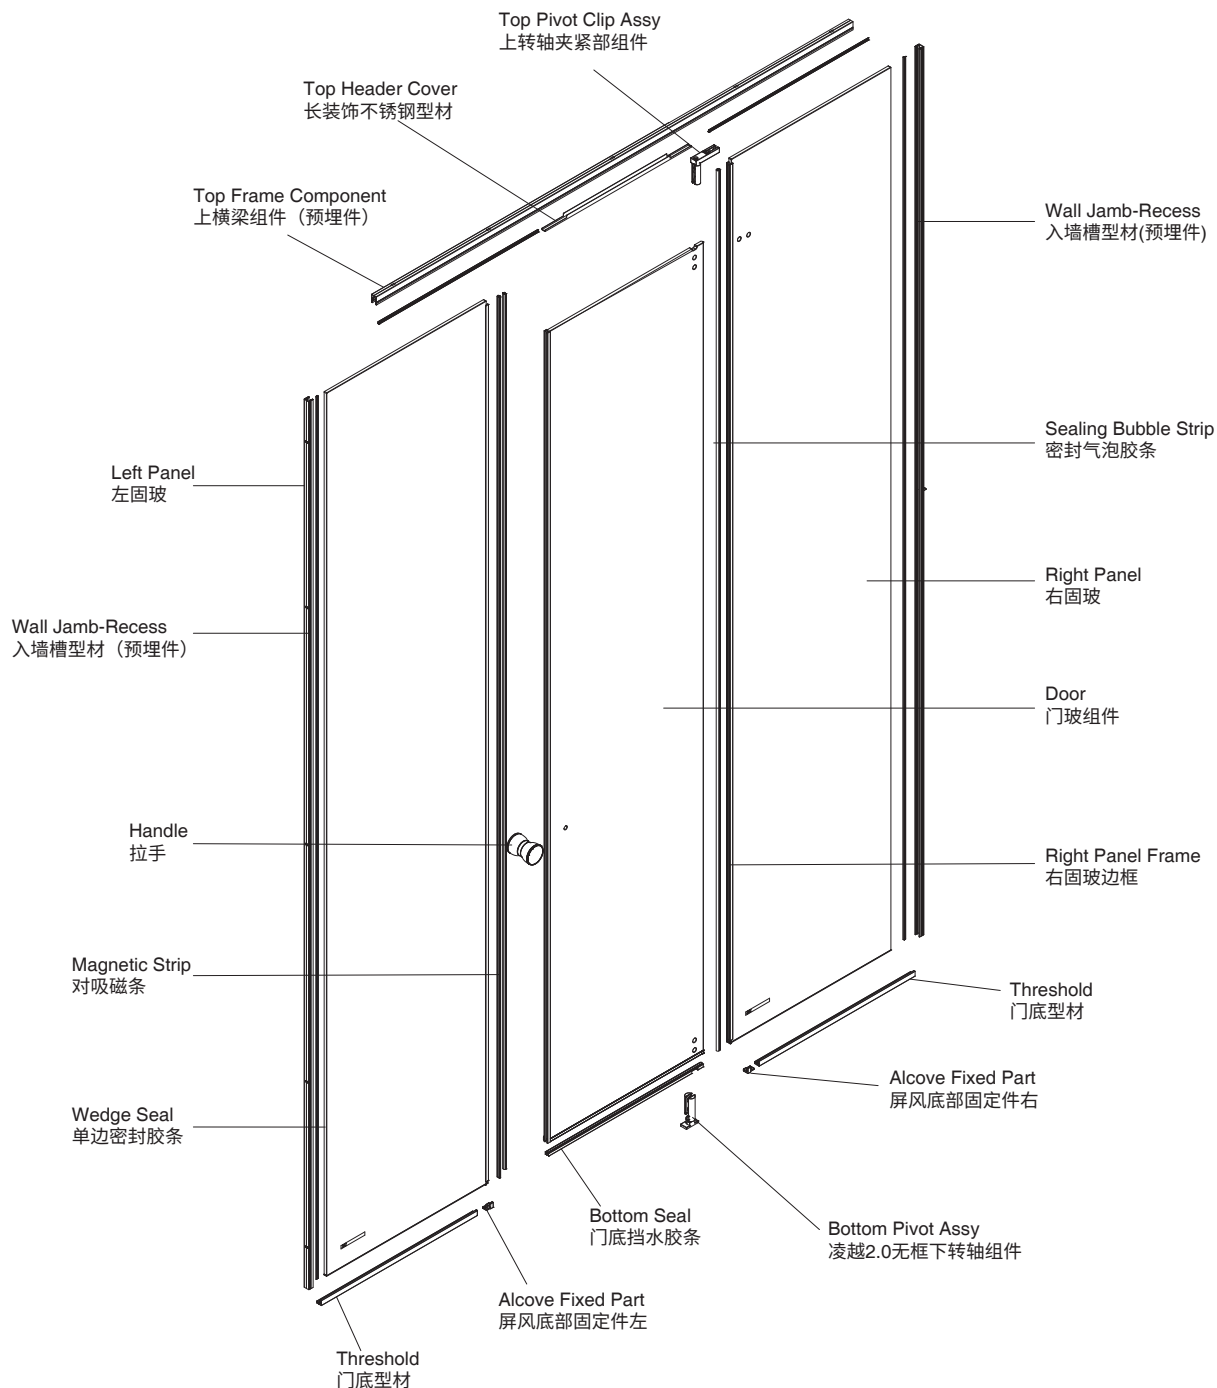

	X1	Top Pivot Clamp 上转轴夹		X4	Wedge Seal 单边密封胶条		X10	Hollow Wall Anchor, Nylon 膨胀套
	X1	Top Header Cover 长装饰不锈钢型材		X1	Handle 拉手		X1	Screw Key 4.0mm 4.0内六角扳手
	X1	Top Pivot Clip Assy 凌越2.0无框上转轴夹紧部组件		X1	Alcove Fixed Part 屏风底部固定件左		X1	Screw Key 3.0mm 3.0内六角扳手
	X1	Bottom Pivot Assy 凌越2.0无框下转轴组件		X1	Alcove Fixed Part 屏风底部固定件右		X1	Screw Key 2.5mm 2.5内六角扳手
	X1	Threshold-R 门底型材-R		X1	Bottom Seal 门底挡水条		X1	SS, Shim 1mm 下转轴座1mm不锈钢垫片
	X1	Threshold-L 门底型材-L		X15	Tapping Screw ST3.5X40 自攻螺丝ST3.5X40		X1	SS, Shim 2mm 下转轴座2mm不锈钢垫片
	X2	Magnetic Strip 磁条		X3	Tapping Screw 十字不锈钢沉头自攻螺丝 ST3.5*25			
	X1	Sealing Bubble Strip 密封气泡胶条		X2	Tapping Screw 十字不锈钢沉头自攻螺丝 ST4*16			

Tools Required/所需工具



安装

- ## STEP 1

STEP 3

- ## STEP 5

STEP
2

- ## STEP 4

- ## STEP 5


- ## STEP 6

Door Panel Accessory Assembly

1. Adhere the magnetic strip inside the stainless steel frame of the door panel. Note that the bottom of the strip should extend approximately 8mm beyond the end face of the door edge profile. The top of the magnetic strip should be flush with the top of the stainless steel profile. (see diagram)
2. Insert the bottom seal into the stainless steel water-stop profile at the bottom of the pivot door. Note that the notched end of the seal should be on the same side as the circular hole in the water-stop profile. (see diagram)
3. Install the main bodies of the upper and lower pivots onto the pivot door panel. (see diagram)

门板配件组装

1. 在门板不锈钢边框内粘上磁条，注意磁条底部需超出门边型材端面约 8mm。磁条顶部跟不锈钢型材顶部持平。(配图)
2. 将门底挡水胶条插入活动门底部不锈钢挡水型材内，注意胶条开缺口端与挡水型材开圆孔端在同一侧。(配图)
3. 安装上下转轴主体至活动玻璃。(配图)

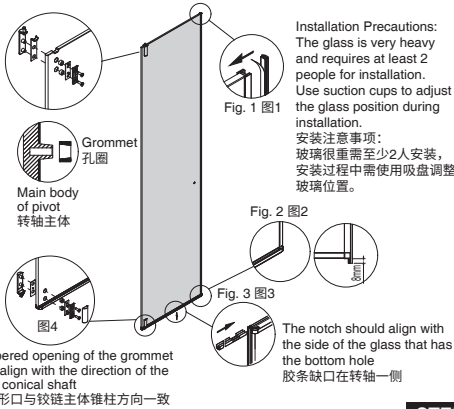


STEP
7

1. First, insert the conical plastic grommet from the upper pivot clamping assembly into the hole of the fixed panel (pay attention to the orientation of the grommet).
2. Lift the pivot door panel assembly and insert it into the bottom pivot base.
3. Disassemble the upper pivot clamping component. While holding the pivot door panel steady, first fit the main body of the clamping part over the upper pivot shaft on top of the pivot door panel. Then, adjust the angle and insert the threaded post of the clamping body into the plastic grommet in the fixed panel's hole.
4. Secure the upper pivot clamping component with a screw.
5. Along the top and bottom edges of the upper pivot clamping component, use a utility knife to cut away the bubble portion of the sealing bubble strip.

1. 首先将上转轴夹紧组件内的锥形塑胶圈塞入固定孔内。(注意塑胶圈方向)
2. 抬起活动玻璃组件然后插入底部转轴座内。
3. 拆分上转轴夹紧组件


4. 用螺丝锁紧上转轴夹紧部。
5. 沿着上转轴夹紧部的上下端面，用刀片切断气泡胶条的气泡部分。

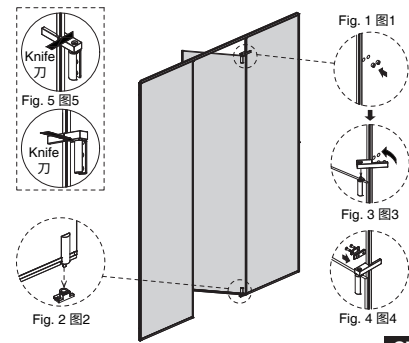

STEP
8

1. Install the wedge seal on the top and wall-facing side of the fixed panel. (Fig. 1)
2. Install the top stainless steel header cover. (Fig. 2)
3. Snap the decorative cover onto the upper pivot base. Note that the notched end of the cover should face upwards. (Fig. 3)
4. Install the decorative covers of the bottom pivot base and the retainer. (Fig. 4)
5. Install the handle. (This page shows the installation method for the standard handle. If using a remote control handle, unscrew the outer cover of the handle, insert the remote control, and then screw the cover back on tightly.) (Fig. 5) Install the handle. (This page shows the installation method for the standard handle. If using a remote control handle, unscrew the outer cover of the handle, insert the remote control, and then screw the cover back on tightly.) (Fig. 5)


1. 安装固定玻璃顶部和靠墙侧单边胶条。(图1)
2. 安装顶部不锈钢装饰型材。(图2)
3. 将上转轴座装饰盖扣入上转轴座，注意扣盖开缺的一头朝上；(图3)
4. 安装下转轴座装饰盖及固定座装饰盖；(图4)
5. 安装拉手。(本页展示的为标准配置的拉手安装方式，若配遥控拉手，旋开所配拉手外盖，装入遥控手柄后再旋紧。(图5)

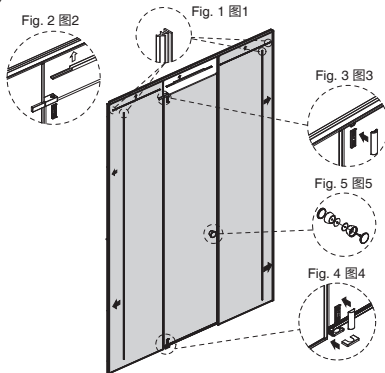

STEP
9

1. Apply sealant to the bottom and wall-facing side of the bottom rail, as well as where the fixed panel meets the bottom rail, to seal and secure them.
2. Depending on the wall jamb and the fit of the wedge seal, apply sealant to any gaps to seal and secure them.

1. 下横梁底部和靠墙侧，固定和下横梁位置均需打胶密封固定。
2. 视墙材和单边胶条安装情况，在有缝隙的地方也打胶密封固定。

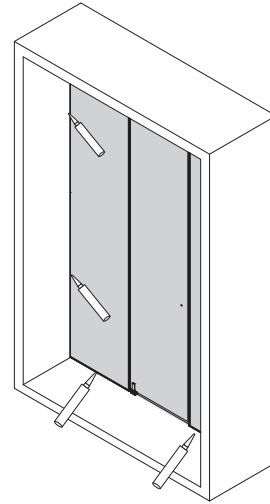

STEP
10