

BEFORE YOU BEGIN

- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information—**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 2 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.
- The product complies with QB/T 2584-2023.



CAUTION: Risk of injury or product damage.

Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

IMPORTANT:

- The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3mm/m. KOHLER Company won't take responsibility of the installation quality.
- Do not insert hands into the gap between the door panel and fixed panel near the hinge, to avoid risk of pinching.

Do not use the enclosure for at least 24 hours.
安装后 24 小时内请勿使用淋浴房。



安装之前

- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容, **请把这些资料交给用户阅读, 保管。**
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理, 并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前, 请拿出、排列并确认所有的零部件。请参考第 2 页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房, 参照本说明书进行安装。
- 本产品符合 QB/T 2584-2023。



警告: 可能有人伤害或者产品损坏的危险。

钢化玻璃不能进行切割, 钻孔或硬物敲击。搬移或安装过程中, 小心确保玻璃边、角部位不受撞击, 以防爆裂伤人。


重要事项:

- 淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负 3mm/m 以内。如果超出此范围, 科勒公司将不保证淋浴房的完美使用。
- 手不要伸到转轴处门玻和固玻的缝隙内, 以免夹伤手。

ROUGHING-IN


尺寸图

Unit: mm
单位: 毫米

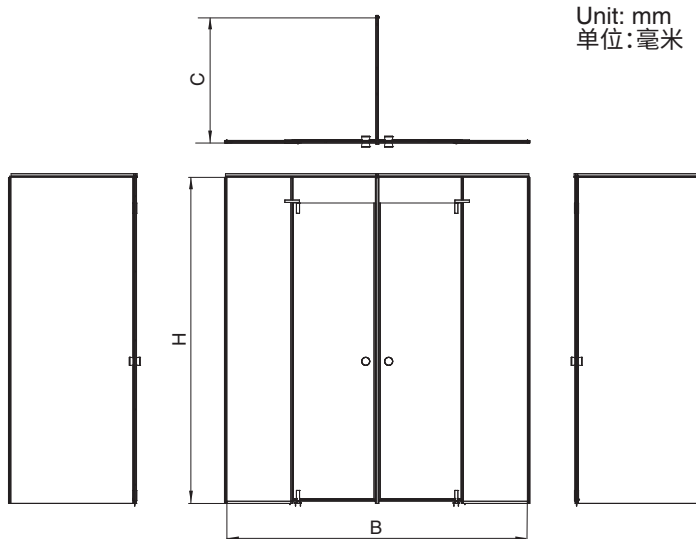

SKU	B	H	C
K-EX38646T	2000-3000	2200-3200	350-1000

ZHONGSHAN KOHLER SHOWER CO., LTD. NO13-1, XINGYE ROAD, ZHONGSHAN TORCH DEVELOPMENT ZONE, ZHONGSHAN, GUANGDONG, CHINA POST CODE: 528437
中山科勒卫浴有限公司 广东省中山市中山火炬开发区兴业路 13-1 号 邮编: 528437

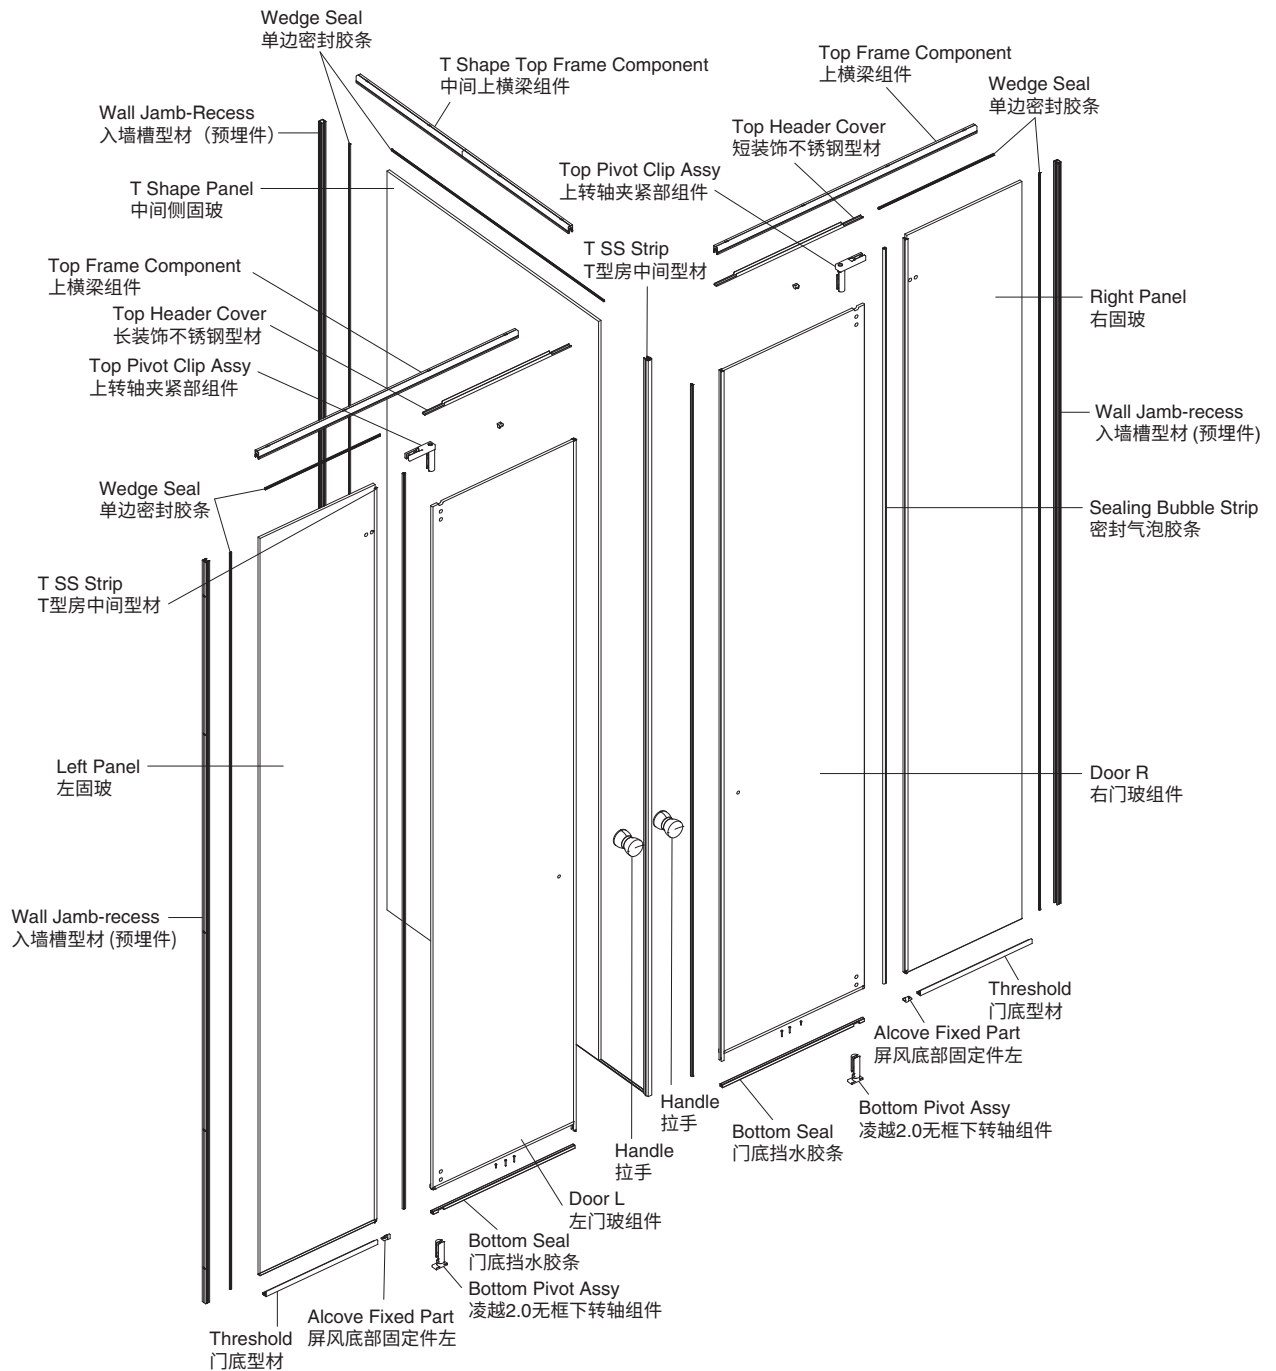


	X2	Top Header Cover 短装饰不锈钢型材
	X2	Top Header Cover 长装饰不锈钢型材
	X2	Top Pivot Clip Assy 凌越2.0无框上转轴夹紧部组件
	X2	Bottom Pivot Assy 凌越2.0无框下转轴组件
	X1	Threshold-L 门底型材-L
	X1	Threshold-R 门底型材-R
	X1	T SS Strip T型房中间型材
	X4	Magnetic Strip 磁条
	X2	Sealing Bubble Strip 密封气泡胶条

	X6	Wedge Seal 单边密封胶条
	X2	Handle 拉手
	X1	Alcove Fixed Part 屏风底部固定件左
	X1	Alcove Fixed Part 屏风底部固定件右
	X2	Bottom Seal 门底挡水条
	X27	Tapping Screw ST3.5x40 自攻螺丝ST3.5x40
	X6	Tapping Screw 十字不锈钢圆头自攻ST3.5*25
	X2	Tapping Screw 十字不锈钢沉头自攻丝ST4*16
	X27	Hollow Wall Anchor, Nylon膨胀套

	X1	Screw Key 4.0mm 4.0内六角扳手
	X1	Screw Key 3.0mm 3.0内六角扳手
	X1	Screw Key 2.5mm 2.5内六角扳手
	X1	Drill 4.2mm 钻头
	X4	Screw 十字平头不锈钢自攻螺丝ST4.8*12.7
	X2	SS, Shim 1mm 下转轴座1mm不锈钢垫片
	X2	SS, Shim 2mm 下转轴座2mm不锈钢垫片


Tools Required/所需工具

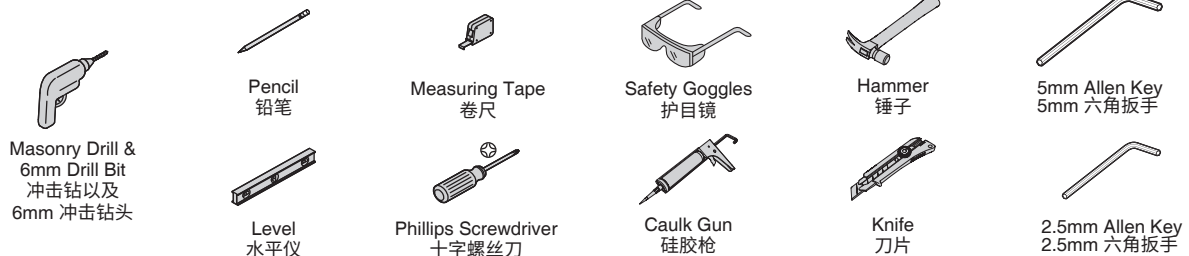

- Shower door installation area is the lower step surface, and ensure it is level. The height difference at both ends of the step must be 18mm. (Figure 1)
The step surface, the outer slot surfaces on both side walls, and the outer slot surface of the ceiling must be in the same plane without any misalignment. Or else it will affect subsequent glass installation.


- If the profiles are pre-buried, remove the protective strips from the wall jamb slots and ensure the slots are free of debris. (Figure 2)
- Before installation, remove the protective film from the stainless steel outer sides of the ceiling profile and wall jambs. (Figure 3)

- 淋浴房安装区域为下台阶面，需确保水平；两端台阶的高度差均需为 18mm。(图 1)
台阶面和两侧墙面外槽及顶部天花外槽面需在同一平面，不能出现错位，否则后续影响玻璃安装。
- 若型材为预埋，拔出墙材槽内的保护胶条，检查确保槽内无杂质。(图 2)
- 安装前撕掉天花型材和墙材不锈钢外侧的保护膜。(图 3)

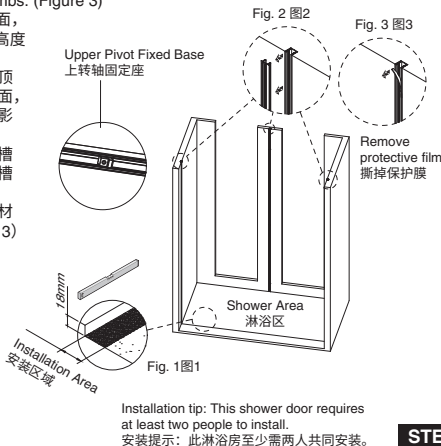

STEP 1


- Carefully tilt the large center fixed panel at an angle and lift it into the low area. Note: When lifting the glass, two people must operate together using suction cups. Avoid hitting the glass corners against the ground step edges.
- Orient the easy-clean surface of the glass towards the shower area, then tilt the glass and insert it into the top slot of the top rail. Slowly raise the glass until it is perpendicular to the ground.
- Carefully lift the glass and push it into the slot of the wall jamb.

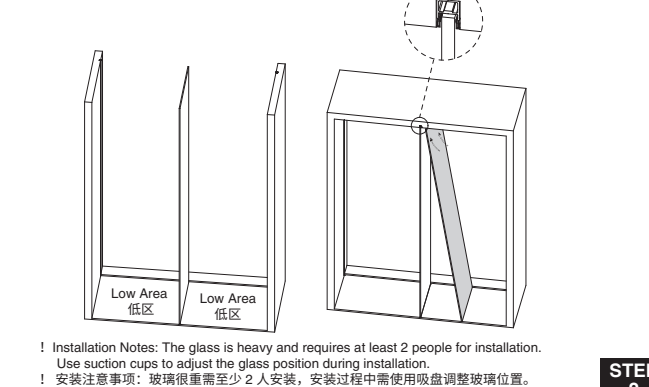

STEP 2


- Install the stainless steel profile for the center side fixed panel. (Before removing the film, clean the inner surface of the profile and the glass surface using the provided alcohol wipes.)
- The bottom of the profile should be flush against the ground, and the outer side of the profile should be flush against the step surface.

- 安装中间侧固玻不锈钢型材。(撕膜之前，先用所配的酒精湿布清洁干净型材内侧面和玻璃表面。)
- 型材底部紧贴地面，型材外侧面紧贴台阶面。

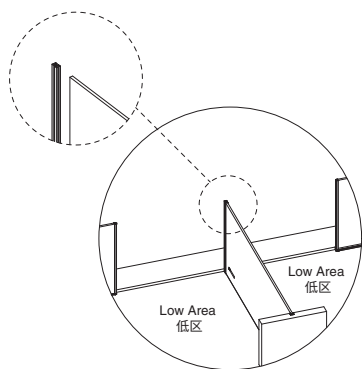

STEP 3


- Place the two bottom rails flush against the step surface with one end against the wall. Insert the retainers into the end of the profiles away from the wall.
- Ensure the gap between the two bottom rails and the wall is equal. Simultaneously ensure the distance between the two retainers and the center fixed panel profile equals the moving glass width + 21mm. (Note: One edge of the moving glass is polished with a rounded edge, its width is a whole number. The standard moving door width is 650mm.) $W1/W2 = \text{Door Width} + 21\text{mm}$
- Mark and drill holes. Fix the bottom profiles on both sides of the fixed panel to the ground using ST4X16 countersunk self-tapping screws.

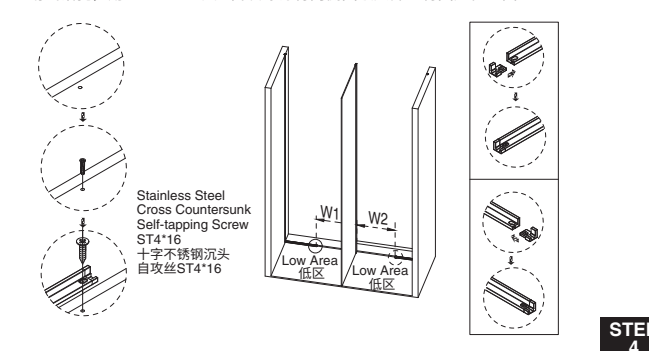

STEP 4

- First, slide the pre-installed pivot retainer inside the top profile to the middle position to reserve sufficient space for inserting the fixed panel into the upper track.
- Move the fixed panel inside the enclosure (shower area).
Note: The glass is heavy, and should provide safety protection at the bottom.
- Tilt the fixed panel and insert it upwards into the upper guide rail. Finally, lift the fixed panel and place it onto the lower stainless steel beam.
- Push the fixed panel to snap into the wall jamb. The bottom of the fixed panel profile should snap into the slot of the lower track fixing block and be flush with it. (Illustration provided)


- 先将顶部型材内预装的转轴固定座滑至中间位置，给固定玻璃插入上轨道预留足够的空间。
- 固定玻璃要先搬到房体里面（淋浴区），注意玻璃较重需在底部做好安全保护。
- 倾斜固定玻璃然后往上插到上导轨里，最后抬起固定玻璃放至下不锈钢横梁上。
- 推动固定玻璃卡入墙面型材内，固定玻璃型材底部卡入下轨道固定块槽内并与之平齐。(配图)

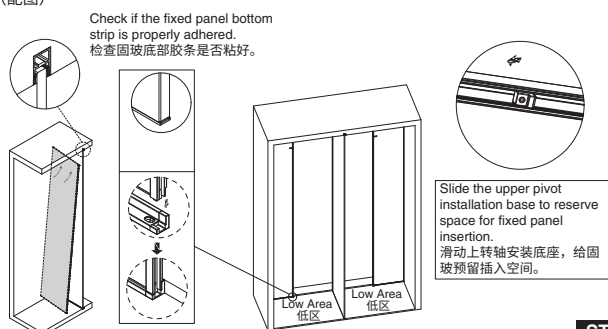

STEP 5

- Adjust the spacing between the two stainless steel frames at the door opening: Use a tape measure to check the distance between the two fixed panel profiles, ensuring the distance at both top and bottom equals the moving door width + 20mm. (Default moving door width is 650mm, meaning the default profile spacing is 670mm.)
- Tighten the screws inside the top fixing block of the fixed panel. (Note: Be sure to check and confirm the safety shim on the fixed panel top fixing block is not missing.)


- 调节两门洞处两不锈钢边框之间的间距：用卷尺测量两固玻型材之间的间距，确保上下位置的间距均等于活动门宽 + 20mm（默认活动门宽为 650mm，即默认型材间距为 670mm。）
- 拧紧固玻顶部固定块内的螺丝。（注：一定要检查确认固玻顶部固定块上的安全垫片无脱落。）

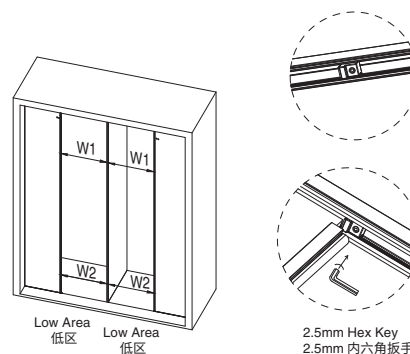

STEP 6

1. Install the lower pivot base according to the door opening direction. (Note: The back of the pivot base should be flush against the step surface. The distance to the fixed panel bottom profile fixing piece is 22mm.)
2. Install the bubble strip and the magnetic strip for the center fixed panel profile. (Before removing the film, clean the inner surface of the profile and the surface of the magnetic strip using the provided alcohol wipes.)

1. 按照开门方向安装下转轴底座。(注：转轴座背面贴紧台阶面，与固定底部型材固定件的距离为22mm。)
2. 安装气泡胶条和中间固玻型材磁条。(未撕膜之前，用所配的酒精湿布清洁干净型材内侧面和胶条表面。)

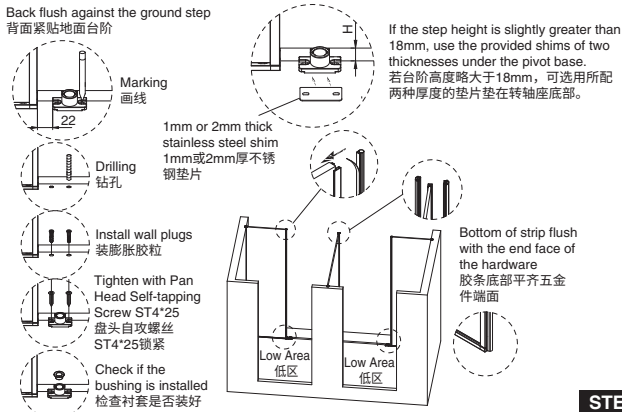


STEP
7

1. First, insert the conical plastic ring from the upper pivot clamp assembly into the hole of the fixed panel. (Pay attention to the direction of the plastic ring.)
2. Lift the moving glass assembly and insert it into the bottom pivot base.
3. Disassemble the upper pivot clamp component. Support the moving glass, first place the main body of the clamp over the upper pivot shaft at the top of the moving glass, then adjust the angle to insert the threaded post of the clamp main body into the plastic ring within the fixed panel hole.
4. Tighten the screw for the upper pivot clamp.
5. Use a blade to cut off the bubble part of the bubble strip along the top and bottom end faces of the upper pivot clamp.


1. 首先将上转轴夹组件内的锥形塑胶圈塞入固玻孔内。(注意塑胶圈方向)
2. 抬起活动玻璃组件然后插入底部转轴座内。

3. 拆分上转轴夹组件，扶住活动玻璃，将夹紧部主体先套住活动玻璃顶部上转轴轴心，然后调整角度将夹紧部主体螺纹柱插入固玻孔内胶圈内。
4. 用螺丝锁紧上转轴夹紧部。
5. 沿着上转轴夹紧部的上下端面，用刀片切断气泡胶条的气泡部分。

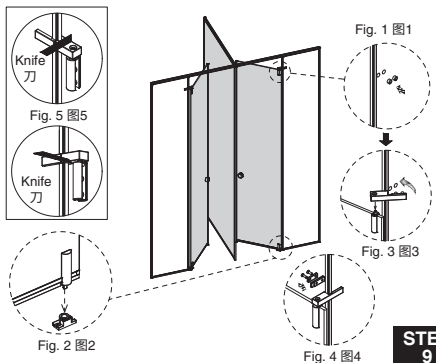

STEP
9


1. Snap the upper pivot base decorative cover onto the upper pivot base. Note: The end with the notch should face upwards.
2. Install the lower pivot base decorative cover and the retainer decorative cover.
3. Install the handle. (This page shows the installation method for the standard handle. If equipped with a remote handle, unscrew the provided handle decorative cover, install the remote handle, then retighten.)
1. 将上转轴座装饰盖扣入上转轴座，注意扣盖开缺的一头朝上。
2. 安装下转轴座装饰盖及固定座装饰盖。
3. 安装拉手。(本页展示的为标准配置的拉手安装方式，若配遥控拉手，旋开所配拉手外盖，装入遥控手柄后再旋紧。)

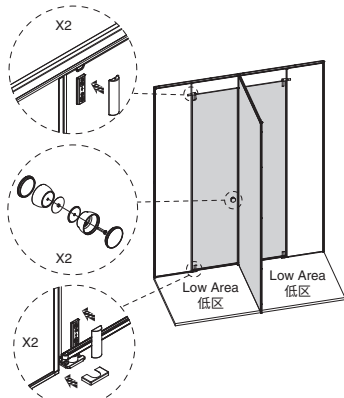

STEP
11


1. Before removing the film, clean the inner surface of the moving door profile and the surface of the magnetic strip using the provided alcohol wipes. Pre-assemble the magnetic strips to ensure they attract each other.
2. Adhere the magnetic strip inside the door panel stainless steel frame according to the attracting direction. The top of the magnetic strip should be flush with the top of the stainless steel profile. The bottom of the magnetic strip should extend about 8mm beyond the end face of the door edge profile.
3. Insert the door bottom sweep seal into the bottom stainless steel sweep profile of the moving door. Note: The end with the notch on the seal should be on the same side as the pivot end.
4. Install the lower pivot body onto the moving glass.
5. Install the other glass panel in the same manner.

1. 未撕膜之前，用所配的酒精湿布清洁干净活动门型材内侧面和磁条表面，拿磁条预装配下，确保两磁条可相吸。
2. 按磁条可吸附方向在门玻不锈钢边框内粘上磁条，磁条顶部跟不锈钢型材顶部平齐，磁条底部需超出门边型材端面约8mm。
3. 将门底挡水胶条插入活动门底部不锈钢挡水型材内，注意胶条开缺口端与转轴端在同一侧。
4. 安装下转轴主体至活动玻璃。
5. 另一片玻璃安装方式相同。

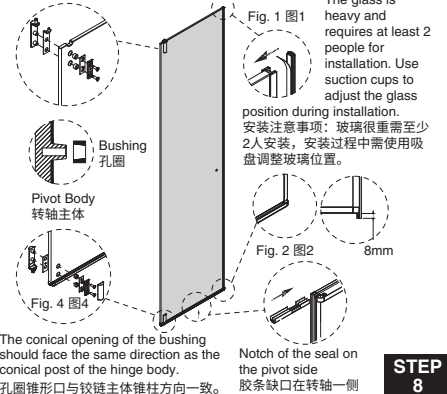


STEP
8

1. Install the unilateral strip on the top of the fixed panel and the wall side. (Figure 1) Note: The single-sided strip shall be applied on the outside surface of the glass! The thicker type is selected by default.
2. Install the top stainless steel decorative profile. (Figure 2)
1. 安装固玻顶部和靠墙侧单边胶条。(图1) 需注意单边胶条需安装在玻璃外侧！默认选择较厚的款。
2. 安装顶部不锈钢装饰型材。(图2)

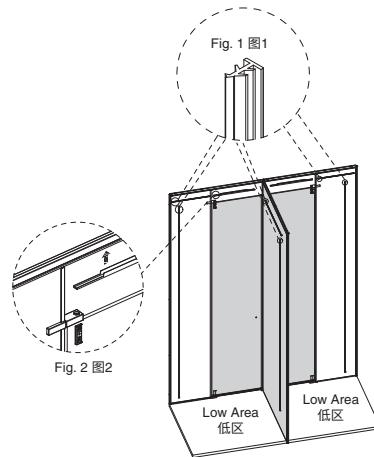

STEP
10

1. Apply sealant to seal and fix the bottom and wall side of the bottom rail, and the locations of the fixed panel and bottom rail.
2. Depending on the installation of the wall jambs and unilateral strip, also apply sealant to seal any gaps.
1. 下横梁底部和靠墙侧，固玻和下横梁位置均需打胶密封固定。
2. 视墙材和单边胶条安装情况，在有缝隙的地方也打胶密封固定。

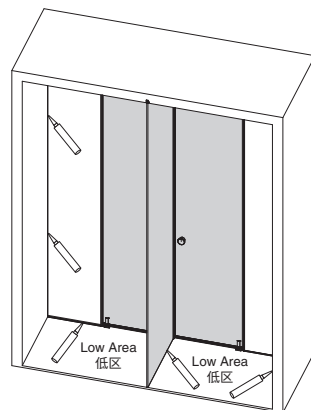

STEP
12