

BEFORE YOU BEGIN

- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information—**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 2 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.
- The product complies with QB/T 2584-2023.



CAUTION: Risk of injury or product damage.

Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

IMPORTANT:

- The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3mm/m. KOHLER Company won't take responsibility of the installation quality.
- Do not insert hands into the gap between the door panel and fixed panel near the hinge, to avoid risk of pinching.

Do not use the enclosure for at least 24 hours.
安装后 24 小时内请勿使用淋浴房。



安装之前

- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容，**请把这些资料交给用户阅读，保管。**
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理，并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前，请拿出、排列并确认所有的零部件。请参考第 2 页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房，参照本说明书进行安装。
- 本产品符合 QB/T 2584-2023。



警告：可能有人伤害或者产品损坏的危险。


钢化玻璃不能进行切割，钻孔或硬物敲击。搬移或安装过程中，小心确保玻璃边、角部位不受撞击，以防爆裂伤人。

重要事项：

- 淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负 3mm/m 以内。如果超出此范围，科勒公司将不保证淋浴房的完美使用。
- 手不要伸到转轴处门玻和固玻的缝隙内，以免夹伤手。

ROUGHING-IN


尺寸图

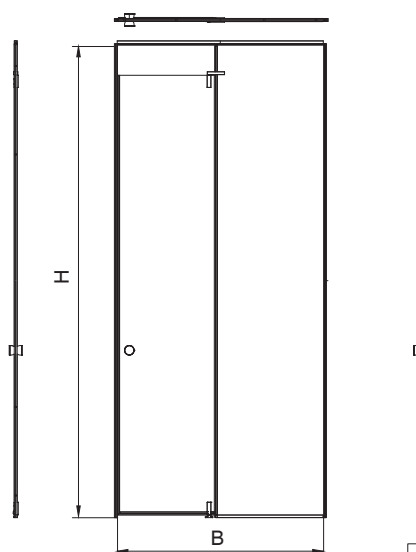

Unit: mm
单位：毫米


SKU	B	H
K-EX38644T	1000-1400	2200-3200

ZHONGSHAN KOHLER SHOWER CO., LTD. NO13-1, XINGYE ROAD, ZHONGSHAN TORCH DEVELOPMENT ZONE, ZHONGSHAN, GUANGDONG, CHINA POST CODE: 528437
中山科勒卫浴有限公司 广东省中山市中山火炬开发区兴业路 13-1 号 邮编：528437

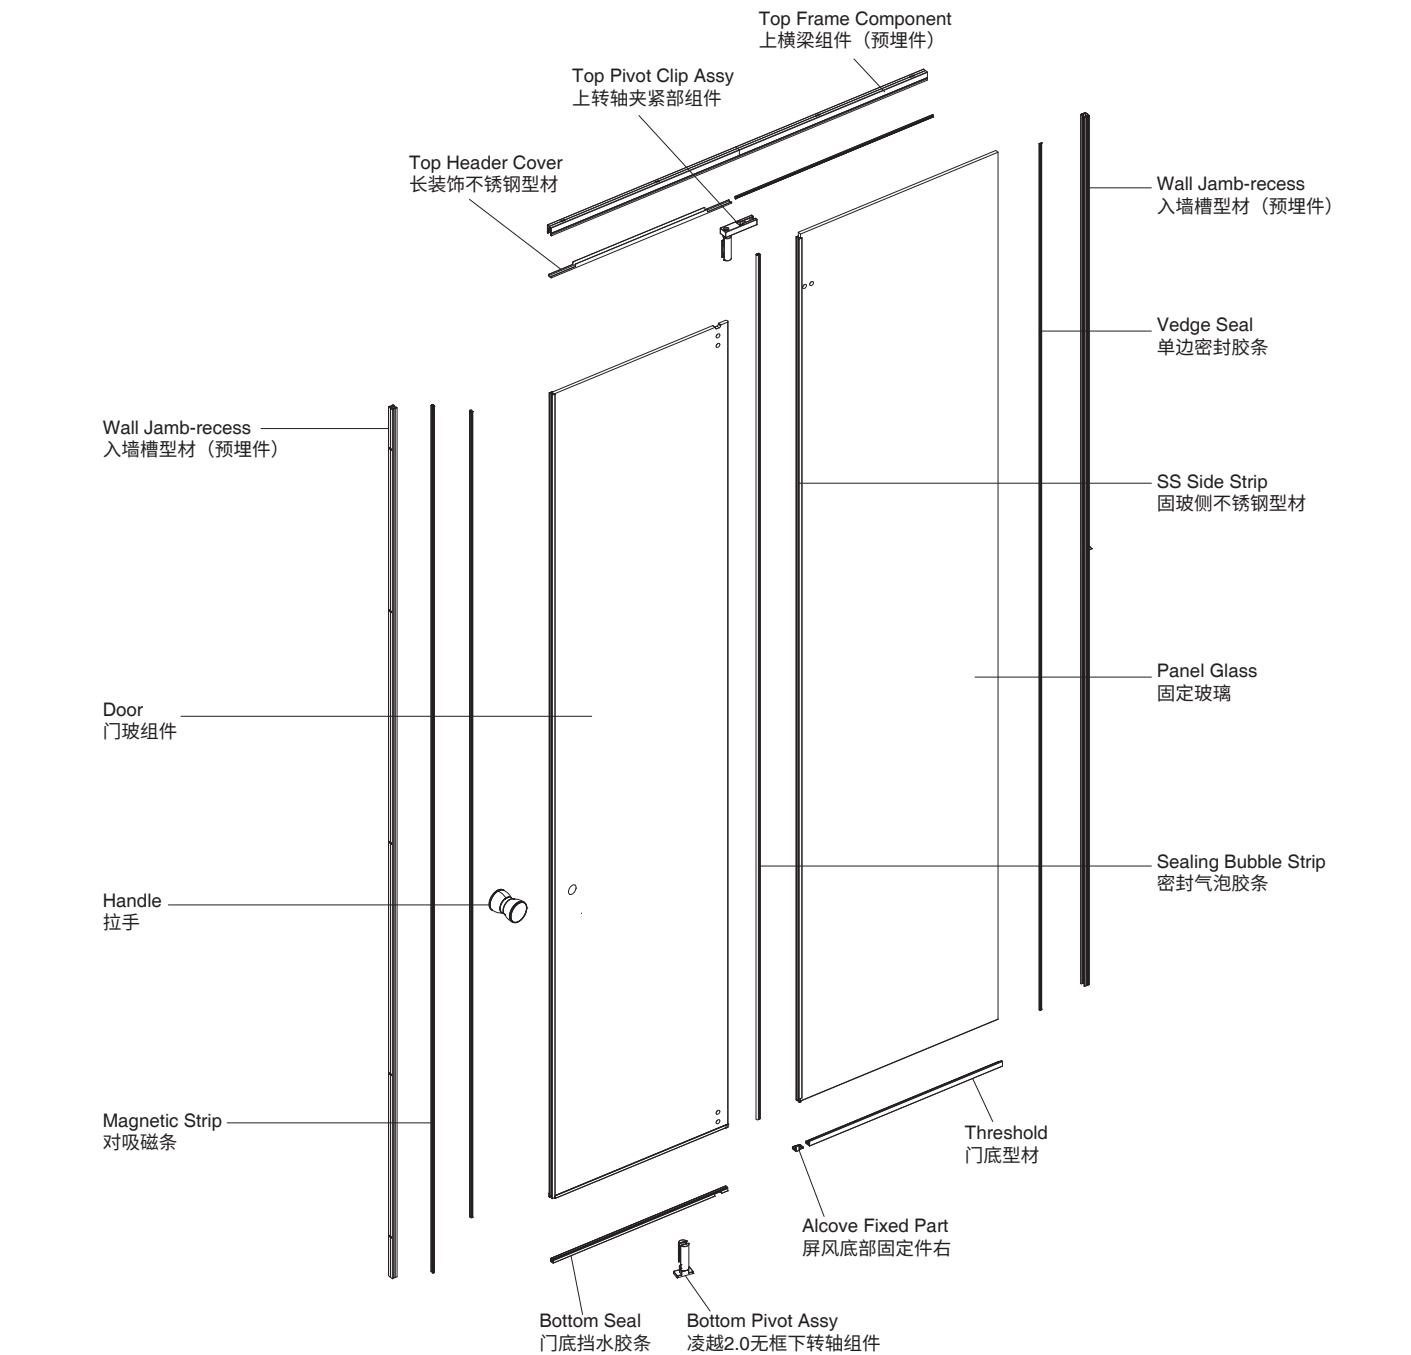


	X1	Top Header Cover 短装饰不锈钢型材		X4	Wedge Seal 单边密封胶条		X2	Tapping Screw 十字不锈钢沉头自攻螺丝 ST4*16
	X1	Top Header Cover 长装饰不锈钢型材		X1	Handle 拉手		X10	Hollow Wall Anchor, Nylon 膨胀套
	X1	Top Pivot Clip Assy 凌越 2.0 无框上转轴夹紧部组件		X1	Top Pivot Clamp		X1	Screw Key 4.0mm 4.0 内六角扳手
	X1	Bottom Pivot Assy 凌越 2.0 无框下转轴组件		X1	Alcove Fixed Part 屏风底部固定件右		X1	Screw Key 3.0mm 3.0 内六角扳手
	X1	Threshold-L 门底型材 -L		X1	Bottom Seal 门底挡水条		X1	Screw Key 2.5mm 2.5 内六角扳手
	X2	Magnetic Strip 磁条		X15	Tapping Screw ST3.5X40 自攻螺丝 ST3.5X40		X1	SS, Shim 1mm 下转轴座 1mm 不锈钢垫片
	X1	Sealing Bubble Strip 密封气泡胶条		X3	Tapping Screw 十字不锈钢圆头自攻螺丝 ST3.5*25		X1	SS, Shim 2mm 下转轴座 2mm 不锈钢垫片


Tools Required/所需工具

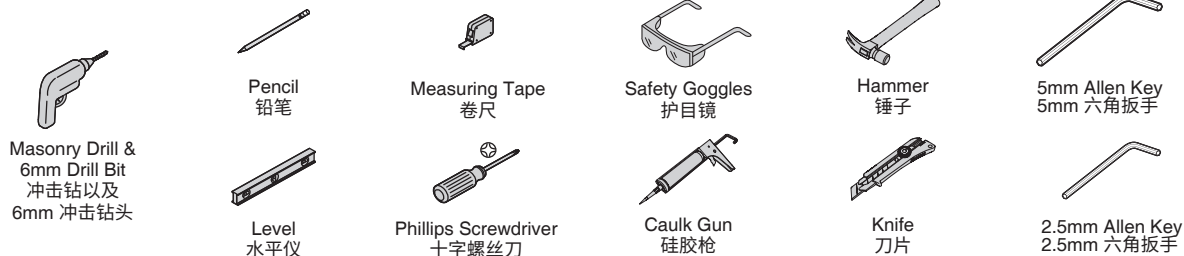


1. The installation area for the shower enclosure is the surface of the lower curb, which must be level. The height at both ends of the curb must be 18mm to ensure optimal installation results. (Fig. 1) The curb and the wall grooves on both sides and at the top must be on the same plane without any misalignment, as this will affect the subsequent glass installation.
2. If the side profiles are recessed into the wall, remove the protective rubber strips from the profile channels and inspect to ensure the channels are free of debris. (Fig. 2)
3. Before installation, remove the protective film from the outer stainless steel surface of the ceiling and wall jambs. (Fig. 3)

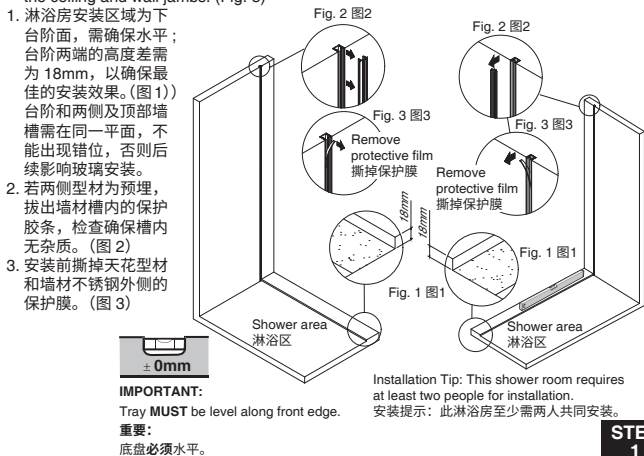

1. Place the bottom beam tightly against the curb surface, with one end against the wall. Insert the profile fixing base into one end of the profile. (The diagram shows a right-opening configuration; the process is reversed for a left-opening one.)
2. Ensure the distance between the fixing base and the wall = Door Panel Width + 21mm. (Note: One side of the door panel has a rounded edge; its width is a whole number. The standard width of the door panel is 650mm.)
3. Mark and drill holes. Use ST4x16 countersunk self-tapping screws to fix the bottom profiles for the fixed panels to the floor.

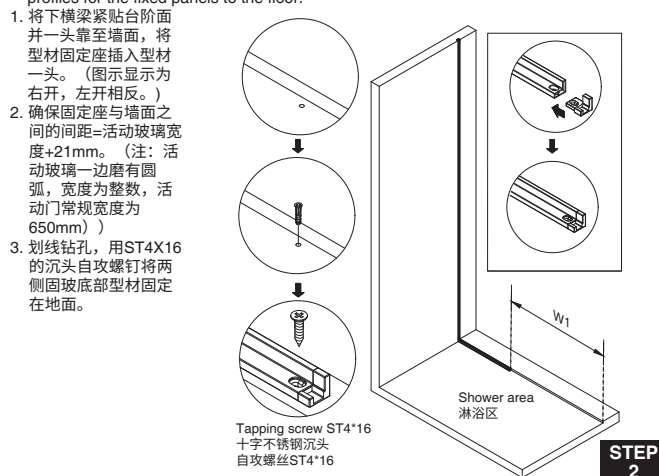


- Installing the Fixed Panel (Check to ensure the protective strip at the bottom of the fixed panel has not detached).
1. First, slide the pre-installed fixing blocks in the top profile to the middle to leave enough space for inserting the fixed glass panel into the upper track.
 2. The fixed glass panel must be moved inside the enclosure (shower area) first. Note that the glass is heavy; ensure its bottom is protected.
 3. Tilt the fixed glass panel, insert it upwards into the upper guide rail, and then lift and place it onto the bottom stainless steel beam.
 4. Push the fixed glass panel to slot it into the wall jamb. The bottom of the fixed glass profile should slot into the channel of the bottom track's fixing block and be flush with it. (See diagram)

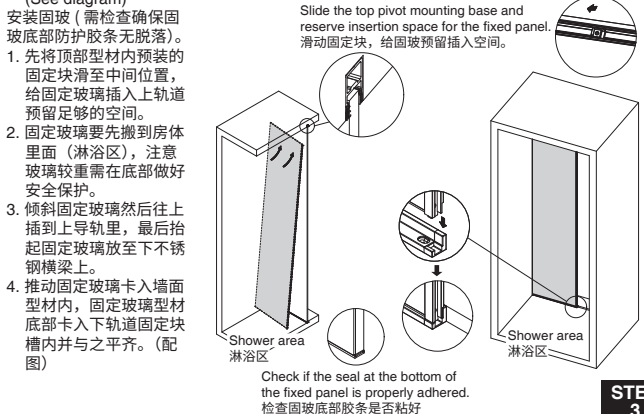

1. Adjust the distance between the stainless steel frame of the fixed panel and the wall jamb. Use a tape measure to check the distance between the fixed glass profile and the wall jamb. Ensure the distance at both the top and bottom equals the Door Panel Width + 21mm (Default door width is 650mm, so the default profile distance is 671mm).
2. Tighten the screws inside the top fixing block for the fixed panel. (Note: You must check and confirm that the safety gasket on the top fixing block has not fallen off.)



1. Install the bottom pivot base according to the door opening direction. (Note: The back of the pivot base should be tight against the curb surface, and the distance to the fixed panel's bottom profile fixture should be 22mm.)
2. Install the bubble seal. (Before removing the film, use the provided alcohol wipe to clean the inner surface of the profile and the surface of the magnetic seal.)

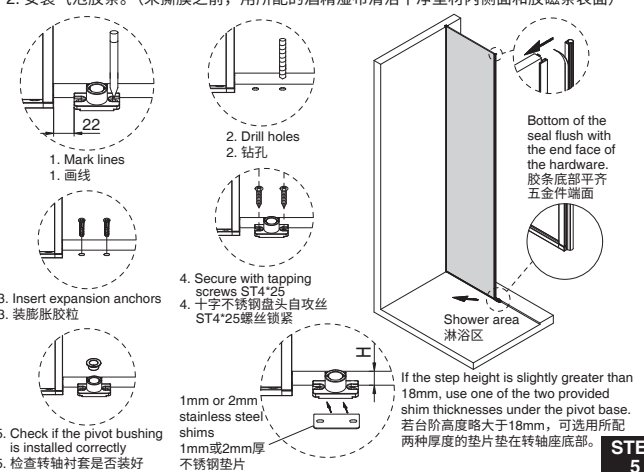

1. Install the side magnetic strip on the wall jamb. (Before removing the film, use the provided alcohol wipe to clean the inner surface of the profile and the surface of the magnetic strip.)




Door Panel Accessory Assembly

- Before removing the film, clean the inner surface of the door panel profile and the surface of the magnetic strip with an alcohol wipe. Pre-fit the magnetic strip to ensure the two strips attract each other.
- Adhere the magnetic strip inside the stainless steel frame of the door panel, ensuring it is oriented correctly to attract the other magnet. The top of the strip should be flush with the top of the stainless steel profile, and the bottom should extend about 8mm beyond the end of the door edge profile.
- Insert the bottom water-stop seal into the stainless steel water-stop profile at the bottom of the door panel. Note that the notched end of the seal must be on the same side as the pivot.
- Install the main body of the bottom pivot onto the door panel.

门玻配件组装

- 未撕膜之前，用酒精湿布清洁干净活动门型材内侧面和磁条表面，拿磁条预装配下，确保两磁条可相吸。
- 按磁条可吸附方向在门玻不锈钢边框内粘上磁条，磁条顶部跟不锈钢型材顶部平齐，磁条底部需超出门边型材端面约8mm。
- 将门底挡水胶条插入活动门底部不锈钢挡水型材内，注意胶条开缺口端与转轴端在同一侧。
- 安装下转轴主体至活动玻璃。







Installation Notes:
The glass is very heavy and requires at least 2 people to install. Use suction cups to adjust the glass position during installation.
安装注意事项:
玻璃很重需至少2人安装，安装过程中需使用吸盘调整玻璃位置。



STEP 7

- Install the single-sided seals on the top and wall side of the fixed panel. (Fig. 1)
Note: The single-sided strip shall be applied on the outside surface of the glass! The thicker type is selected by default.
- Install the top stainless steel decorative profiles. (Fig. 2)
- Snap the decorative cover onto the upper pivot base. Note that the notched end of the cover should face upwards. (Fig. 3)
- Install the decorative covers for the bottom pivot base and the fixing base. (Fig. 4)
- Install the handle. (This page shows the standard handle installation. If equipped with a remote-controlled handle, unscrew its outer cover, insert the remote control, and then tighten the cover.) (Fig. 5)

- 安装固定顶部和靠墙侧单边胶条。(图1) 需注意单边胶条需安装在玻璃外侧! 默认选择较厚的那款。
- 安装顶部不锈钢装饰型材。(图2)
- 将上转轴座装饰盖扣入上转轴座，注意扣盖开缺的一头朝上。(图3)
- 安装下转轴座装饰盖及固定座装饰盖。(图4)
- 安装拉手。(本页展示的为标准配置的拉手安装方式，若配遥控拉手，旋开所配拉手外盖，装入遥控手柄后再旋紧。(图5)

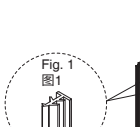





STEP 9

Installing the Door Panel

- First, insert the tapered plastic bushing from the upper pivot clamping assembly into the hole of the fixed panel. (Pay attention to the orientation of the plastic bushing.)
- Lift the door panel assembly and insert it into the bottom pivot base.
- Disassemble the upper pivot clamping component. While holding the door panel steady, first place the main body of the clamping part over the upper pivot pin on top of the door panel. Then, adjust the angle and insert the threaded post of the clamping body through the plastic bushing in the fixed panel's hole.
- Secure the upper pivot clamping component with its screw.
- Along the top and bottom edges of the upper pivot clamping component, use a utility knife to trim off the bubble section of the bubble seal.

安装门玻


- 首先将上转轴夹紧组件内的锥形塑胶圈塞入固定孔内。(注意塑胶圈方向)
- 抬起活动玻璃组件然后插入底部转轴座内。
- 拆上上转轴夹紧组件，扶住活动玻璃，将夹紧部主体先套住活动玻璃顶部上转轴轴心，然后调整角度将夹紧部主体螺纹柱插入固定玻璃孔内塑胶圈内。
- 用螺丝锁紧上转轴夹紧部。
- 沿着上转轴夹紧部的上下端面，用刀片切断气泡胶条的气泡部分。



STEP 8

- Apply sealant along the bottom and wall side of the bottom beam, and at the junction of the fixed panel and the bottom beam to seal and secure them.
- Depending on the installation of the wall jamb and single-sided seals, apply sealant to any visible gaps to seal and secure them.

- 下横梁底部和靠墙侧，固玻和下横梁位置均需打胶密封固定。
- 视墙材和单边胶条安装情况，在有缝隙的地方也打胶密封固定。

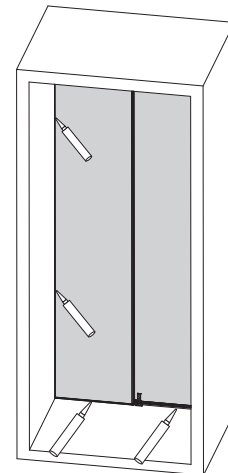

STEP 10