
KOHLER®

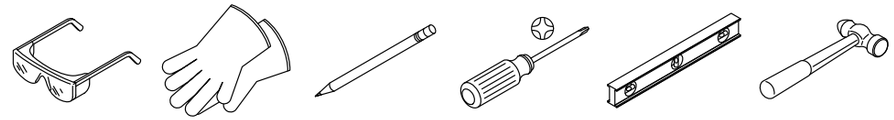

1684654-T2

记录您的型号：
Record your model number: _____

警告： 存在人身伤害和财产损坏风险。电线损坏可能会引起触电或火灾。在墙面钻孔时，需要格外小心，以免损坏墙内的电线或管道。

警告： 存在人身伤害风险。本产品并非设计用于承载人体重量，不得用作扶手或支撑物。请勿将本产品安装在可能被误认为扶手或支撑物的位置。

请遵守当地管路安装及建筑条例。

在安装或使用本产品之前阅读所有说明。

请保存说明书。

所需工具和材料：

1A. 电钻和 7 mm 钻头

1B. 2 mm 六角扳手

安装步骤：

2A. 安装前需确定托盘安装后效果，如图两种选择。

3A. 用随附的螺钉组装并固定托盘和墙罩。

4A. 将固定板预安装在墙罩内，确定固定板的安装方向。

5A. 将固定板定位在墙上，用水平仪确保固定板处于水平位置，标记孔位。

6A. 移走固定板，按照孔位在墙上钻四个 1/4" (7 mm) 孔。

7A. 将胀塞塞入墙上孔内，用锤子敲击，直至其与墙齐平。

8A. 用随附的螺钉将固定板安装到墙面。

9A. 墙罩内远离托盘一侧的扣位

9B. 固定板的缺口

9C. 将墙罩内远离托盘一侧的扣位对齐固定板的缺口，确保墙罩贴紧墙面；保持贴紧状态，将托盘组件向远离托盘一侧水平滑动直至不能继续滑动为止。


10A. 用随附的 2 mm 六角扳手锁紧螺钉固定托盘组件。


需要帮助？ 请联系我们的客户服务中心。


- 中国大陆：+(86) 800-820-2628, +(86) 400-820-2628
- **保养和清洁：** kohler.com.cn/support/care-and-cleaning/


本产品在**科勒®卫浴产品的 3 年有效质保范围内**，详见所附的《合格证》。


WARNING: Risk of personal injury and property damage. Damaged electrical wiring can cause electric shock or fire. When drilling into the

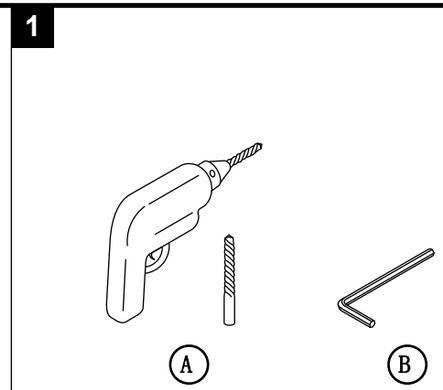


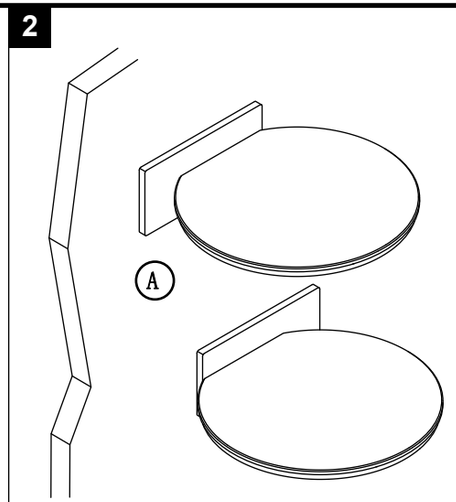

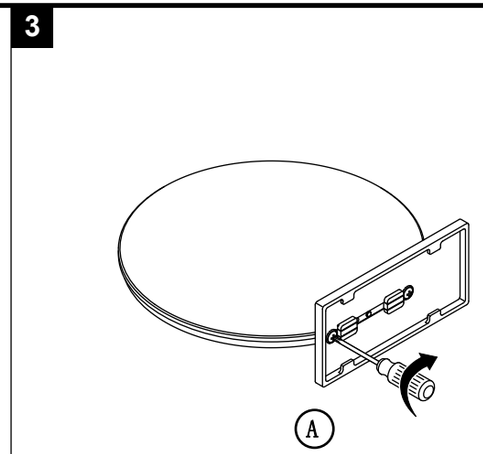

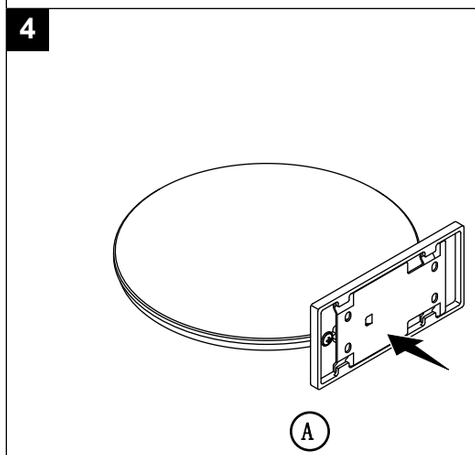

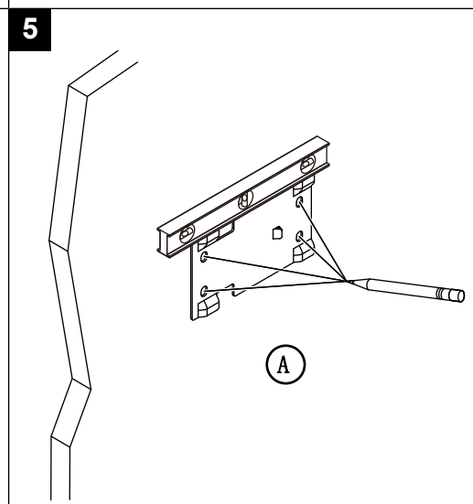

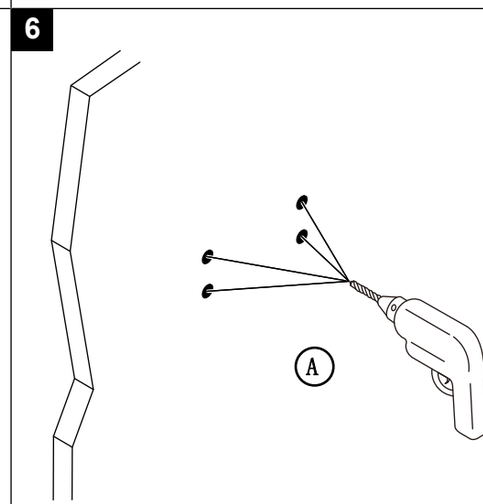

wall, exercise caution to avoid electrical wiring or plumbing that may be located behind the wall.

WARNING: Risk of personal injury. The product is not intended to support body weight. Do not use the product as a grab bar or support bar. Do not install where the product might be used as a grab bar or support bar.

Follow all local plumbing and building codes.

READ ALL INSTRUCTIONS BEFORE INSTALLATION

SAVE THESE INSTRUCTIONS

Required Tools and Materials:

1A. Drill and 7 mm Masonry Drill Bit

1B. 2 mm Hex Wrench

Installation Steps:

2A. Before installation, choose the desired tray position from the two options shown.

3A. Use the supplied screws to assemble and secure the tray and wall cover.

4A. Pre-install the mounting plate in the wall cover and verify that the installation orientation of the mounting plate.

5A. Position the mounting plate on the wall. Use a level to ensure that the mounting plate is horizontal. Mark the hole positions.

6A. Remove the mounting plate. Drill four 1/4" (7 mm) holes in the wall at the marked positions.

7A. Insert the expansion plugs into the holes. Tap with a hammer until aligned with the wall.

8A. Secure the mounting plate to the wall using the supplied screws.

9A. Latch

9B. Notch


9C. Align the latch inside the wall cover with the notch in the mounting plate, and keep the wall cover flush against the wall. While keeping the wall cover flush, slide the tray assembly horizontally until it locks into place.

10A. Tighten the setscrew with the supplied 2 mm hex wrench to secure the tray assembly.

Need help? Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- **Care and cleaning:** kohler.com.cn/support/care-and-cleaning/

This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

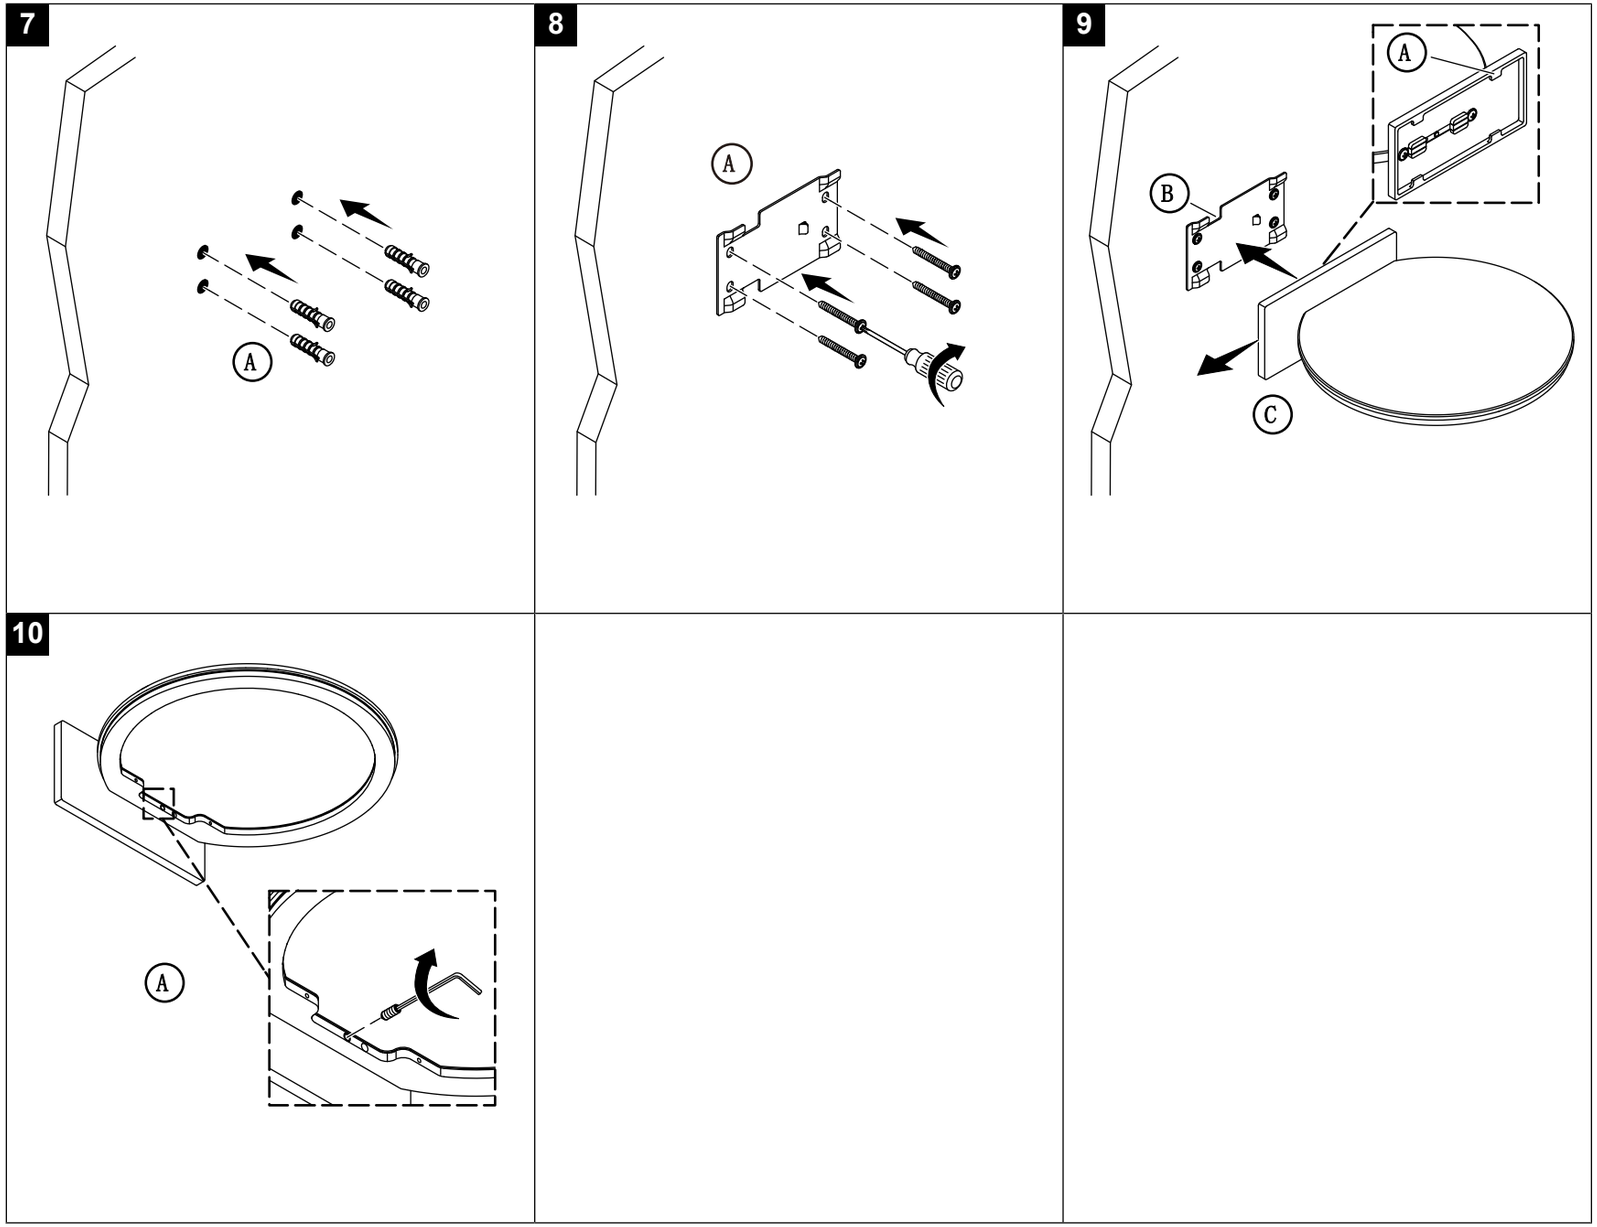

©2026 Kohler Co.