

1675587-T2

记录您的型号：
Record your model number:_____

⚠ **警告： 存在人身伤害和财产损坏风险。电线损坏可能会引起触电或火灾。在墙面钻孔时，需要格外小心，以免损坏墙内的电线或管道。**

⚠ **警告： 存在人身伤害风险。本产品并非设计用于承载人体重量，不得用作扶手或支撑物。请勿将本产品安装在可能被误认为扶手或支撑物的位置。**

注： 对于玻璃置物架，如滴落墨水、染发剂等表面污渍，需及时擦拭去除，避免长时间留下印记。

请遵守当地管路安装及建筑条例。

阅读并遵守所有说明

保存说明书

所需的其它工具和材料：

1A. 6 mm 钻头
1B. 胶带

安装步骤

对于卫生纸架：

2A. 推荐卫生纸架安装位置：H = 8" (203 mm) - 12" (305 mm), W = 6" (152 mm)

3A. 放置模板，并确认模板处于水平状态。

4A. 用 6 mm 钻头通过模板标记孔位在完工墙面上钻孔。

5A. 使用随附的 2.5 mm 六角扳手松开固定螺丝。
5B. 确认玻璃层板斜面与金属框斜面方向相吻合，放置玻璃层板，然后小心地拧紧固定螺丝以固定玻璃层板。**不可过度拧紧！**

6A. 松开固定螺丝，取出底座。
6B. 在钻孔内装入随附的胀塞。确保底座大斜面朝上，将底座孔位与胀塞对齐，然后用随附的螺丝将底座固定到完工墙面上。

7A. 将卫生纸架附于已装好的底座上，然后拧紧固定螺丝。安装另一侧的螺丝，并装上螺丝盖。

对于毛巾杆：

8A. 放置模板，并确认模板处于水平状态。

9A. 用 6 mm 钻头通过模板标记孔位在完工墙面上钻孔。

10A. 松开固定螺丝，取出底座。
10B. 在钻孔内装入随附的胀塞。确认底座缺口面朝下，将底座孔位与胀塞对齐，然后用随附的螺丝将底座固定到完工墙面上。

11A. 将毛巾杆附于已装好的底座上，然后拧紧固定螺丝。

对于浴巾架：

12A. 放置模板，并确认模板处于水平状态。

13A. 用 6 mm 钻头通过模板标记孔位在完工墙面上钻孔。

14A. 使用随附的 2.5 mm 六角扳手松开固定螺丝。
14B. 确认玻璃层板斜面与金属框斜面方向相吻合，放置玻璃层板，然后小心地拧紧固定螺丝以固定玻璃层板。**不可过度拧紧！**

15A. 松开固定螺丝，取出底座。
15B. 在钻孔内装入随附的胀塞。确保底座大斜面朝上，将底座孔位与胀塞对齐，然后用随附的螺丝将底座固定到完工墙面上。

16A. 将浴巾架附于已装好的底座上，然后拧紧固定螺丝。

对于双衣钩：

17A. 松开固定螺丝，取出底座。

18A. 放置底座，并确认底座处于垂直状态。用铅笔标记钻孔位置。
18B. 用 6 mm 钻头在标记孔位处钻孔。

19A. 在钻孔内装入随附的胀塞。确认底座缺口面朝下，将底座孔位与胀塞对齐，然后用随附的螺丝将底座固定到完工墙面上。

20A. 将双衣钩附于已装好的底座上，然后拧紧固定螺丝。

需要帮助？ 请联系我们的客户服务中心。

- 中国大陆：+(86) 800-820-2628, +(86) 400-820-2628
- 中国香港、中国澳门、中国台湾：+(852) 3125-7728
- **保养和清洁：** kohler.com.cn/support/care-and-cleaning/

本产品在**科勒®卫浴产品的 3 年有效质保范围内**，详见所附的《合格证》。

⚠ **WARNING: Risk of personal injury and property damage.** Damaged electrical wiring can cause electric shock or fire. When drilling into the wall, exercise caution to avoid electrical wiring or plumbing that may be located behind the wall.

⚠ **WARNING: Risk of personal injury.** The product is not intended to support body weight. Do not use the product as a grab bar or support bar. Do not install where the product might be used as a grab bar or support bar.

NOTE: Promptly wipe off ink, hair dye, and other surface stains from the glass shelf to prevent lasting marks.

Follow all local plumbing and building codes.

READ AND FOLLOW ALL INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Additional Required Tools and Materials:


1A. 6 mm Drill Bit
1B. Masking Tape

Installation Steps

For Toilet Paper Holder:

2A. Recommended Toilet Paper Holder Location: H = 8" (203 mm) to 12" (305 mm), W = 6" (152 mm)

3A. Position the template. Verify that the template is level.

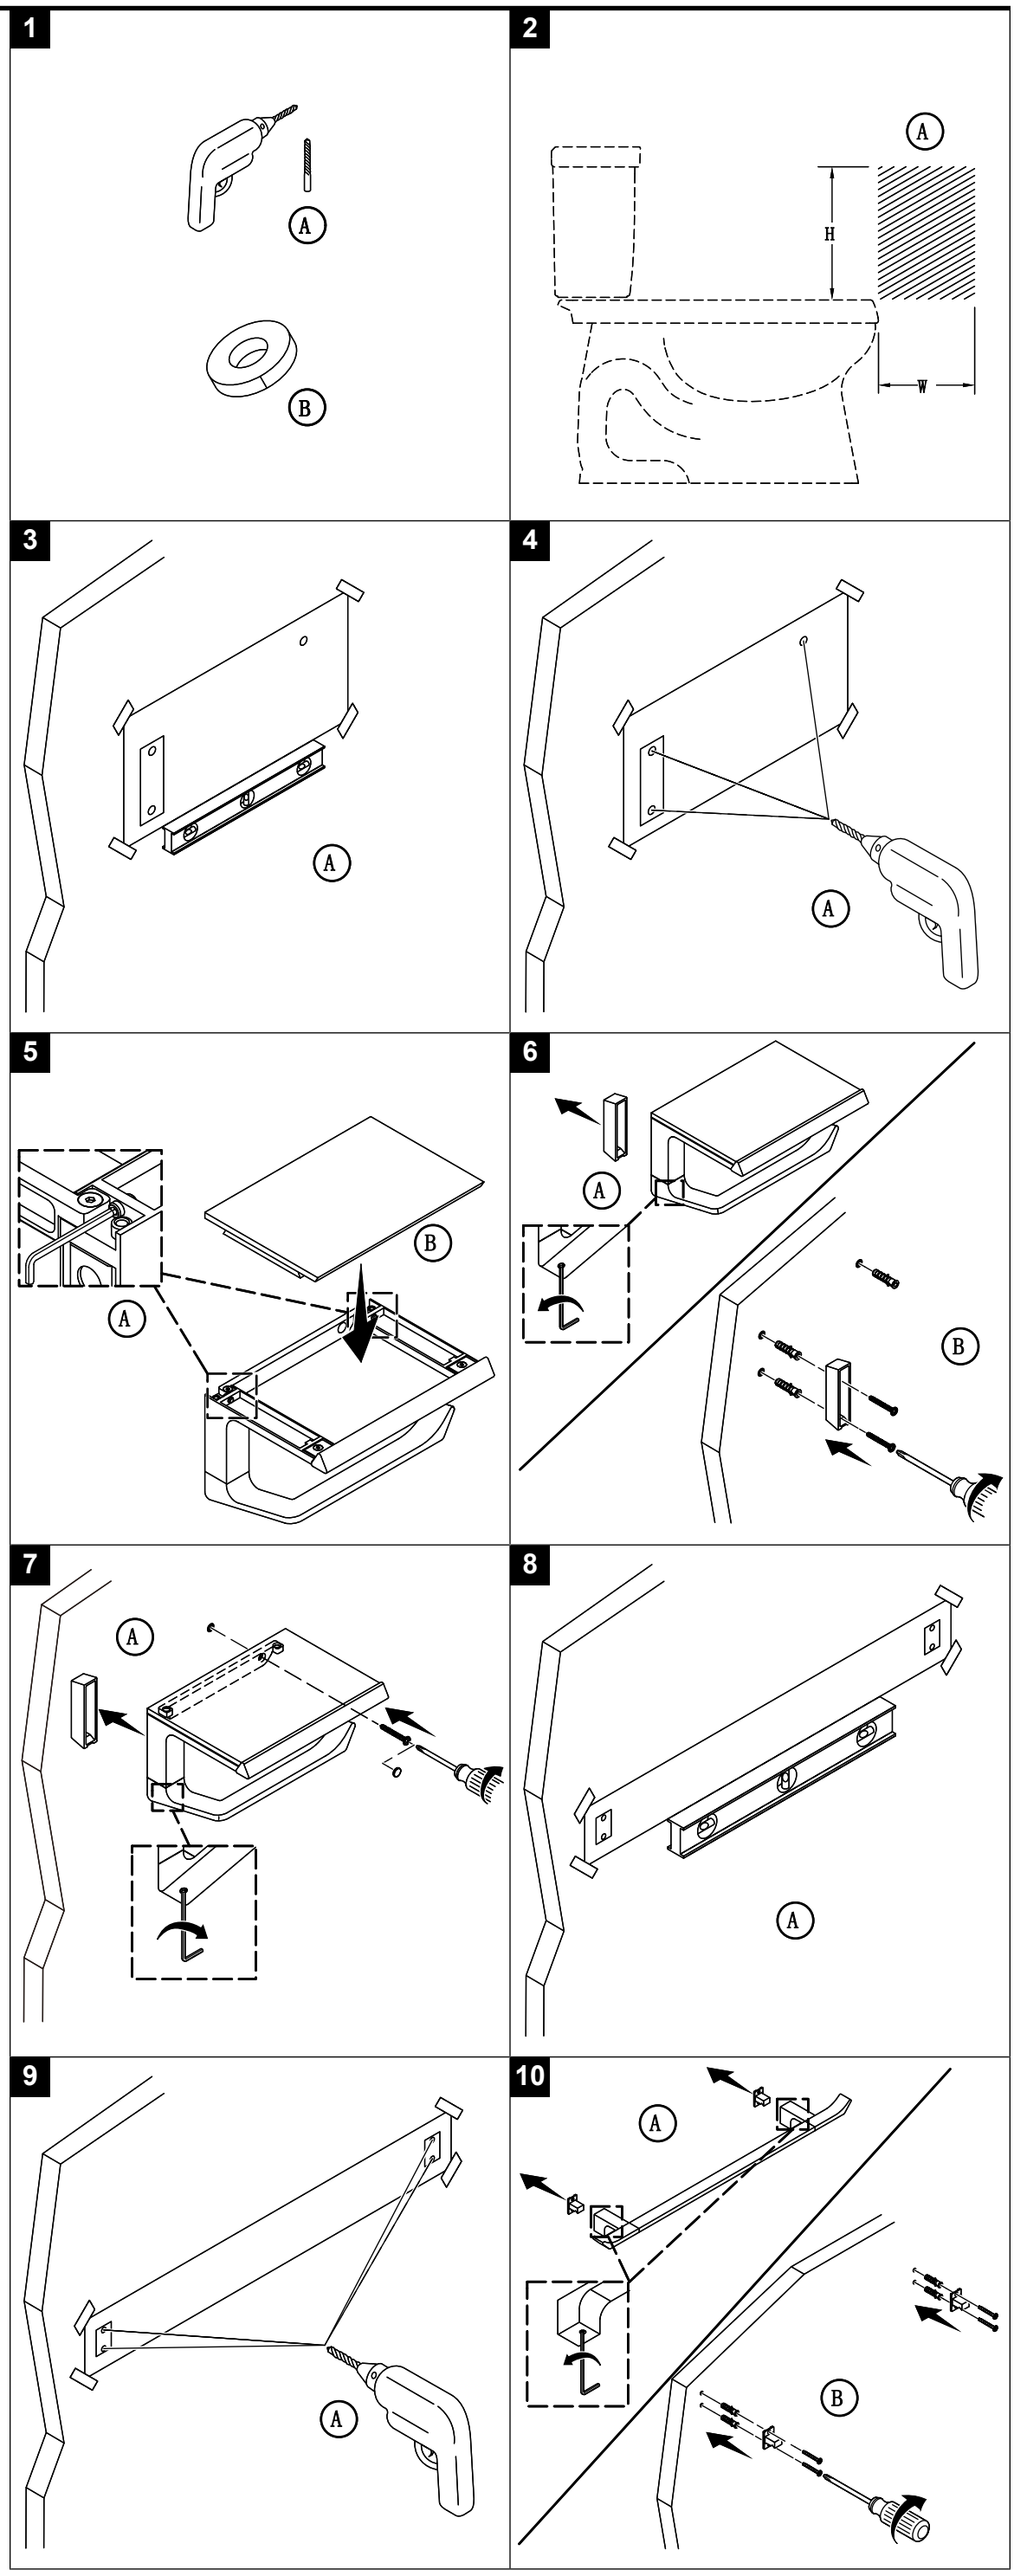

4A. Drill 6 mm holes into the finished wall.

5A. Loosen the setscrews using the provided 2.5 mm hex wrench.
5B. Verify that the beveled edge of the glass plate aligns with the beveled edge of the metal frame. Position the glass plate. Tighten the setscrews to secure the glass plate. **Do not overtighten!**

6A. Loosen the setscrew and remove the bracket.
6B. Insert the provided wall anchors. Verify that the bracket is oriented as shown. Align the bracket holes with the wall anchors. Secure the bracket to the finished wall using the provided screws.

7A. Position the toilet paper holder onto the installed bracket. Tighten the setscrew. Install the screw on the opposite side and attach the screw cap.

For Towel Bar:

8A. Position the template. Verify that the template is level.

9A. Drill 6 mm holes into the finished wall.

10A. Loosen the setscrews and remove the brackets.
10B. Insert the provided wall anchors. Verify that the brackets are oriented as shown. Align the bracket holes with the wall anchors. Secure the brackets to the finished wall using the provided screws.

11A. Position the towel bar onto the installed brackets. Tighten the setscrews.

For Double Towel Shelf:

12A. Position the template. Verify that the template is level.

13A. Drill 6 mm holes into the finished wall.

14A. Loosen the setscrews using the provided 2.5 mm hex wrench.
14B. Verify that the beveled edge of the glass plate aligns with the beveled edge of the metal frame. Position the glass plate. Tighten the setscrews to secure the glass plate. **Do not overtighten!**

15A. Loosen the setscrews and remove the brackets.
15B. Insert the provided wall anchors. Verify that the brackets are oriented as shown. Align the bracket holes with the wall anchors. Secure the brackets to the finished wall using the provided screws.

16A. Position the double towel shelf onto the installed brackets. Tighten the setscrews.

For Double Robe Hook:

17A. Loosen the setscrew and remove the bracket.

18A. Position the bracket. Verify that the bracket is plumb. Using a pencil, mark the hole locations.
18B. Drill 6 mm holes into the finished wall.


19A. Insert the provided wall anchors. Verify that the bracket is oriented as shown. Align the bracket holes with the wall anchors. Secure the bracket to the finished wall using the provided screws.

20A. Position the double robe hook onto the installed bracket. Tighten the setscrew.

Need help? Please contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- Hong Kong (China), Macau (China), Taiwan (China): +(852) 3125-7728
- **Care and cleaning:** kohler.com.cn/support/care-and-cleaning/

This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

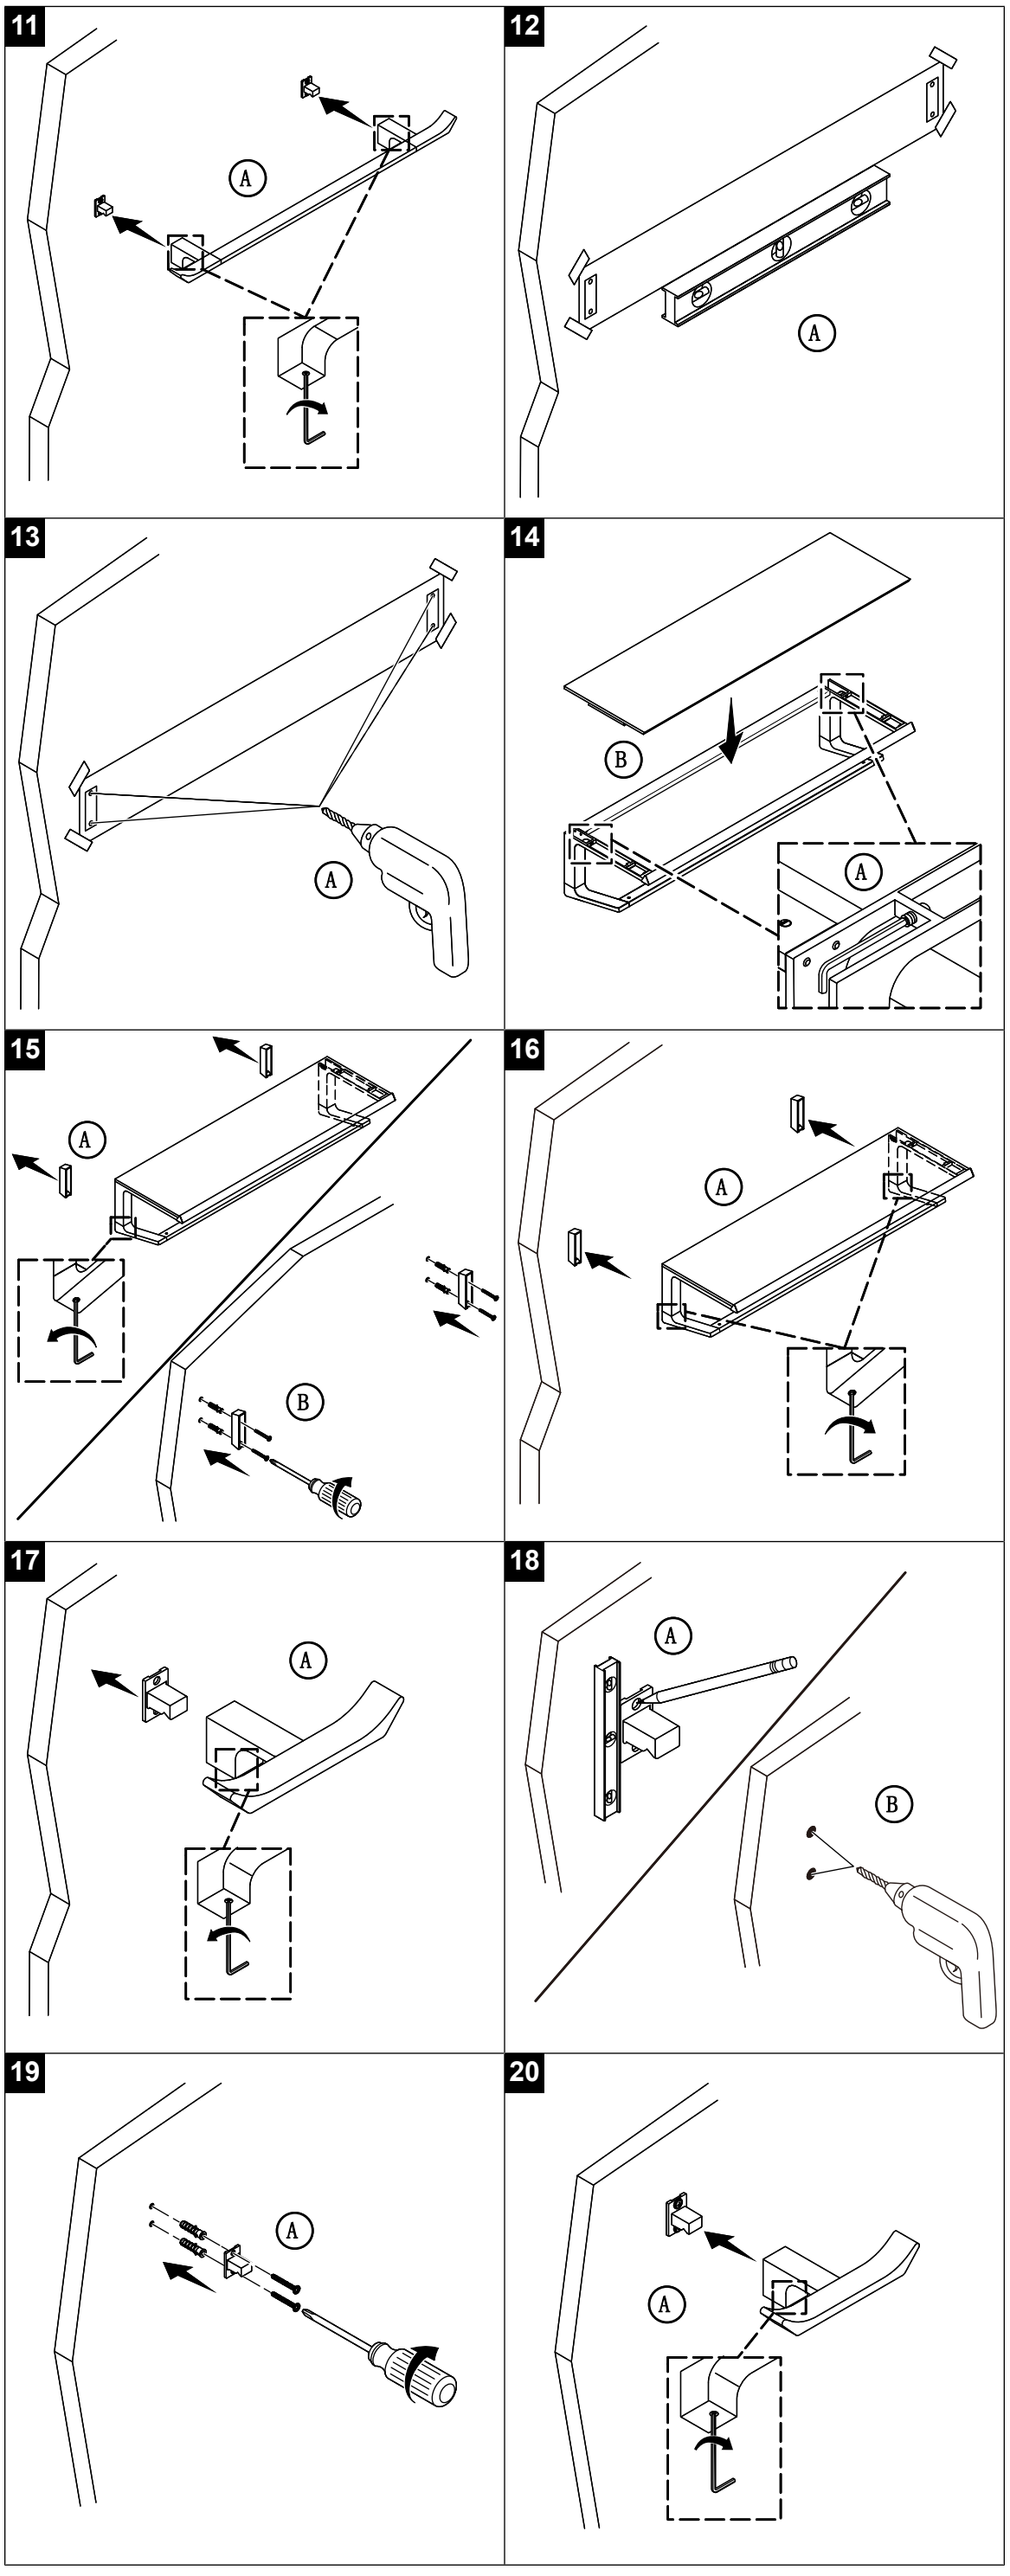

©2026 Kohler Co.