KOHLER®

SERVICE PARTS

零 件 图

飘瑞诗 PURIST

Single Lever Lavatory/Bidet Faucet

14597T-4　单把脸盆龙头
14598T-4　单把碗盆龙头
14599T-4　单把净身盆龙头

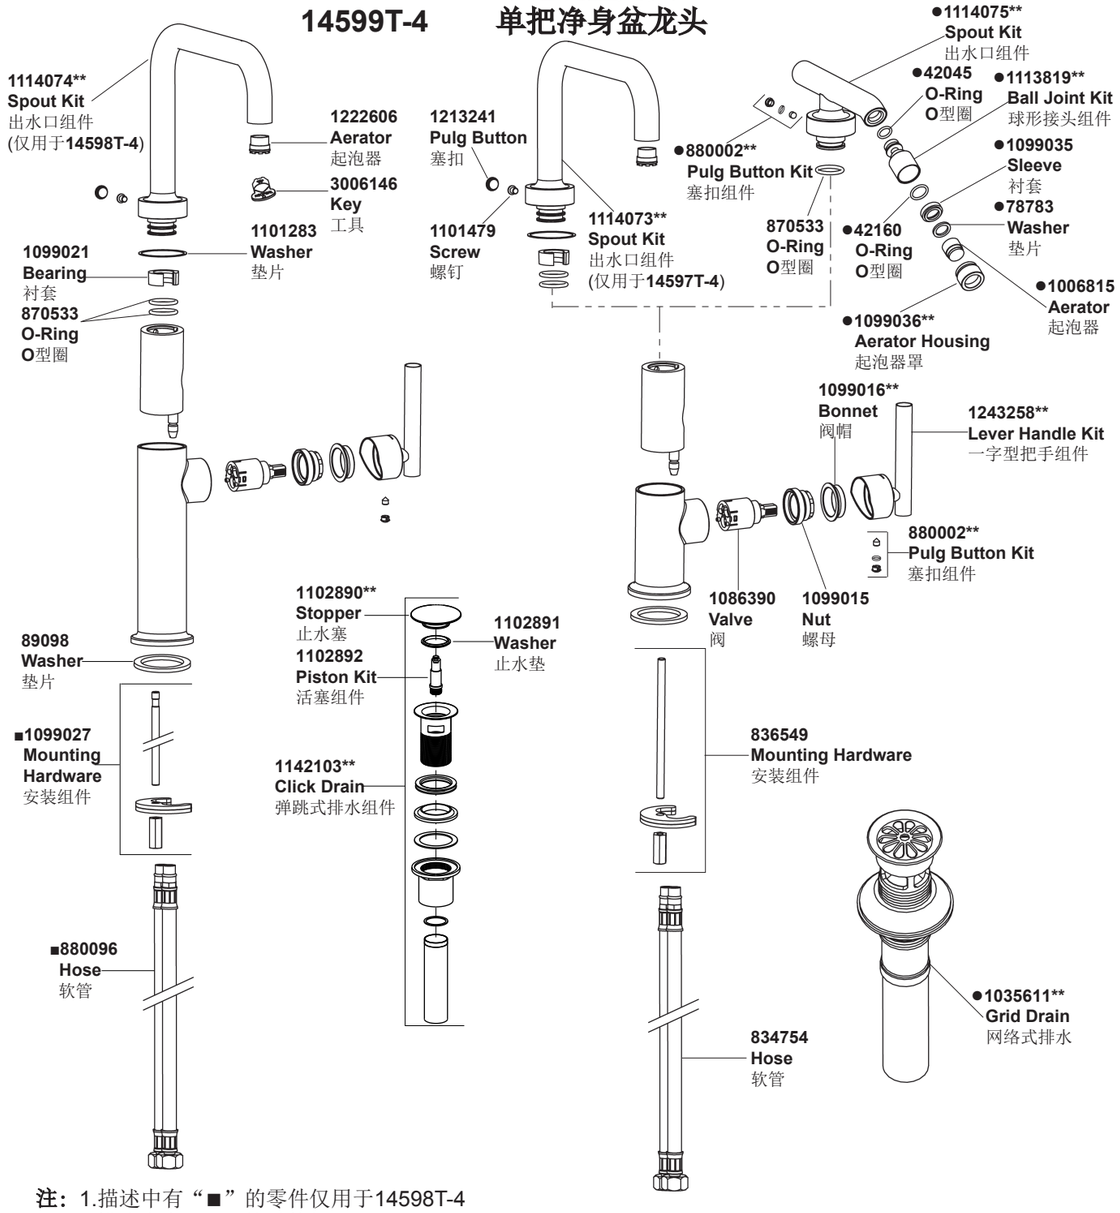

注： 1.描述中有“■”的零件仅用于14598T-4
2.描述中有“●”的零件仅用于14599T-4

**订购时请说明颜色编号
**Color code must be specified when ordering

KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

飘瑞诗 PURIST

Single Lever Lavatory/Bidet Faucet

14597T-4　单把脸盆龙头
14598T-4　单把碗盆龙头
14599T-4　单把净身盆龙头

安装之前 / BEFORE YOU BEGIN

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

Please leave these instructions for the consumer. They contain important information.

注意事项：
1.一定要先彻底冲洗供水管以清除管道中的杂质。
2. 如果是安装新的洗脸盆或净身盆，可将水龙头和排水器组件先装好到洗脸盆或净身盆上。

NOTES:
1. Flush the water supply pipes thoroughly to remove debris.
2. For new installations, assemble faucet and drain to lavatory or bidet before installing lavatory or bidet.

使用说明 / HANDLE OPERTION

将手柄轻轻提起，顺时针旋转为冷水，逆时针旋转为热水。

Lift the handle gently. Turn clockwise for cold water, counter-clockwise for hot water.

安装尺寸 / ROUGH-IN DIMENSIONS

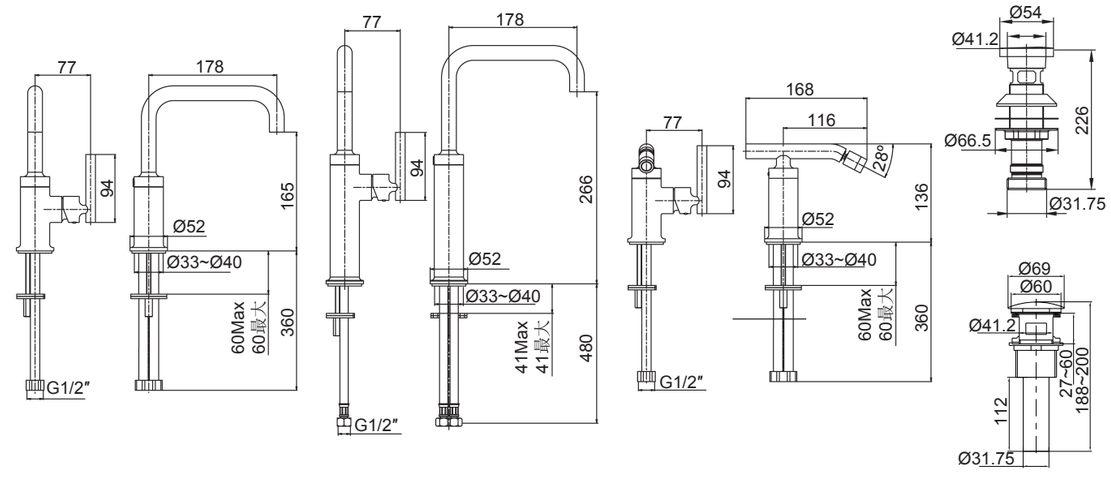

14597T-4　**14598T-4**　**14599T-4**

安装步骤

INSTALLATION

如何安装水龙头

将固定螺栓(1)安装到水龙头底部，把垫圈(2)粘到水龙头底部，将软管(3)插入洗脸盆或净身盆的安装孔中。

从洗脸盆或净身盆下方把托架(4)(橡胶垫片放在上面)和螺母(5)套入固定螺栓中。调整水龙头，使出水口位于正前方，拧紧螺母以固定水龙头。

把软管接到水源，当您面对水龙头时前边软管接热水，后边软管接热水，冷水管有“COLD”标志。

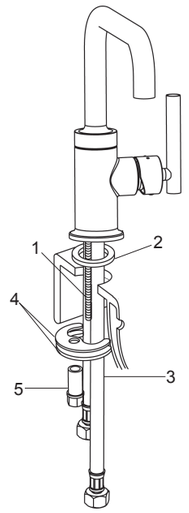

How To Install The Faucet

Install the mounting stud(1) into the faucet body base. Stick washer(2) under the body assembly. Insert the flexible supply hoses(3) into the lavatory or bidet hole.

From underside of lavatory or bidet, place bracket(4)(rubber washer is on the top) and nut(5) onto mounting stud. Position the faucet so that spout points to the front. Tighten nut to secure faucet to lavatory or bidet.

Attach the hoses to water supplies. When facing the faucet, the hose in front connects to hot water, the back hose with “COLD" label connects to cold water.

如何安装排水组件 (用于14597T &14598T)

将锁紧螺母(10)、塑料垫片(9)、橡胶垫圈(8)从排水本体上取下。把排水本体从脸盆上部孔插入。再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从排水本体底部装入。锁紧螺母。

注意：如果需要，可直接在排水器法兰(6)底面沿周围涂一圈密封油灰或其它密封剂，而不使用橡胶垫片(7)。

在锁紧螺母拧紧后，不可调整排水本体的位置，否则将会破坏油灰或密封剂密封。去除多余的油灰。

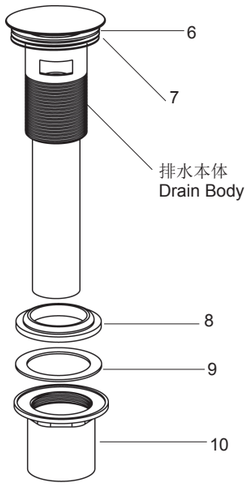

How To Install The Drain (For 14597T&14598T)

Remove the locknut(10), plastic washer (9), rubber gasket(8) from the drain body. Insert the drain body into the lavatory. Reinstall the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the locknut.

Note: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(6), instead of using rubber washer(7).

Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal. Remove any excess putty.

如何安装排水组件 (用于14599T)

旋下排水器盘片(12)，在排水器盘片底面沿周围涂一圈密封油灰或者其它密封剂，并把排水本体(11)从净身盆底部装入。

将排水器盘片旋到排水本体上。从净身盆下方拧紧锁紧螺母。

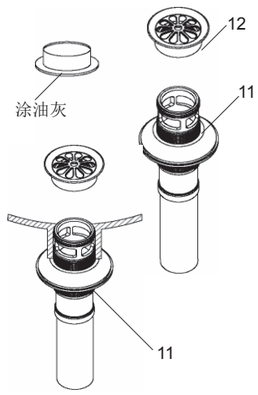

How To Install The Drain (For 14599T)

Screw off the drain flange(12) from drain. Apply a ring of plumbers putty or other sealants around the underside of the drain flange. Insert the drain body(11) from the underside of the bidet.

Thread the drain flange onto the drain body. Tighten the locknut(14) by hand from the underside of the fixture. Remove any excess putty.

注意：在锁紧螺母转紧后，不可调整排水本体的位置，否则会破坏油灰或密封剂密封。

Notes: Do not reposition the drain after the locknut is tightened, or you may break the putty seal.

安装结果检查

INSTALLATION CHECKOUT

检查并确保所有的衔接处都已拧紧。确保手柄处于关闭位置。

打开排水系统和主要供水源，检查并修理有漏水的接口。

将起泡器(13)拆下(对于14597T-4和14598T-4，使用附带工具(14))，打开水龙头，让水流过出水口一分钟以清除杂质。冲洗起泡器，关闭水龙头，重新装回起泡器。

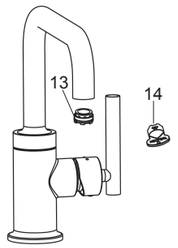

Ensure that all connections are tightened and the handle is in the off position.

Open the drain. Turn on main water supply and check for leaks. Repair as required.

Remove the aerator(13)(by the key(14) provided for 14597T-4 and 14598T-4). Turn on the faucet. Run the hot and cold water through the spout for about one minute to remove any debris. Remove any debris from the aerator. Shut off the faucet and reinstall the aerator.

更换止水垫及活塞组件 (用于14597T&14598T)

逆时针旋下止水塞(15)，并取出止水垫(16)。更换新的止水垫。逆时针旋下活塞组件(17)，更换新的活塞组件。装回止水垫及止水塞。



Replacing the Washer and Piston Kit (For 14597T&14598T)

Turn counterclockwise to remove the stopper(15). Take out washer(16). Replace with a new one. Turn counterclockwise to remove the piston kit(17). Replace with a new one. Reinstall stopper and washer.

清洗说明

CLEANING INSTRUCTIONS

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，有许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.