


EX38222T-4 落地式浴缸花洒龙头

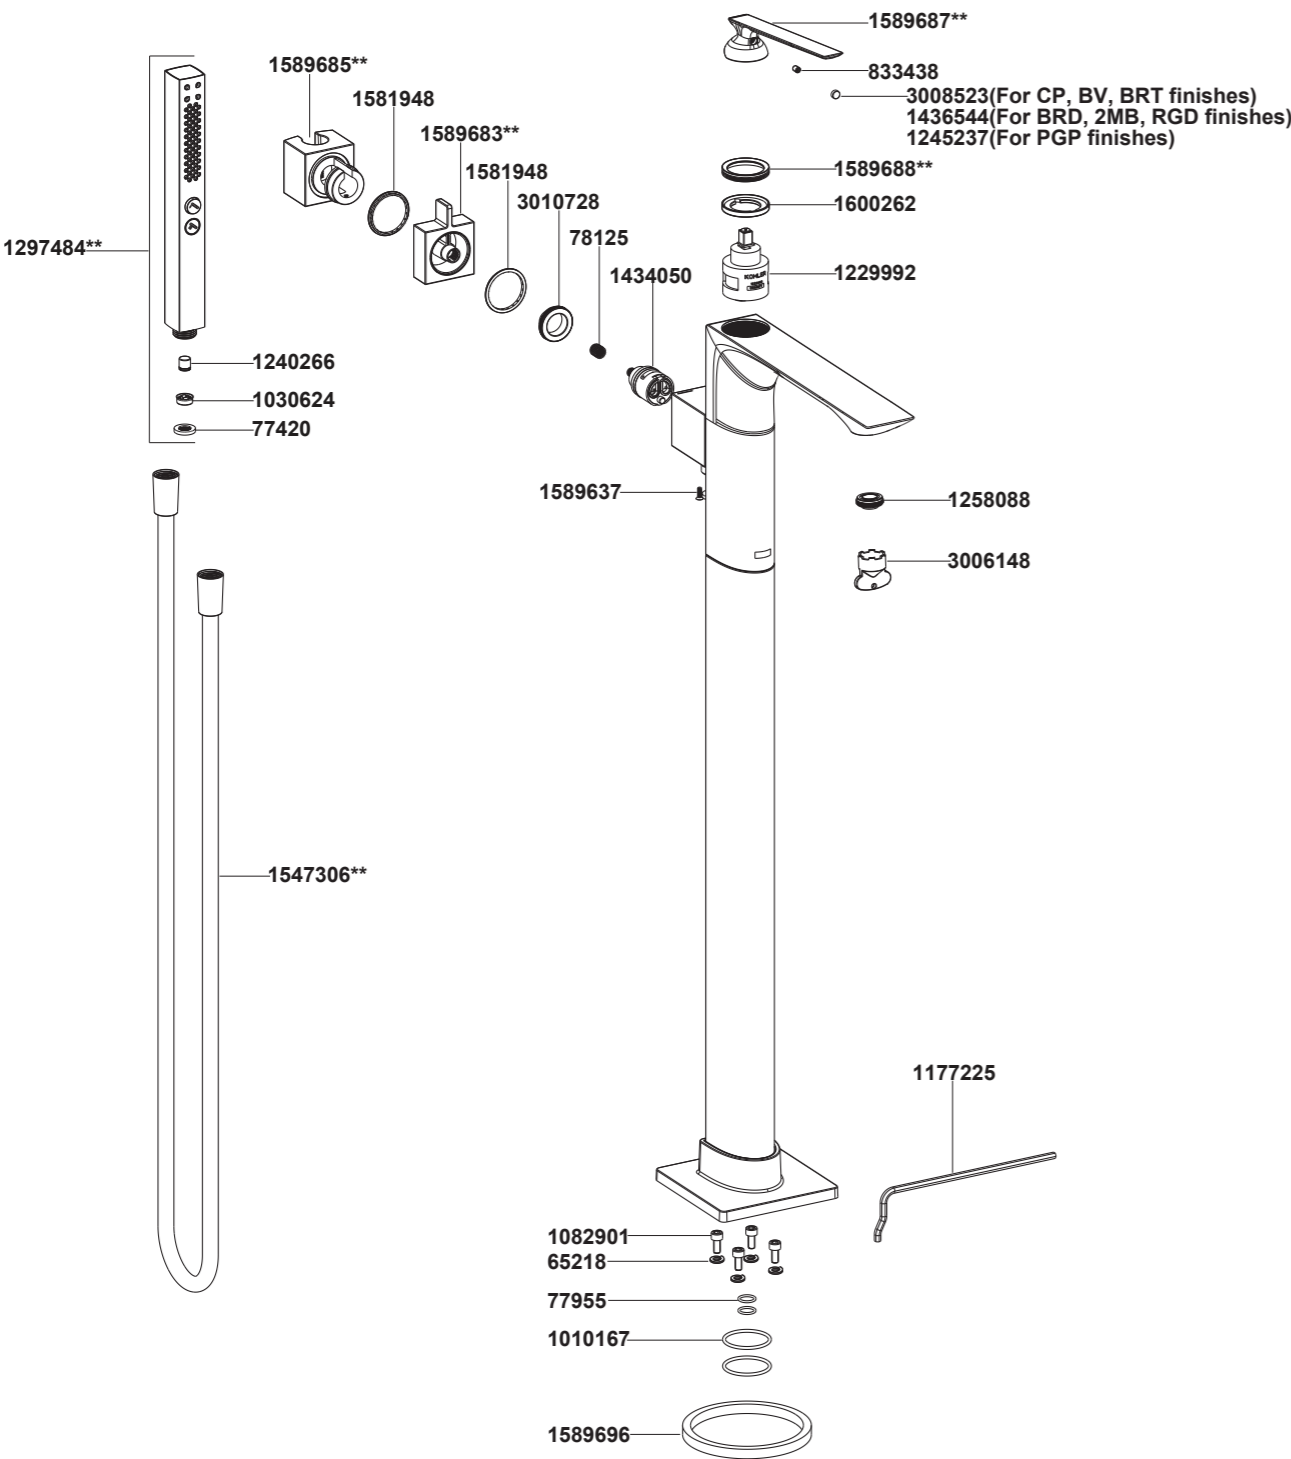

\*\*订购时请说明颜色编号  
\*\*Color code must be specified when ordering

EX38222T-4 落地式浴缸花洒龙头

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

- 注意事项：**
- 一定要先彻底冲洗供水管以清除管道中的杂质。
  - 检查供水管有无损坏。如需要，进行替换。
  - 遵守当地管路安装条例。
  - 预埋前测试安装连接部位是否有渗漏，根据需要修理之。
  - 花洒最高工作压力为：0.5MPa(5bar)。水压超过0.5MPa(5bar)时须安装减压阀。花洒最高工作温度及环境温度：60°C。请特别注意花洒同花洒连接的臂管须远离浴霸，否则可能损坏花洒及其密封件，甚至对使用者造成伤害。
  - 安装本产品时请与97905T配套使用。
  - 淋浴器加施的水效标识表明本产品的水效等级等性能符合GB28378-2019《淋浴器水效限定值及水效等级》的要求，是产品符合性的一种标识。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


- NOTES:**
- Flush the water supply pipes thoroughly to remove debris.
  - Inspect the supply tubing for damage. Replace as necessary.
  - Observe local plumbing codes.
  - Check for leaks before covering the pipes, repairs as needed.
  - The highest working pressure for handshower is 0.5MPa(5bar). If it exceeds 0.5MPa(5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handshower away from heater, or it may become damaged and cause injury to the user.
  - Please purchase the matched mounting base 97905T when install the faucet.
  - The water efficiency label applied to the shower indicates that the water efficiency grade and other performance of the product meet the requirements of GB 28378-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Showers" which is a marking of product conformity.

使用说明

将龙头把手轻轻往后推，浴缸出水口出水，顺时针旋转为热水，逆时针旋转为冷水。

逆时针旋转花洒把手，旋转至90度时花洒出混合水，旋转至180度时花洒出热水。

按动花洒面板上的按键即可切换花洒的各种功能。

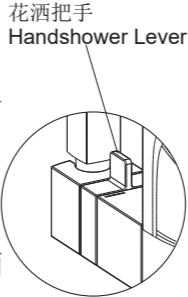


OPERATION INSTRUCTION

Push the faucet lever back gently for bath spout. Turn clockwise for hot water, turn counter-clockwise for cold water.


Rotate the handshower lever counter-clockwise to 90° for mixed water, rotate to 180° for hot water.

Press the buttons of the handshower to change the water flow.

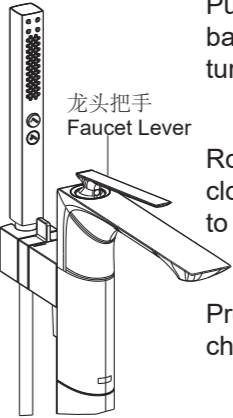

安装尺寸

ROUGH-IN DIMENSIONS

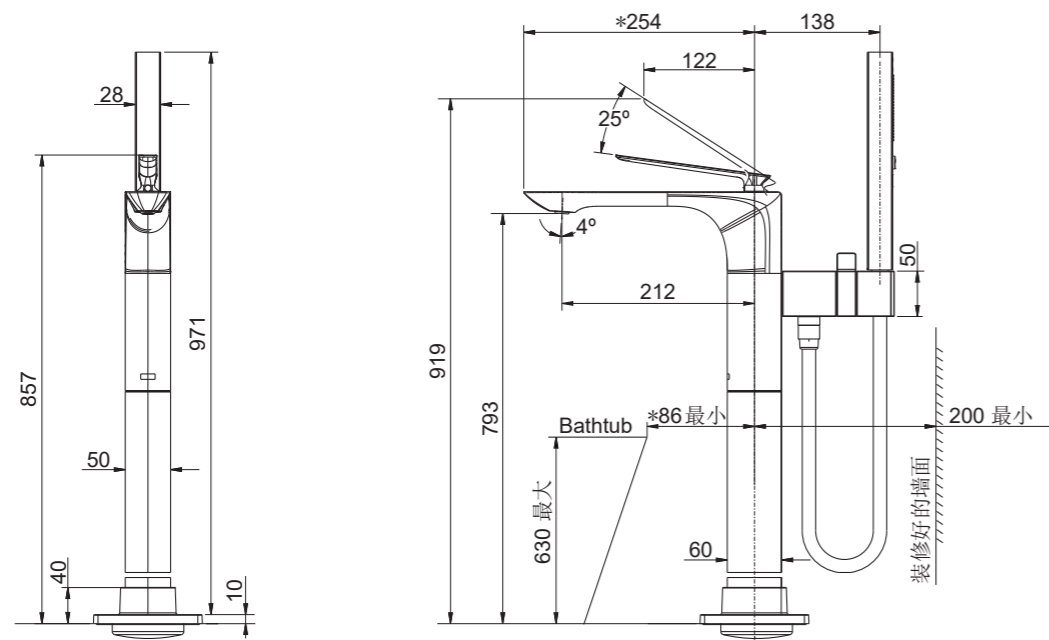

\*请根据图示尺寸选择合适的浴缸  
\* Please purchase the appropriate bathtub according to the dimension.

安装步骤

INSTALLATION


如何安装龙头

关闭水源。用锯条贴地砖表面锯除预埋底座上保护罩(1)露出部分，并取下塞头(2)。从龙头上取下保护套(3)。

上滑装饰盖组件(4)，安装龙头。  
**注意：**安装时请保持龙头垂直装入，防止破坏底部O型圈。

将龙头出水口正对浴缸，用螺钉(5)套上垫片(6)通过法兰盘(7)将龙头固定到底座上。用六角扳手(8)锁紧螺钉。

下滑装饰盖组件使其贴紧地面。

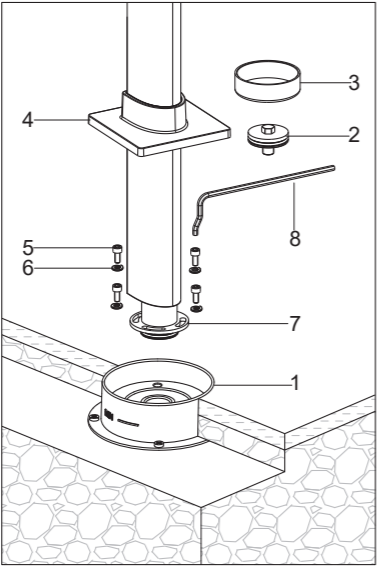

How to Install the Faucet

Shut off water supply. Cut away the extending part of the base protector(1) in accordance with the tile surface. Remove the plug(2) from the base. Remove the protector(3) from the faucet.

Slide up the escutcheon kit(4). Install the faucet. **NOTE:** Keep the faucet vertical to base, to avoid damaging the O-rings on the bottom.


Keep the spout pointing to tub. Fix the faucet to the base with the screws(5) and washers(6) through the flange(7). Tighten the screws with hex wrench(8).

Slide down the escutcheon kit until it is against the finished floor.

如何安装手持花洒

根据需要，将限流器(9)装入手持花洒(10)进水口。将垫片(11)装进软管(12)，用软管连接接头(13)和手持花洒。锁紧衔接螺母。

将手持花洒挂在龙头托架(14)上。

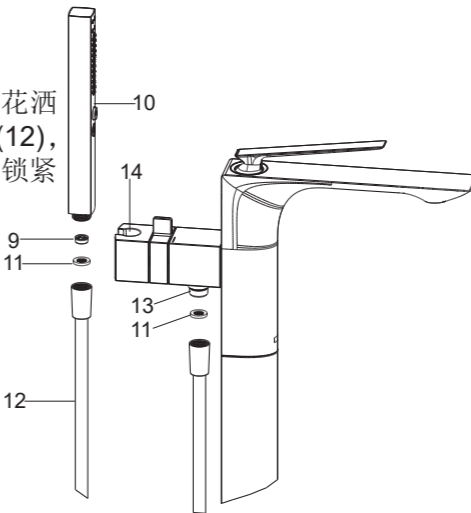

How to Install the Handshower

If needed, install the regulator(9) into the handshower(10). Put the washers(11) into the hose(12). Connect hose to the connector(13) and handshower. Tighten all the connections.

Hang the handshower on the bracket(14) of the faucet.


安装结果检查

INSTALLATION CHECKOUT

检查并确保所有衔接螺母都已拧紧，确保把手在关闭位置。

用工具(15)拆下起泡器(16)。并卸下手持花洒(10)。

打开主供水源，检查渗漏。打开冷热水阀，使水流过出水嘴，去除杂物，冲洗起泡器。切换到手持花洒，去除杂物，清洗垫片(11)，关闭阀。重新装回起泡器。

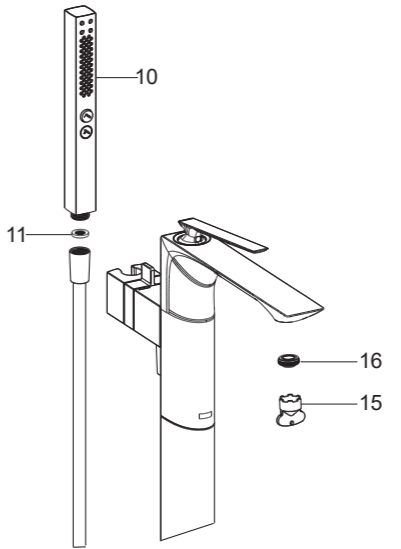

Ensure that all connections are tight. Ensure that the handle is in the off position.

Uninstall the aerator(16) with tool(15). Uninstall the handshower(10).

Turn on the main water supply and check for leaks. Open valve and run water through the spout to remove any debris. Remove any debris from the aerator. Switch to handshower and remove debris from washer(11). Turn off the valve. Reinstall the aerator.

如何维护保养手持花洒

喷孔杂质或结垢会导致水流变形，流量变小。打开水源，用力按压或摩擦橡胶喷孔，去除杂质或水垢



How to Maintain Handshower

Any debris or mineral build-up may cause the flow stream distorted or reduce the flow rate. To remove the debris or mineral build-up, run water through the handshower, firmly press or rub your finger back and forth across the rubber nozzles.

清洗说明

CLEANING INSTRUCTIONS

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用时科勒牌的水龙头及其配件上。

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.