

安装说明

梳洗脸盆龙头

记录您的型号：

Record your model number: _____

English, page 18

KOHLER®

1627231-T2-B

感谢您选择科勒


需要帮助？ 请联系我们的客户服务中心。

- 中国大陆：+(86) 800-820-2628, +(86) 400-820-2628
- 中国香港、中国澳门、中国台湾：+(852) 3125-7728
- 保养和清洁：kohler.com.cn/support/care-and-cleaning/


质保

本产品支持**科勒®水龙头五年有限担保**，详见包装所附的《合格证》。

所需工具和材料

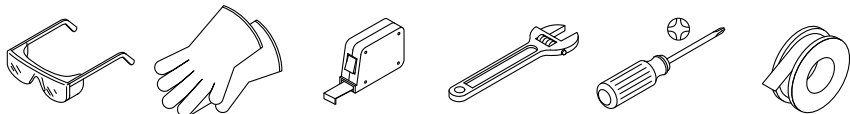

密封胶带

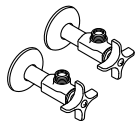

G1/2 供水阀

安装之前



警告： 存在人身伤害或财产损失的风险。开始安装前请先仔细通读说明。



警告： 存在产品损坏和烫伤的风险。龙头出水嘴的最高工作温度和环境温度为 120°F (49°C)。水温过高会导致产品损坏和人体严重烫伤。



小心： 存在产品损坏和人身伤害风险。产品应远离加热器。



小心： 存在淡水污染风险。此水龙头包含反虹吸保护。为防止水污染，请勿移除任何内部组件。

重要信息! 为确保正确安装和操作龙头出水嘴，请在龙头安装台面与镜柜（如有）之间预留至少 15-3/4" (400 mm) 的空间。

重要信息! 严禁使用毛刷或钢丝绒等磨砂材料清洁产品表面。用温和的肥皂和温水来清洁产品表面。许多清洁剂可能含有氨、氯、坐便器清洁剂等，这些化学物质可能会对产品表面造成不良影响，因此不建议使用。

注： 龙头出水嘴的推荐工作压力范围为 0.1 兆帕（1 巴）至 0.5 兆帕（5 巴）。如果压力超过 0.5 兆帕（5 巴），请安装减压器。

注： 打开冷水和热水冲洗以清除供水管道中的杂质。

注： 本龙头可搭配随附的口腔冲洗器、科勒 38503T-NA 洁面仪（需单独购买）或科勒 38504T-NA 清洁喷头（需单独购买）使用。可根据需要将口腔冲洗器更换为科勒 38503T-NA 洁面仪或科勒 38504T-NA 清洁喷头。

本说明书中的所有信息均基于出版时可用的最新产品信息。科勒公司保留随时更改产品特性、包装或供货情况的权利，恕不另行通知。

有关尺寸信息，请参阅产品尺寸图。

请遵守当地管路安装及建筑条例。

关闭供水系统。


对于新台盆安装，请先安装龙头，再安装台盆。

检查软管是否有任何损坏迹象。如有必要，请更换相关零部件。

水嘴加施的水效标识表明本产品的水效等级等性能符合 GB 25501-2019《水嘴水效限定值及水效等级》的要求，是产品符合性的一种标识。

安装龙头需要两个 G1/2 供水阀。

1. 安装水龙头

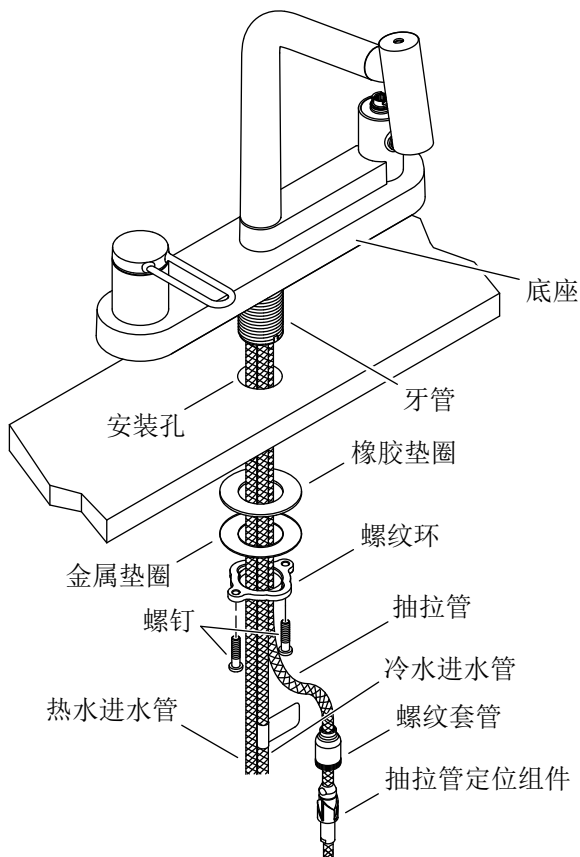

重要信息! 为确保正确安装和操作龙头出水嘴，请在龙头安装台面与镜柜（如有）之间预留至少 15-3/4" (400 mm) 的空间。



注： 安装台面的厚度必须小于 1-9/16" (40 mm)。

注： 确认安装孔直径最小为 1-5/16" (33 mm)，最大为 1-1/2" (38 mm)。

注： 在将出水嘴组件插入安装孔时，应先将抽拉管及预装的抽拉管定位组件和螺纹套管穿过安装孔，再布置进水管。


- ☐ 确认龙头位置和安装孔尺寸。
- ☐ 将已预装抽拉管、冷水进水管（标有“COLD”字样）和热水进水管的出水嘴组件插入安装孔。
- ☐ 将橡胶垫圈、金属垫圈和螺纹环依次穿过软管，直至牙管根部。
- ☐ 将垫圈和螺纹环附于牙管上，不要拧紧。
- ☐ 确认龙头底座水平。
- ☐ 拧紧螺纹环上的螺丝直至固定。

2. 安装抽拉止停机构

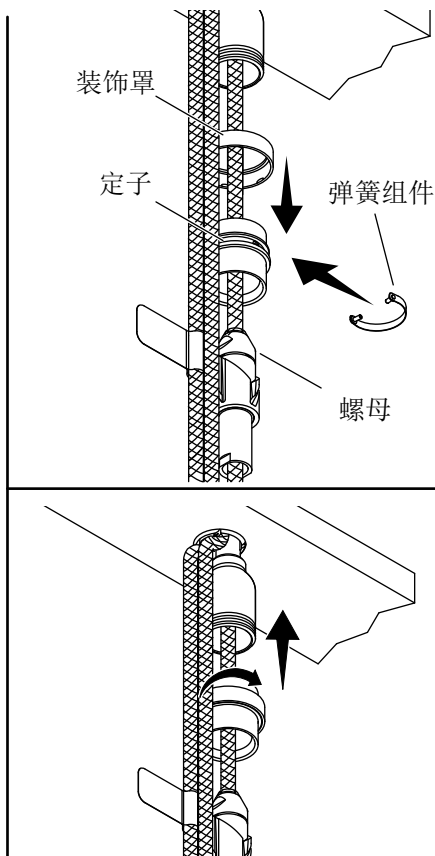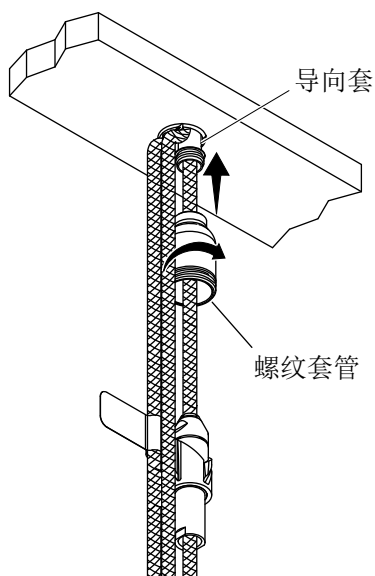

- ☐ 将螺纹套管拧紧到导向套上。
- ☐ 如图示依次将装饰罩（小口端朝上）、定子（螺纹朝上）穿过抽拉管，确保装饰罩和定子位于螺母上方。
- ☐ 将弹簧组件轻轻推入到定子安装孔中。
- ☐ 将装饰罩压紧到定子上，直至听到装饰罩和定子配合到位的声音。
- ☐ 将定子拧紧到螺纹套管上。

3. 连接软管

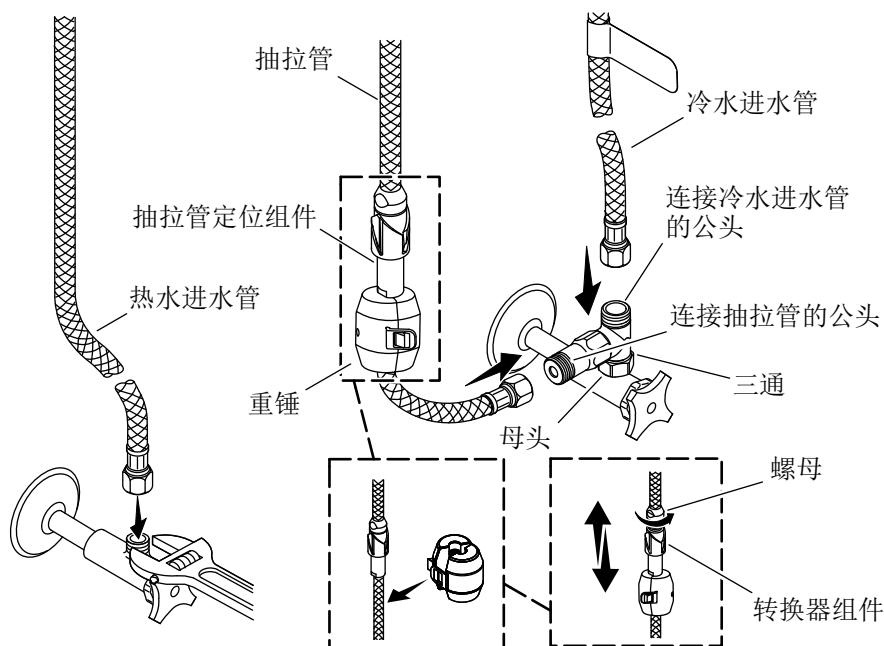

⚠️ 小心： 存在财产或产品受损风险。强力拉扯水管接头可能会导致漏水。

注： 在连接进水管前，打开冷水和热水冲洗以清除 G1/2 供水阀内的任何杂质。


- ☐ 将三通的母头拧紧至冷水供水阀（未随附）。
- ☐ 将冷水进水管拧紧至三通连接冷水进水管的公头。
- ☐ 将抽拉管拧紧至三通连接抽拉管的公头。
- ☐ 将热水进水管拧紧至热水供水阀（未随附）。
- ☐ 使用活动扳手拧紧所有连接处。**不可过度拧紧！**
- ☐ 将重锤置于紧贴于抽拉管定位组件的下方。安装重锤到抽拉管上。

调整抽拉管抽出长度

- ☐ 拧松螺母。
- ☐ 调整螺母和转换器组件的上下位置，使抽拉管达到理想的抽出长度。


- ☐ 拧紧螺母。
- ☐ 调整重锤位置，使其紧贴在抽拉管定位组件的下方。
- ☐ 重新装好重锤。

4. 安装口腔冲洗器

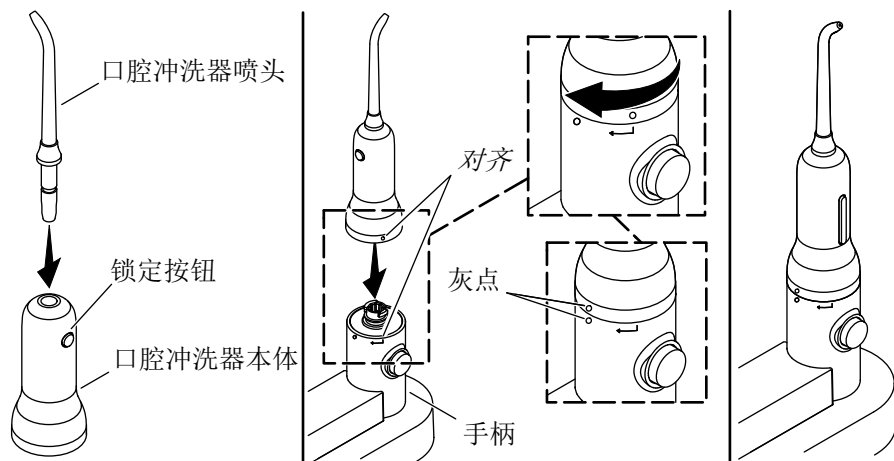

- ☐ 按住口腔冲洗器本体上的锁定按钮。不要松开锁定按钮。
- ☐ 将口腔冲洗器喷头插入口腔冲洗器本体上的孔中。
- ☐ 松开锁定按钮。
- ☐ 将手柄上的箭头末端与口腔冲洗器本体上的灰点对齐。
- ☐ 将口腔冲洗器本体的底端插入手柄的顶端。
- ☐ 转动口腔冲洗器直至紧固。口腔冲洗器安装到位时，手柄与口腔冲洗器本体上的灰点对齐的。
- ☐ 确认供水已打开。
- ☐ 按开/关按钮，为口腔冲洗器放水 1 分钟，以冲洗杂质。
- ☐ 再次按开/关按钮以关闭口腔冲洗器的出水。


5. 安装落水器

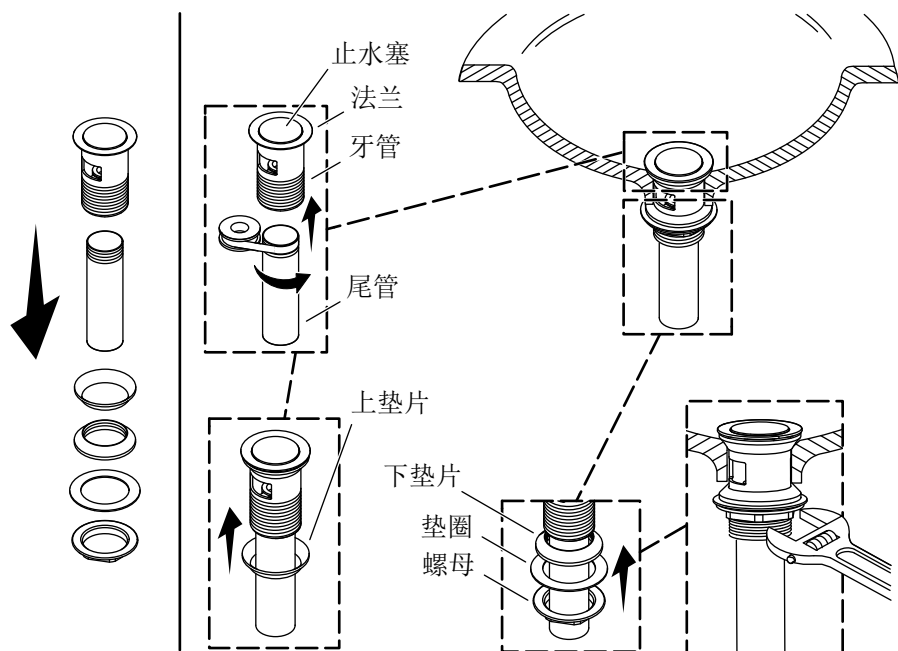

⚠️ 小心： 存在产品受损和漏水的风险。螺母拧紧固定后，请勿调整落水器的位置。试图调整可能导致密封垫圈损坏和漏水。

- ☐ 按图示方式拆卸落水器。
- ☐ 将密封胶带缠绕在尾管上，并将尾管安装到法兰上。
- ☐ 将上垫片重新安装到法兰底部。
- ☐ 从台盆上方将法兰和尾管插入排水孔。
- ☐ 从台盆下方依次将下垫片、垫圈和螺母穿过尾管，并向上推到法兰的牙管处。
- ☐ 拧紧螺母。


6. 完成安装

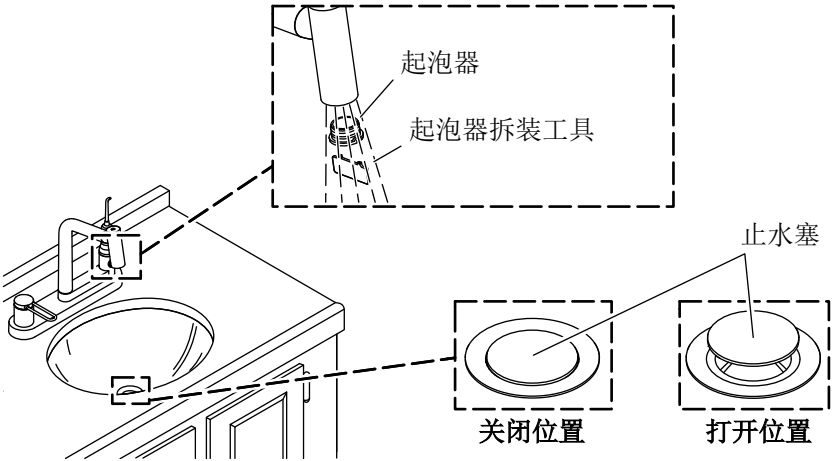

注： 止水塞控制台盆排水。按止水塞可打开或关闭排水。落水器处于打开位置时，允许水流排出。落水器处于关闭位置时，阻止水流排出。

- ☐ 确认所有连接处已紧固。
- ☐ 确认龙头把手和口腔冲洗器上的开/关按钮处于关闭位置。
- ☐ 打开水流，并打开排水。
- ☐ 检查所有连接处有无漏水。根据需要调整。
- ☐ 使用随附的起泡器拆装工具，从出水嘴上卸下起泡器。
- ☐ 为出水嘴放水 1 分钟，以冲洗杂质。
- ☐ 冲洗起泡器以清除任何杂质。
- ☐ 关闭水流。
- ☐ 重新安装起泡器。


把手操作

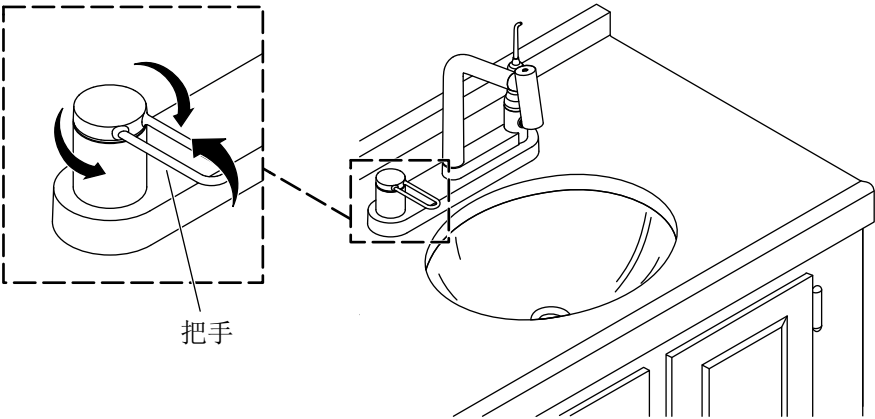

注： 把手可控制冷水和热水。

- ☐ 向上翻提把手以打开水流。
- ☐ 顺时针转动把手以开启热水。
- ☐ 逆时针转动把手以开启冷水。
- ☐ 调节把手以达到所需水温。
- ☐ 将把手向下按回默认位置以关闭水流。

出水嘴操作

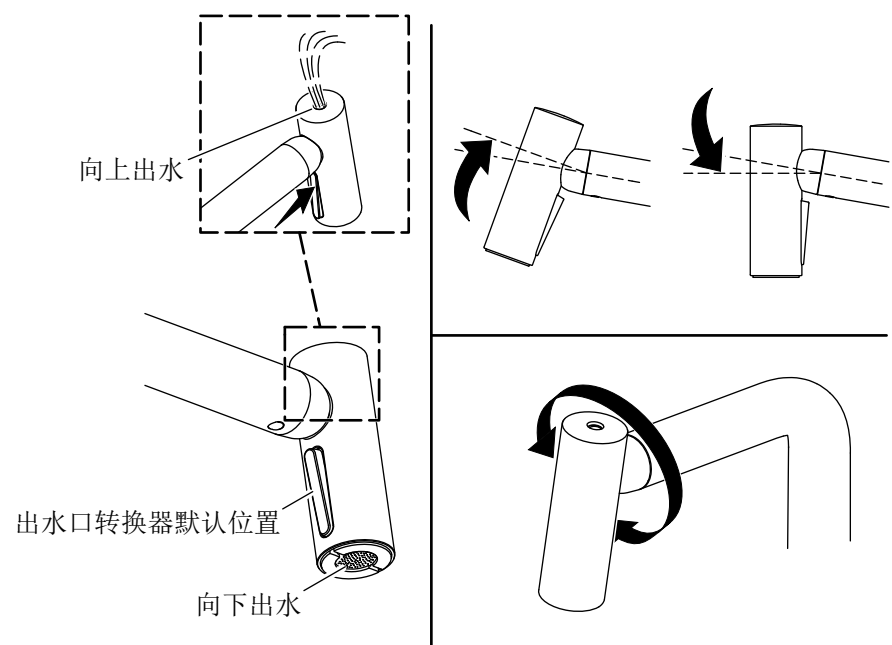


注： 双功能出水嘴支持常规使用的向下出水模式以及用于漱口的向上出水模式。

注： 出水嘴可按图示旋转，以满足多角度使用需求。


- ☐ 当出水口转换器处于默认位置时，水流为向下出水模式。
- ☐ 按出水口转换器的顶端可激活向上出水模式。
- ☐ 水流停止时，出水口转换器自动复位至向下出水默认位置。
- ☐ 可根据需要将出水嘴调节至所需朝向。

口腔冲洗器操作

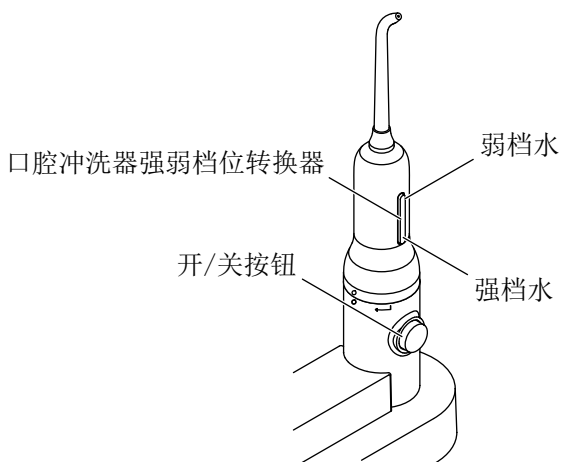

- ☐ 确认供水阀已打开。
- ☐ 按口腔冲洗器上的开/关按钮以打开水流。
- ☐ 在出水时，按口腔冲洗器强弱档位转换器的顶端以开启弱档水。
- ☐ 在出水时，按口腔冲洗器强弱档位转换器的底端以开启强档水。
- ☐ 再次按开/关按钮以关闭水流。


更换口腔冲洗器喷头

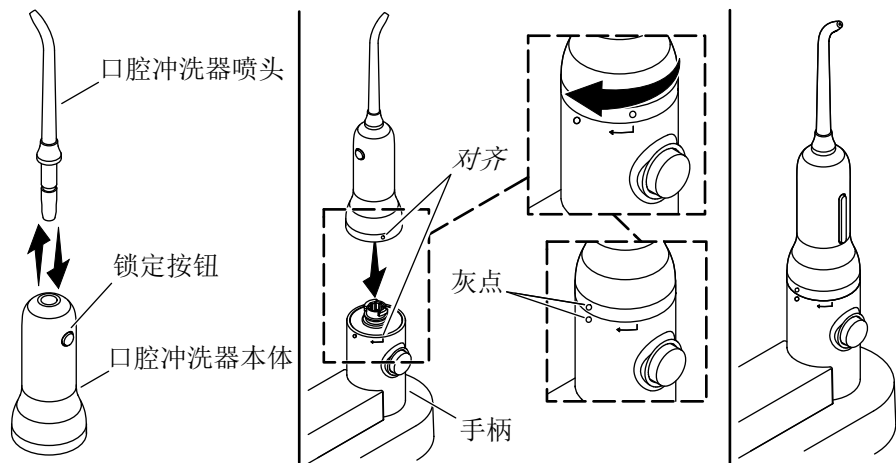

注： 产品随附三个口腔冲洗器喷头。如果需要，按住口腔冲洗器本体上的锁定按钮，取下旧的口腔冲洗器喷头并更换新的口腔冲洗器喷头。

- ☐ 按住口腔冲洗器本体上的锁定按钮，取下旧的口腔冲洗器喷头。
- ☐ 按住锁定按钮，将新的口腔冲洗器喷头插入口腔冲洗器本体上的孔中。
- ☐ 松开锁定按钮。
- ☐ 将手柄上的箭头末端与口腔冲洗器本体上的灰点对齐。
- ☐ 将口腔冲洗器本体的底端插入手柄的顶端。
- ☐ 转动口腔冲洗器直至紧固。口腔冲洗器安装到位时，手柄与口腔冲洗器本体上的灰点对齐的。

清洁/更换止水垫、过滤网和活塞组件

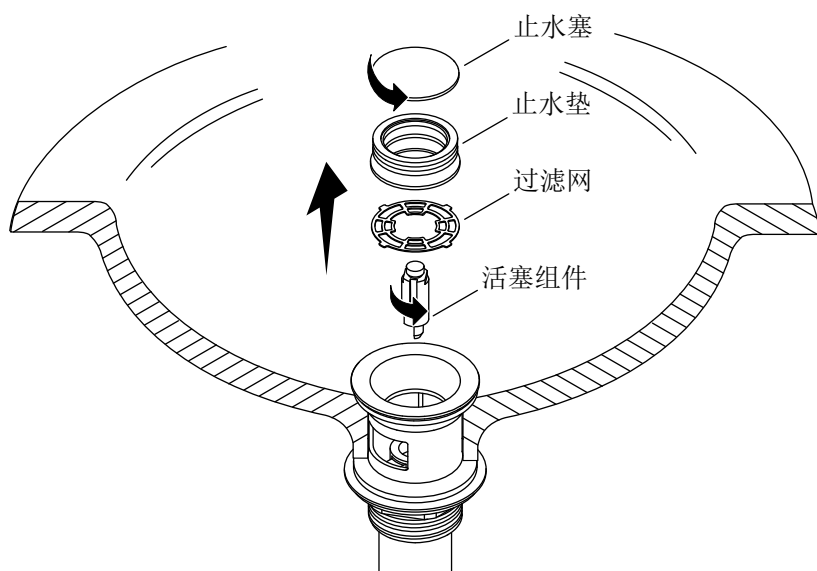

- ☐ 逆时针旋转止水塞，将止水塞从落水器组件上卸下。
- ☐ 取出止水垫和过滤网。
- ☐ 根据需要检查、清洁并更换止水垫与过滤网。
- ☐ 逆时针旋转活塞组件将其从落水器组件上卸下，并根据需要更换。
- ☐ 重新装好落水器组件。

Installation Instructions

Grooming Faucet

Thank You for Choosing KOHLER


Need help? Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- Hong Kong (China), Macau (China), Taiwan (China): +(852) 3125-7728
- Care and cleaning: kohler.com.cn/support/care-and-cleaning/

Warranty

This product is covered under the **Five-Year Limited Warranty for KOHLER® Faucets**, found in the packed Compliance Certification.

Required Tools and Materials

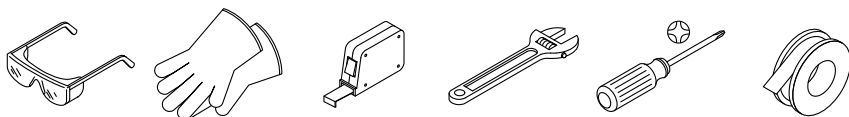

Sealant Tape



G1/2 Supply Stops

Before You Begin



WARNING: Risk of injury or property damage. Read all instructions thoroughly before beginning installation.



WARNING: Risk of product damage and scalding. The maximum working and ambient temperature for the spout is 120°F (49°C). High water temperature can cause damage to the product, and severe burns to the human body.



CAUTION: Risk of product damage and personal injury. Keep the product away from a heater.



CAUTION: Risk of fresh water contamination. This faucet contains back-siphonage protection. To prevent water contamination, do not remove any internal components.

IMPORTANT! To install and operate the spout properly, allow a minimum clearance of 15-3/4" (400 mm) between the mounting surface for the faucet and the mirror cabinet, if any.

IMPORTANT! Never use an abrasive material such as a brush or scouring pad to clean the product surface. Clean the product finish with mild soap and warm water. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the product finish and are not recommended for use.

NOTE: The recommended operating pressure range for the spout is 0.1 MPa (1 bar) to 0.5 MPa (5 bar). If the pressure exceeds 0.5 MPa (5 bar), install a pressure reducer.

NOTE: Flush cold and hot water to remove any debris from the water supply hoses.

NOTE: The faucet can be used with the provided water flosser, the Kohler 38503T-NA face brush (sold separately), or the Kohler 38504T-NA cleaning nozzle (sold separately). Replace the water flosser with the Kohler 38503T-NA face brush, or the Kohler 38504T-NA cleaning nozzle as needed.

All information in the instructions is based upon the latest product information available at the time of publication. Kohler Co. reserves the right to make changes to product characteristics, packaging, or availability at any time without notice.

Refer to the Roughing-In Sheet for dimensional information.

Follow all local plumbing and building codes.

Turn OFF the water supplies.


For new bathroom sink installation, install the faucet to the bathroom sink before installing the bathroom sink.

Inspect the hoses for any signs of damage. Replace if necessary.

The water efficiency label applied to the faucet indicates that the water efficiency grade and other performance of the product meet the requirements of GB 25501-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Faucets" which is a marking of product conformity.

Two G1/2 supply stops are required for installing the faucet.

1. Install the Faucet

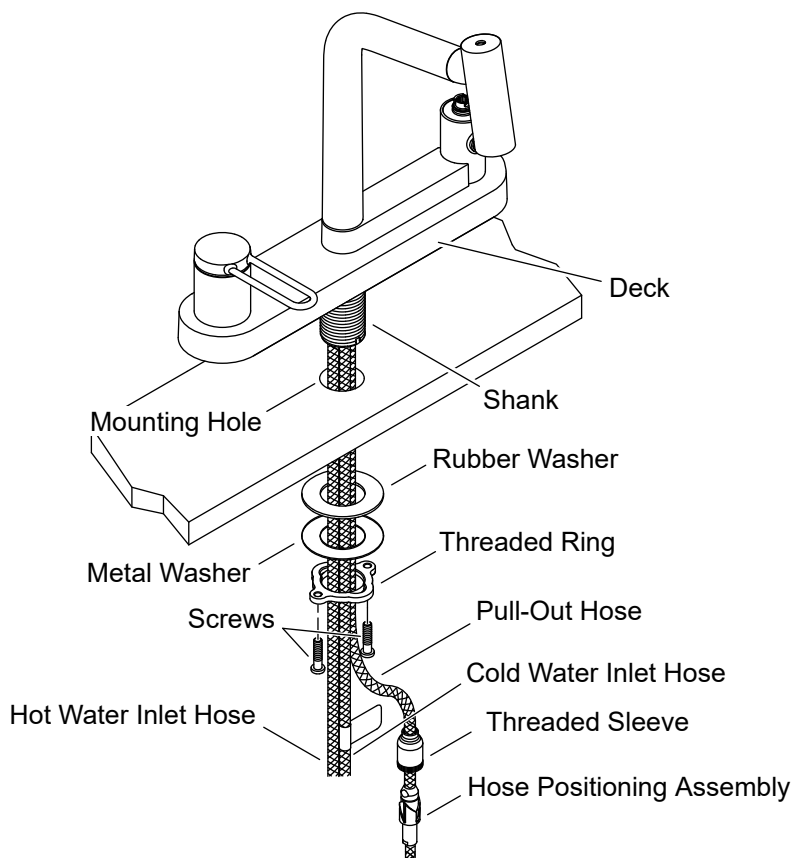

IMPORTANT! To install and operate the spout properly, allow a minimum clearance of 15-3/4" (400 mm) between the mounting surface for the faucet and the mirror cabinet, if any.


NOTE: The mounting surface thickness must be less than 1-9/16" (40 mm).

NOTE: Verify that the mounting hole diameter is 1-5/16" (33 mm) minimum to 1-1/2" (38 mm) maximum.

NOTE: When inserting the spout through the mounting hole, the pull-out hose that comes preinstalled with the hose positioning assembly and threaded sleeve should be routed through the mounting hole before routing the water inlet hoses.


- ☐ Verify the faucet placement and mounting hole dimensions.
- ☐ Insert the spout preinstalled with the pull-out hose, the cold water inlet hose (labeled "COLD"), and the hot water inlet hose through the mounting hole.
- ☐ Slide the rubber washer, metal washer, then threaded ring over the hoses and onto the shank.
- ☐ Loosely secure the spout with the washers and threaded ring.
- ☐ Verify that the faucet deck is level.
- ☐ Tighten the screws on the threaded ring to secure.

2. Install the Docking Mechanism

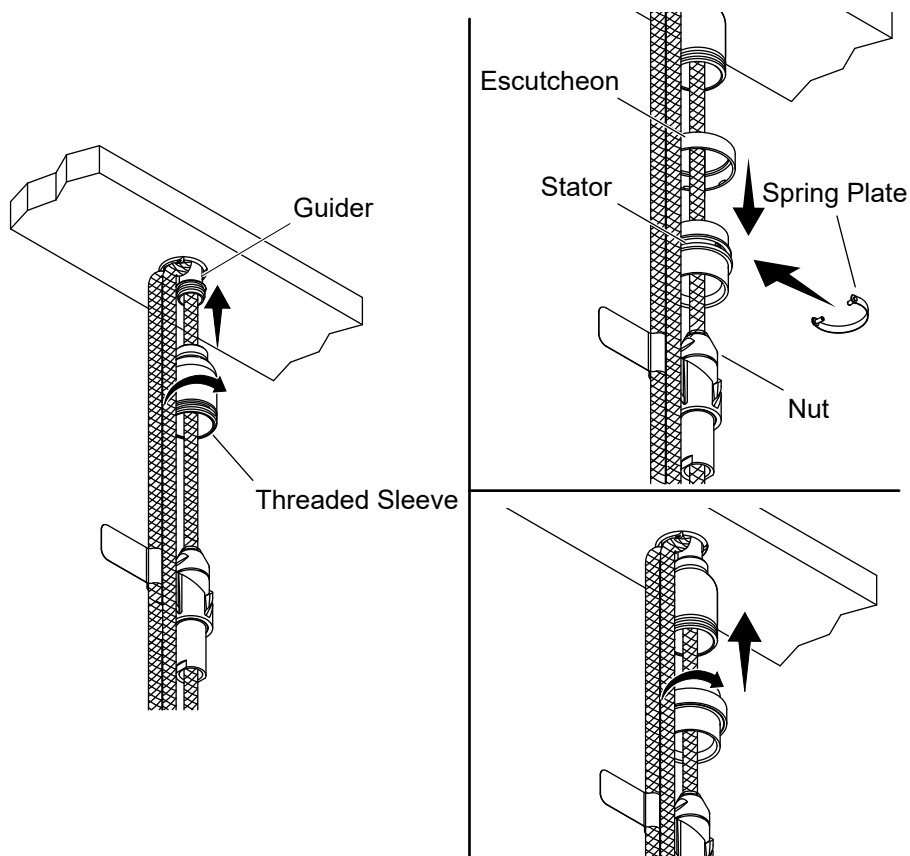

- ☐ Thread the threaded sleeve onto the guider.
- ☐ Slide the escutcheon (tapered side up), and stator (threaded side up) over the nut on the pull-out hose, as shown.
- ☐ Gently insert the spring plate into the stator.
- ☐ Press the escutcheon onto the stator until the escutcheon clicks into place.
- ☐ Thread the stator onto the threaded sleeve.

3. Connect the Hoses

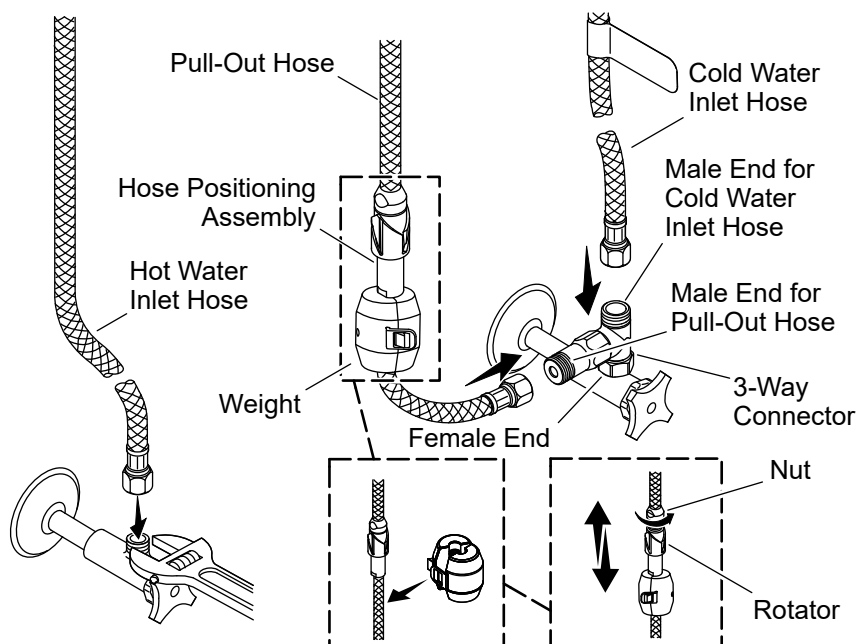

CAUTION: Risk of property or product damage. Pushing or pulling on the water connection may cause water leakage.


NOTE: Flush both cold and hot water lines to remove any debris from the G1/2 supply stops before connecting the water inlet hoses.

- ☐ Thread the female end of the 3-way connector onto the cold water supply stop (not provided).
- ☐ Thread the cold water inlet hose onto the male end for cold water inlet hose of the 3-way connector.
- ☐ Thread the pull-out hose onto the male end for pull-out hose of the 3-way connector.
- ☐ Thread the hot water inlet hose onto the hot water supply stop (not provided).
- ☐ Tighten all the connections using an adjustable wrench. **Do not overtighten!**
- ☐ Position the weight immediately under the hose positioning assembly. Install the weight onto the pull-out hose.

Adjust the Pull-Out Length for the Pull-Out Hose


- ☐ Loosen the nut.
- ☐ Position the nut and rotator up or down as needed to achieve the desired pull-out length.
- ☐ Tighten the nut.
- ☐ Reposition the weight.
- ☐ Reinstall the weight.

4. Install the Water Flosser

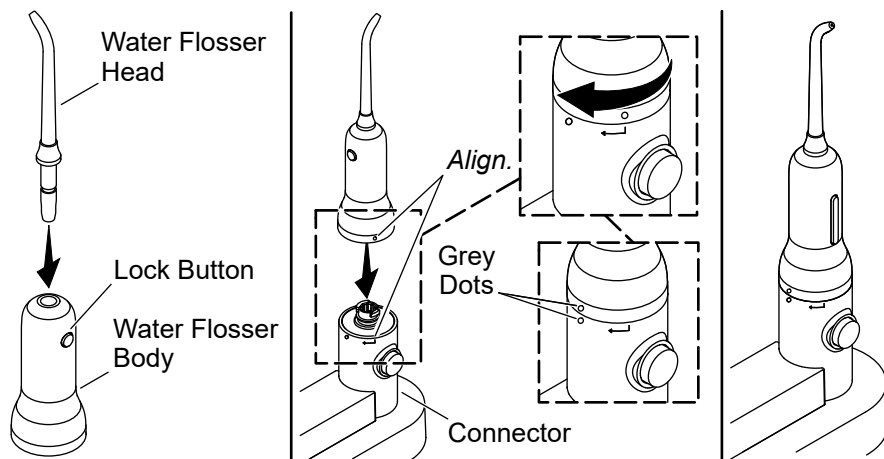

- ☐ Press and hold the lock button on the water flosser body. Do not release the lock button.
- ☐ Insert the water flosser head into the hole on the water flosser body.
- ☐ Release the lock button.
- ☐ Align the arrow end on the connector with the grey dot on the water flosser body.
- ☐ Insert the bottom end of the water flosser body into the top end of the connector.
- ☐ Turn the water flosser to secure into place. The grey dots on the connector and the water flosser body should be aligned when the water flosser is installed.
- ☐ Verify that the water supplies are turned ON.
- ☐ Press the ON/OFF button to run water through the connector for 1 minute to flush any debris.
- ☐ Press the ON/OFF button again to turn OFF the water.


5. Install the Drain

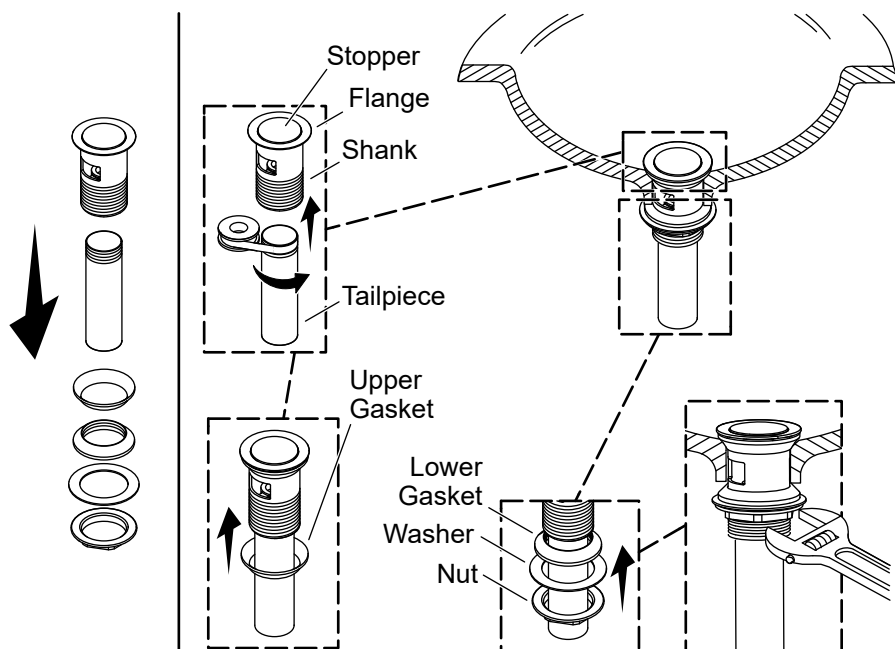

CAUTION: Risk of product damage and water leakage. Do not adjust the drain location once the nut has been tightened to secure the drain. Trying to do so may result in damaged gaskets and water leakage.

- ☐ Disassemble the drain as shown.
- ☐ Apply sealant tape to the tailpiece and install the tailpiece onto the flange.
- ☐ Reinstall the upper gasket onto the underside of the flange.
- ☐ From above the bathroom sink, insert the flange and tailpiece through the drain hole.
- ☐ From under the bathroom sink, slide the lower gasket, washer, and nut over the tailpiece and up to the shank of the flange.
- ☐ Tighten the nut.


6. Complete the Installation

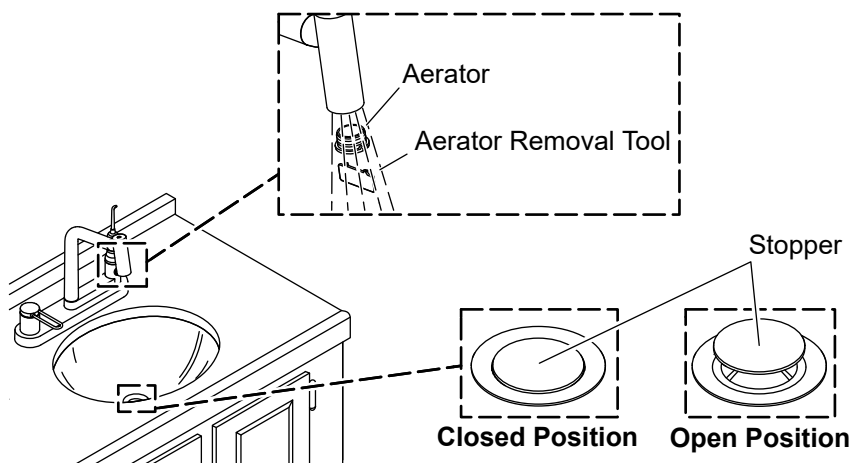

NOTE: The stopper controls water drainage from the bathroom sink. Push the stopper to open or close the drain. When in the open position, the drain allows water to flow out. When in the closed position, the drain prevents water from draining.

- ☐ Verify that all connections are tight.
- ☐ Verify that the handle and the ON/OFF button on the water flosser are in the OFF position.
- ☐ Turn ON the water supplies and open the drain.
- ☐ Check all connections for leaks. Adjust as needed.
- ☐ Using the provided aerator removal tool, uninstall the aerator from the spout.
- ☐ Run water through the spout for 1 minute to flush any debris.
- ☐ Rinse the aerator to remove any debris.
- ☐ Turn OFF the water supplies
- ☐ Reinstall the aerator.


Handle Operation

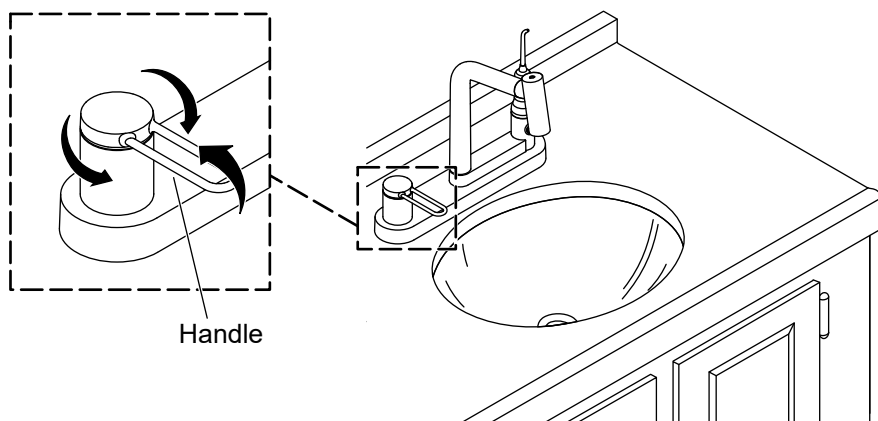

NOTE: The handle controls both cold water and hot water.

- ☐ Pull the handle upward to start the water flow.
- ☐ Turn the handle clockwise for hot water.
- ☐ Turn the handle counterclockwise for cold water.
- ☐ Adjust the handle to set the desired water temperature.
- ☐ Push the handle downward to the default position to turn OFF the water.

Spout Operation

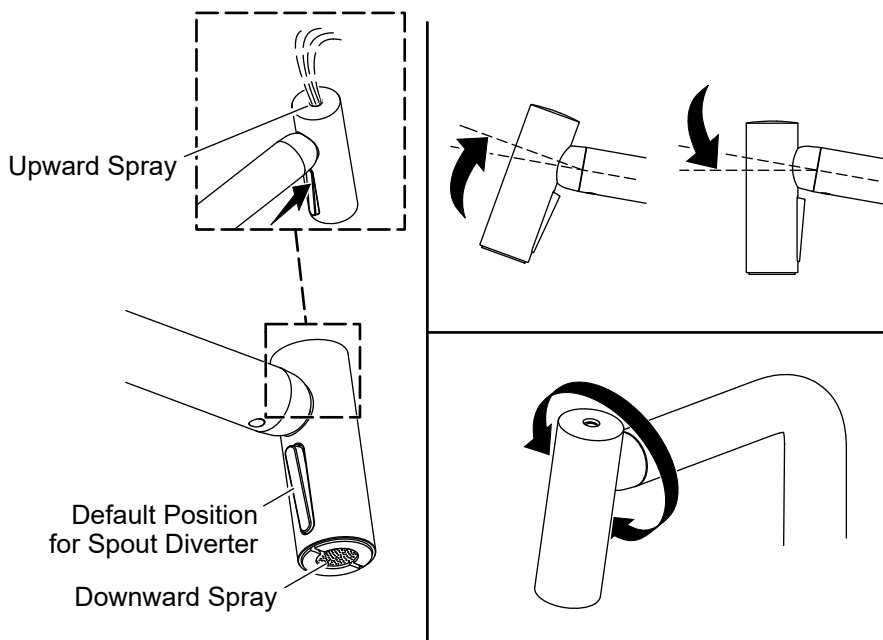


NOTE: The dual-function spout supports both downward spray for regular use and upward spray for rinsing your mouth.

NOTE: The spout can be rotated as shown to meet the needs of multi-angle use.


- ☐ When the spout diverter is in the default position, the water flows as a downward spray.
- ☐ Press the top end of the spout diverter to activate the upward spray.
- ☐ The spout diverter resets to the default downward spray position when the water flow stops.
- ☐ Adjust the spout to the desired orientation as needed.

Water Flosser Operation

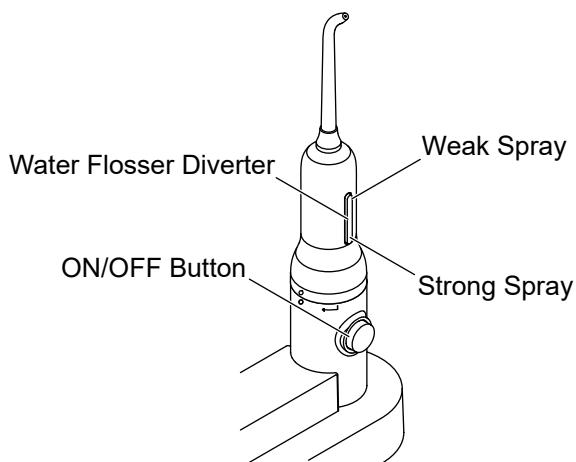

- ☐ Turn ON the water supplies.
- ☐ Press the ON/OFF button on the water flosser to start the water flow.
- ☐ When the water is running, press the top end of the water flosser diverter for weak spray.
- ☐ When the water is running, press the bottom end of the water flosser diverter for strong spray.
- ☐ Press the ON/OFF button again to turn OFF the water.


Replace the Water Flosser Head

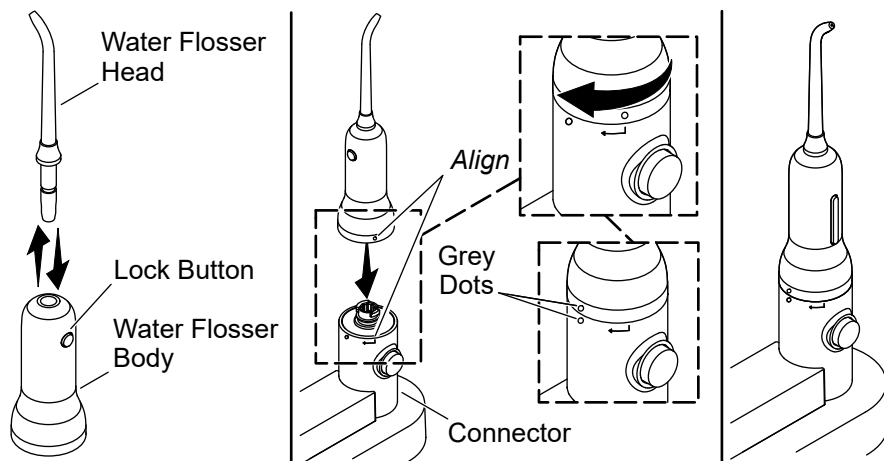

NOTE: Three water flosser heads are provided with the product. If needed, press and hold the lock button on the water flosser body to remove the old water flosser head and replace with a new water flosser head.

- ☐ Press and hold the lock button on the water flosser body to remove the old water flosser head.
- ☐ Press and hold the lock button to insert the new water flosser head into the hole on the water flosser body.
- ☐ Release the lock button.
- ☐ Align the arrow end on the connector with the grey dot on the water flosser body.
- ☐ Insert the bottom end of the water flosser body into the top end of the connector.
- ☐ Turn the water flosser to secure into place. The grey dots on the connector and the water flosser body should be aligned when the water flosser is installed.

Clean / Replace the Sealing Collar, Screen Washer, and Piston Kit

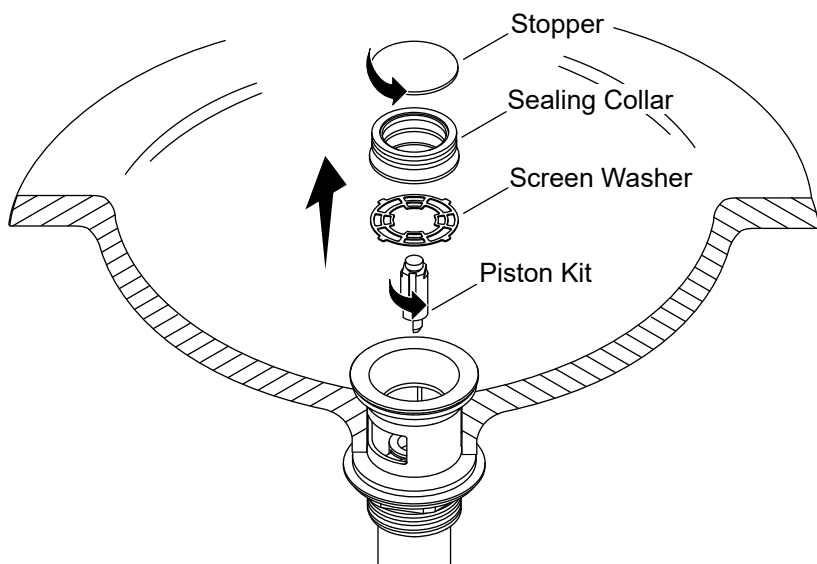

- ☐ Rotate the stopper counterclockwise to separate from the drain assembly.
- ☐ Remove the sealing collar and screen washer.
- ☐ Inspect, clean, and replace the sealing collar and screen washer as needed.
- ☐ Rotate the piston kit counterclockwise and lift from the drain assembly. Replace the piston kit as needed.
- ☐ Reassemble the drain.

kohler.com.cn

THE BOLD LOOK
OF **KOHLER**®

©2026 Kohler Co.



1627231-T2

1627231-T2-B